



# BMW (CIC) WIRING DIAGRAM LDS-CIC-MINI

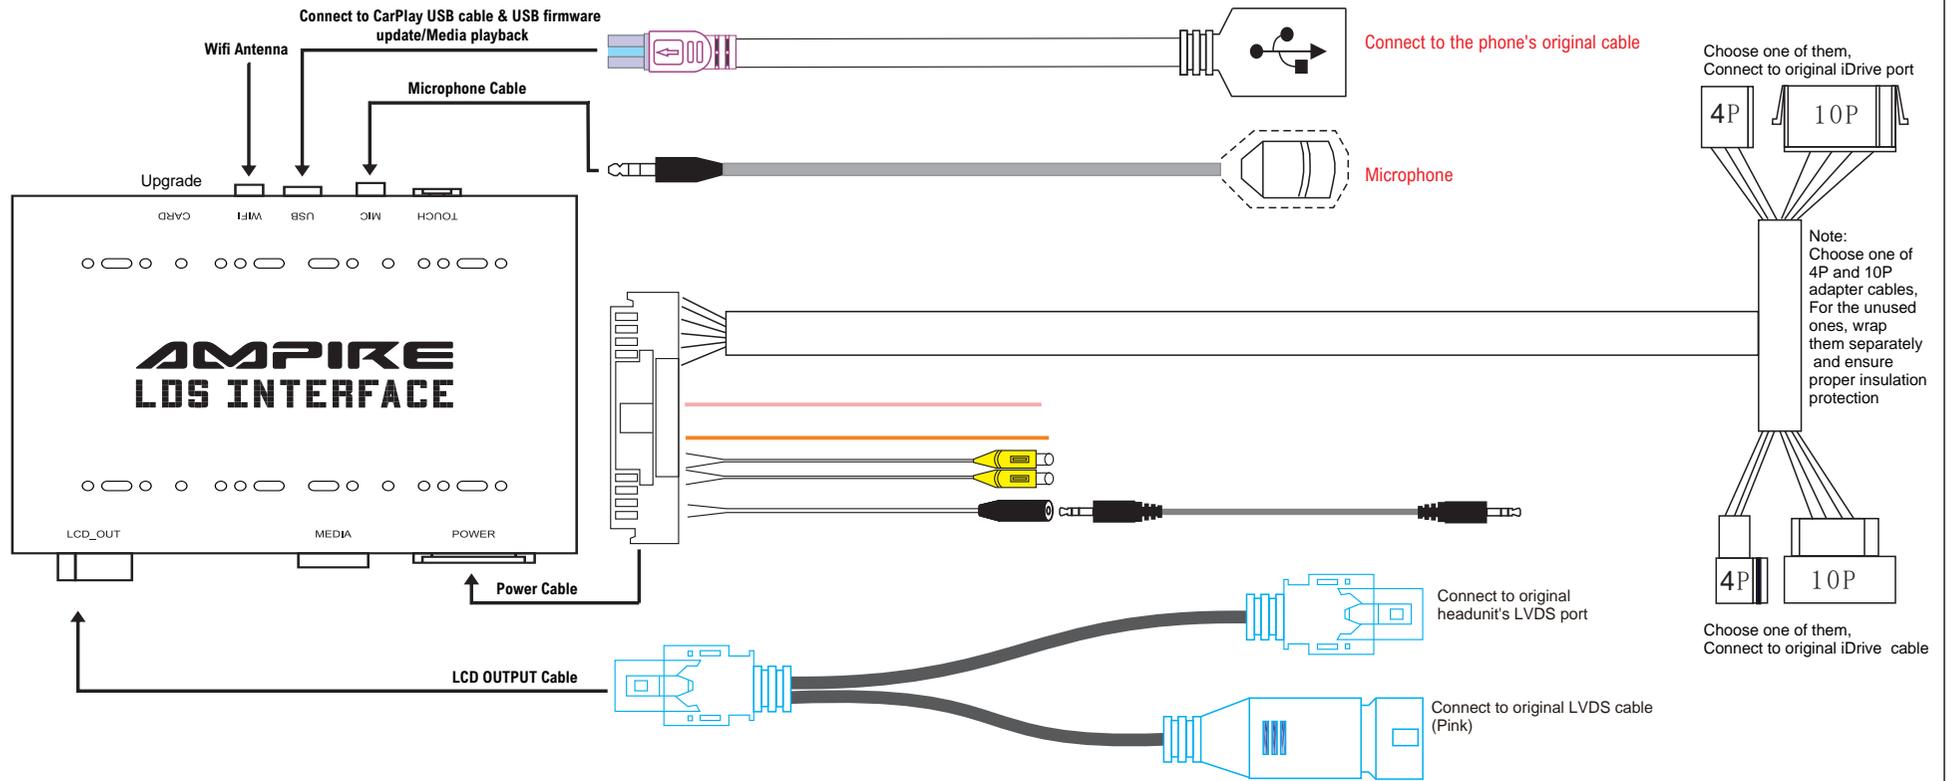

## DIP SWITCH SETTING

(After changing the dip code, press "reset" or power-on again)

Pin123	OFF	BMW (F series) 10.25", 8.8"
Pin13	ON	BMW (E90 92 series) 10.25", 8.8"
Pin23	ON	BMW (MINI) 6.5"
Pin123	ON	BMW (MINI) 6.5" with special screen parameters
Pin1	ON	BMW 6.5"
Pin2	ON	BMW 6.5" with special screen parameters
Pin3	ON	BMW (E70 series) 10.25", 8.8"
Pin4	OFF/ON	NG/NG
Pin5	OFF/ON	NG/NG
Pin6	OFF/ON	NG/NG
Pin7	OFF/ON	NG/NG
Pin8	OFF/ON	NG/NG

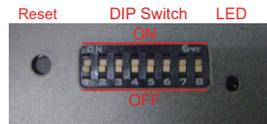

**Remark:**  
Pls keep in the original AUX interface when switch to CarPlay interface.



Long press MENU or BACK to switch CarPlay, long press again to exit CarPlay;  
Short Press MENU to activate "Siri";  
iDrive Knob to control up/down/left/right/ok.