


# BenZ (NTG 3.5) WIRING DIAGRAM--LDS-NTG35-MINI

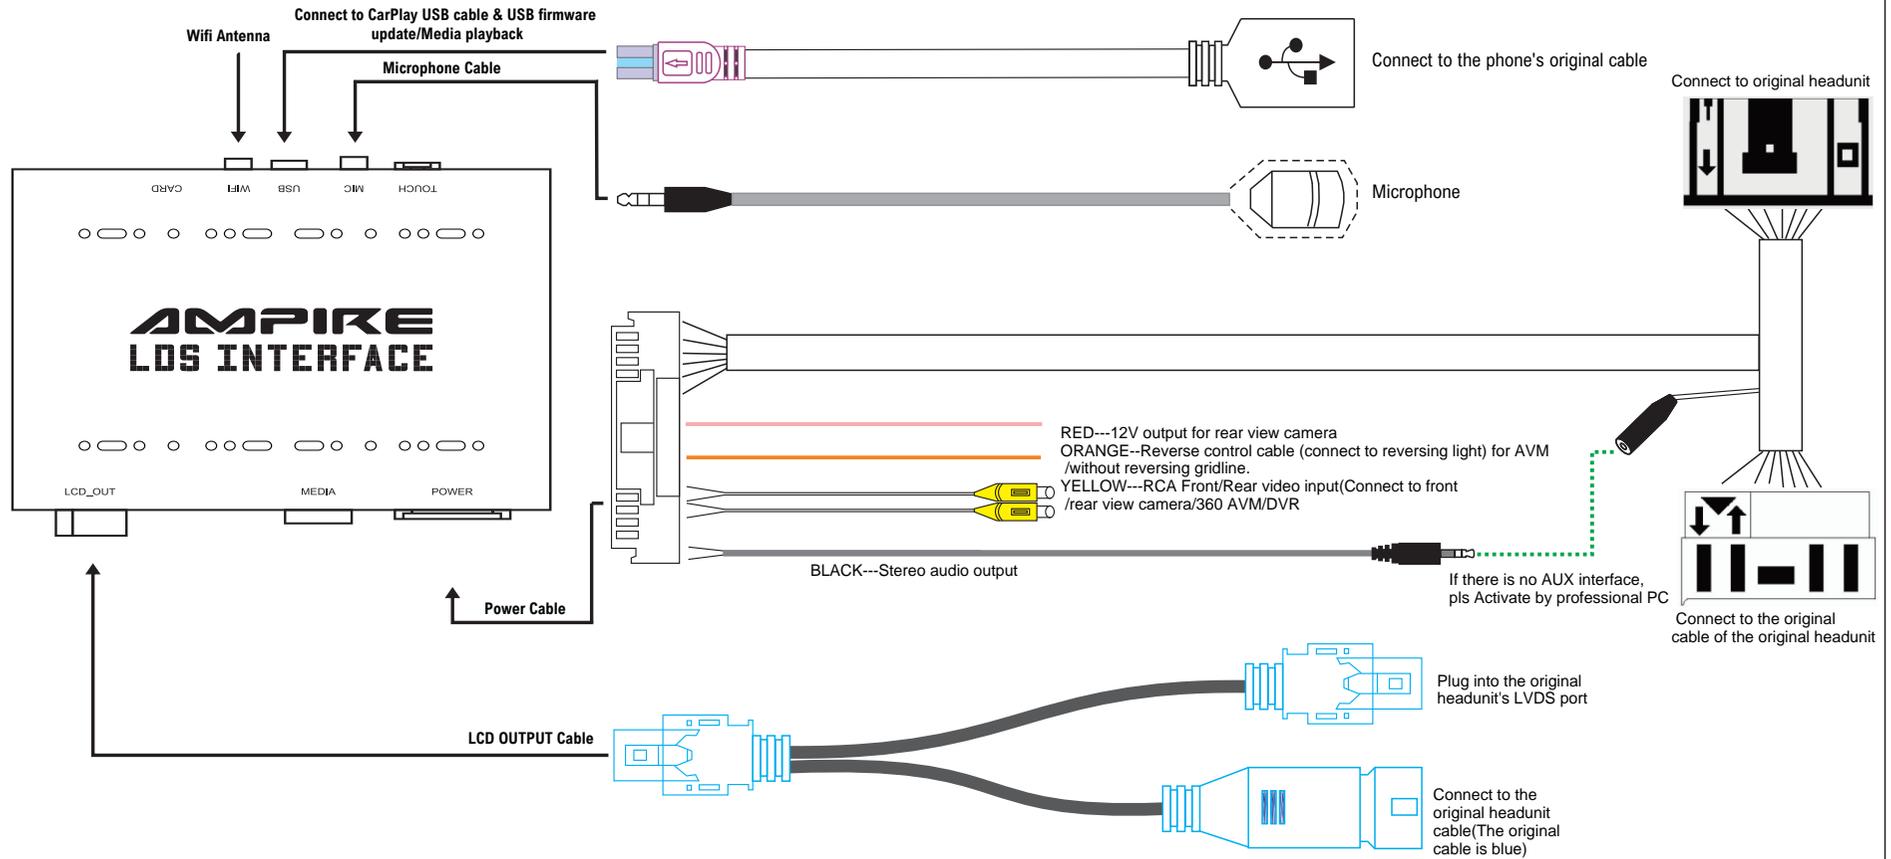


## DIP SWITCH SETTING

(After changing the dip code,press "reset"or power-on again)

DIP S/W	Status	Description
PI N1	OFF / ON	8inch (Fixed Angle) / 8 inch(Adjustable Angle)
PI N2	OFF / ON	NG/8 inch(another type Adjustable Angle)
PI N3	OFF / ON	NG/NG
PI N4	OFF / ON	NG/NG
PI N5	OFF / ON	NG/NG
PI N6	OFF / ON	NG/NG
PI N7	OFF / ON	NG/NG
PI N8	OFF / ON	NG/NG

**REMARK:**Please keep in the AUX interface when switch the CarPlay interface

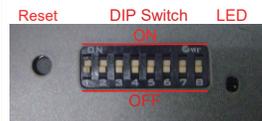

- 1) Long press and hold "BACK"button to switch MENU,short press"BACK" button again,exit MENU.
- 2)Short press "TEL" button to open "Siri".
- 3) Knob to control up/down/right/left/ok