

Video inserter HDV-IG1

Compatible with
Ineos Grenadier with 12.3inch central control system



Example

Product features

- 1 x CVBS/AHD input for rear-view camera
- 1 x CVBS/AHD input for front camera
- 2 x CVBS/AHD input for side cameras or additional after-market video-sources (e.g. USB devices, DVB-T2 tuner, etc.)
- All inputs are compatible with , NTSC and PAL
Supported AHD resolutions 720p NTSC (30Hz), 720p PAL (25Hz), 960p NTSC (30Hz), 960p PAL (25Hz), 1080p NTSC (30Hz), 1080p PAL (25Hz)
- **HDV-IG1 only:** 1 HDMI input for HD rear-view camera or other HDMI source (e.g. iOS/Android device, laptop, streaming stick, DVB-T2 tuner, etc.)
Supported HDMI resolutions (720p NTSC (60Hz), 720p PAL (50Hz), 1080p NTSC (60Hz), 1080p PAL (50Hz)
- **HDV-IG1 only:** Analogue audio output for the HDMI source
- Automatic switchover to rear-view camera input while reverse gear is engaged
- Automatic front camera switching while reverse gear is engaged for 5, 10, 15 or 20- -second intervals
- Guidelines for the rear-view camera can be activated (not available for all vehicles)
- Adjustable guide lines (fixed or movable) can be activated for the rear-view camera (movable guide lines not available for all vehicles)
- Picture free while driving (ONLY for fed-in video sources)

Attention!
Video signal type of each video source must be set in the OSD menu of the corresponding video input.

Table of contents

1	Before installation	3
1.1	Scope of delivery	3
1.2	Check the interface compatibility with the vehicle and accessories	4
1.3	Boxes and connections - Interface	5
1.4	Settings – 8 dip switch bench (interface functions)	6
1.4.1	Interface video inputs "V1-Left" and "V2 Right" (Dip 1-2)	6
1.4.2	Front camera input "V3 front" (Dip 3)	6
1.4.3	Rear-view camera settings (Dip 4)	7
1.4.4	Connection type of the rear-view camera (Dip 5)	7
1.4.5	HDMI input (Dip 6)	7
1.5	Settings - 2 dip switch bench (monitor definition)	8
1.6	Settings – 4 dip switch bench (CAN bus)	8
2	Installation	9
2.1	Place of connection	9
2.2	Connection schema	10
2.3	Connection – picture signal cable	12
2.4	Connection – cable sets, power supply and CAN bus or analogue og without CAN bus	13
2.4.1	Connection with CAN bus	14
2.4.2	Analogue connection without CAN bus	15
2.5	Power supply outputs	16
2.5.1	Connection and power supply - Video sources Rear-view camera, front camera and 2 side cameras	17
2.5.2	Connection and power supply - Video sources rear-view camera, front camera and 2 video sources	18
2.6	Aftermarket rear-view camera	19
2.6.1	Case 1: Reverse gear signal from CAN bus	19
2.6.2	Case 2: Reverse gear signal from analogue signal	20
2.6.3	Optional: Use of the factory rear-view camera cable	21
2.7	Factory rear-view camera	22
2.8	Aftermarket front camera	23
2.9	Aftermarket side cameras	24
2.9.1	Case 1: Turn signals from CAN bus	24
2.9.2	Case 2: Turn signals from analogue signal	25
2.10	HDMI rear-view camera or other HDMI sources (HDV-IG1 only)	26
2.11	Audio insertion	27
2.12	Connection – video interface and external keypad	27
2.13	OSD menu settings	28
3	Operating the video interface	32
3.1	Optional: Operating the video interface via the "HDA-RC" remote control	32
4	Specifications	33
5	FAQ – Troubleshooting Interface functions – product-specific	33
6	FAQ - Troubleshooting Interface functions - general	34
7	Technical Support	36

Legal notice

The driver must not be distracted, either directly or indirectly, by moving pictures while driving. In most countries/states, this is prohibited by law. We therefore exclude any liability for property damage or personal injury caused directly or indirectly by the installation and operation of this product. In addition to operation when stationary, this product is only intended for displaying static menus (e.g. MP3 menu from USB devices) or pictures from (rear-view) cameras while driving.

Changes/updates to the vehicle software may impair the functionality of the interface. Software updates for our interfaces are provided to customers free of charge for up to one year after purchase of the interface. The interface must be sent in free of charge for the update. Costs for installation and removal will not be reimbursed.

1 Before installation

These instructions must be read before installation. Specialist knowledge is required for installation. The interface must not be installed near sources of moisture or heat.

Before final installation in the vehicle, we recommend a test run after connection to ensure that the vehicle and interface are compatible. Due to production-related changes by the vehicle manufacturer, there is always the possibility of incompatibility.

1.1 Scope of delivery



1.2 Check the interface compatibility with the vehicle and accessories

Requirements

Manufacturer	Compatible vehicles	Compatible systems
Ineos	Grenadier from 12/2022	Central Control System with 12.3inch touchscreen monitor

Limitations

CAN bus compatibility

The CAN bus compatibility of the interface may be restricted for some vehicles, either completely or for individual functions. This may become apparent during installation or at a later date. The interface with all video inputs can be operated with analogue switching signals without connection to the vehicle CAN bus. This eliminates the need for individual additional functions, see chapter 2.4.2 *Analogue connection without CAN bus*.

Video only

Interface does **not insert any audio signals**. To insert audio signals, any existing factory audio AUX input or optional products (e.g. FM modulator) must be used. For a inserted HDMI source, audio is output via an analogue audio output (3.5 mm jack socket).

Factory rear-view camera

Automatic switching to the rear-view camera input only occurs while reverse gear is engaged. Optional accessories are required for different switching times.

Aftermarket front camera

Switching to the front camera occurs automatically after reverse gear has been engaged for 5, 10, 15 or 20 seconds (depending on the OSD menu setting). Manual switching to the front camera is also possible via the external keypad.

Guide lines for rear-view camera


If the vehicle CAN bus is not fully compatible with the interface or if an analogue connection is used, the movable guide lines function cannot be used.

Factory PDC display

When retrofitting a rear-view camera, the factory PDC display is no longer available. The acoustic signals remain.

1.3 Boxes and connections - Interface

The video interface converts video signals from after-market sources into a video signal compatible with the factory head unit. This is inserted into the factory monitor via various switching options. It also reads digital signals from the vehicle CAN bus and converts them for its own functions.

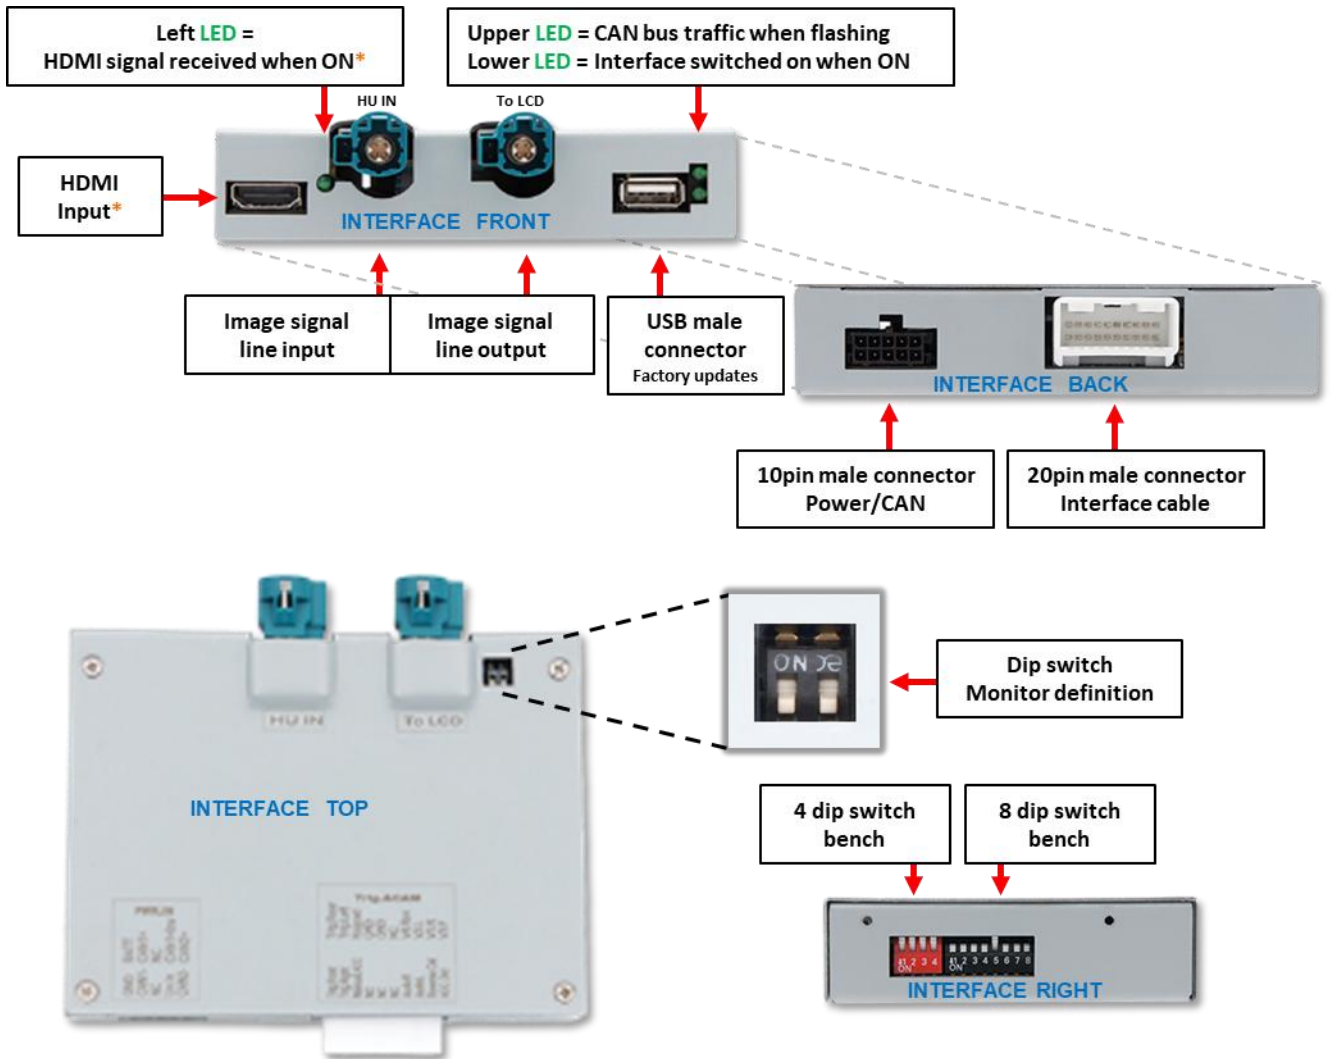

* HDMI input only available with HDV-IG1

1.4 Settings – 8 dip switch bench (interface functions)

Interface box, right side, black



Dip switch position **UP = OFF** and **DOWN = ON**

Dip	Function	ON (down)	OFF (up)
1	Video 1 / V1-Left	activated	deactivated
2	Video 2 / V2-Right	activated	deactivated
3	Front camera / V3-Front	activated*	deactivated
4	Type of rear-view camera (V4 Reverse)	Aftermarket	Factory or none
5	Connection type of the Aftermarket rear-view camera*	HDMI*	V4 Reverse (CVBS/AHD)
6	HDMI input*	Enabled	deactivated
7	No function	-	Set to OFF
8	No function	-	Set to OFF

Power reset interface after each dip change to activate changes!

* Switching to the front camera occurs automatically for 5, 10, 15 or 20 seconds (depending on the OSD menu setting) after reverse gear is engaged.

See following chapters for detailed information about 8dip switch bench.

1.4.1 Interface video inputs "V1-Left" and "V2 Right" (Dip 1-2)

With Dip 1 (Dip 2) = **ON**, the CVBS/AHD input **V1-Left (V2 Right)** is activated for the side camera or other video sources. Only activated video inputs can be accessed – both with automatic and manual switching. It is recommended to activate only inputs that are in use, to avoid accidental switching.

1.4.2 Front camera input "V3 front" (Dip 3)

When Dip 3 = **ON**, the interface switches to the AHD/CVBS front camera input **V3-Front** after reverse gear is engaged. In addition, manual switching to the front camera input is possible from any picture mode via an external keypad (short press).

In the OSD menu settings, the automatic display time of the front camera can be selected between 5, 10, 15 or 20 seconds or switched off. Then another video source could also be connected to instead of a front camera.

1.4.3 Rear-view camera settings (Dip 4)

When Dip 4 = **OFF**, the interface switches to the factory image for the existing factory rear-view camera or factory PDC display as long as reverse gear is engaged.

When Dip 4 = **ON**, the interface switches to its AHD/CVBS rear-view camera input **V4-Reverse** (provided Dip 5 is set to OFF) or the **HDMI** input* (provided Dip 5 and Dip 6 are set to **ON**) when reverse gear is engaged.

Note: **V4-Reverse** remains inactive when Dip 5 = ON and no function is available for an HDMI camera.

1.4.4 Connection type of the rear-view camera (Dip 5)

With Dip 5 = **ON** , the **HDMI** input* is selected as the rear-view camera input. In addition, the **HDMI** input* must be activated with Dip 6 = **ON**.

With Dip 5 = **OFF**, the **V4 -Reverse** input is selected as the rear-view camera input.

Note: Automatic switching to the front camera for the preset time occurs in both cases after reverse gear is engaged.

1.4.5 HDMI input (Dip 6)

With Dip 6 = **ON**, the **HDMI** input* is activated and can be used for various HDMI sources (e.g. rear-view camera or 360° camera system, smartphone, laptop, streaming stick, DVB-T2 tuner, etc.) . For rear-view camera/360° camera system, Dip 5 must also be set to **ON**.

With Dip 6 = **OFF**, the **HDMI** input* is deactivated.

Note: Dips 7 and 8 have no function and must be set to OFF.

*** HDMI input only available with HDV-IG1**

Power reset interface after each dip change to activate changes!

1.5 Settings - 2 dip switch bench (monitor definition)

Interface box, top, black



Please note: Unlike the other switch benches (8 and 4), the dip switch position **UP = ON** and **DOWN = OFF** for the 2 dip switch bench!



Attention!
Be particularly careful when switching the DIP switch with micro tools

Monitor size	Dip 1	Dip 2
All monitor sizes	OFF	OFF

If you experience picture or touch problems, try the other DIP switch settings!


Power reset interface after each dip change to activate changes!

1.6 Settings – 4 dip switch bench (CAN bus)

Interface box, right side, red

Set the DIP switch settings according to the following table.

Dip position **UP = OFF** and **DOWN = ON**

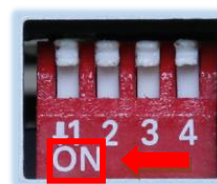

Dip	Function	ON (down)	OFF (up)
1	No function	-	Set to OFF
2	No function	-	Set to OFF
3	No function	-	Set to OFF
4	No function	-	Set to OFF

Power reset interface after each dip change to activate changes!

2 Installation

Switch off the ignition and disconnect the vehicle battery in accordance with the manufacturer's instructions!

If the vehicle battery must not be disconnected according to the manufacturer's specifications, it is usually sufficient to put the vehicle into sleep mode. If this does not work, disconnect the vehicle battery with a resistor cable.

Before final installation, we recommend a test run of the interface with all connected devices to ensure that all parts are compatible. Due to possible changes in the vehicle manufacturer's production at any time, incompatibility can never be ruled out.

As with any installation of retrofit devices, a quiescent current test of all retrofitted devices must be carried out after installation to ensure that the devices switch to standby mode when the vehicle is in sleep mode.


2.1 Place of connection

The video interface is connected to the rear of the head unit. This is located in the driver's footwell below the steering column.




Head unit in the driver's footwell

2.2 Connection schema

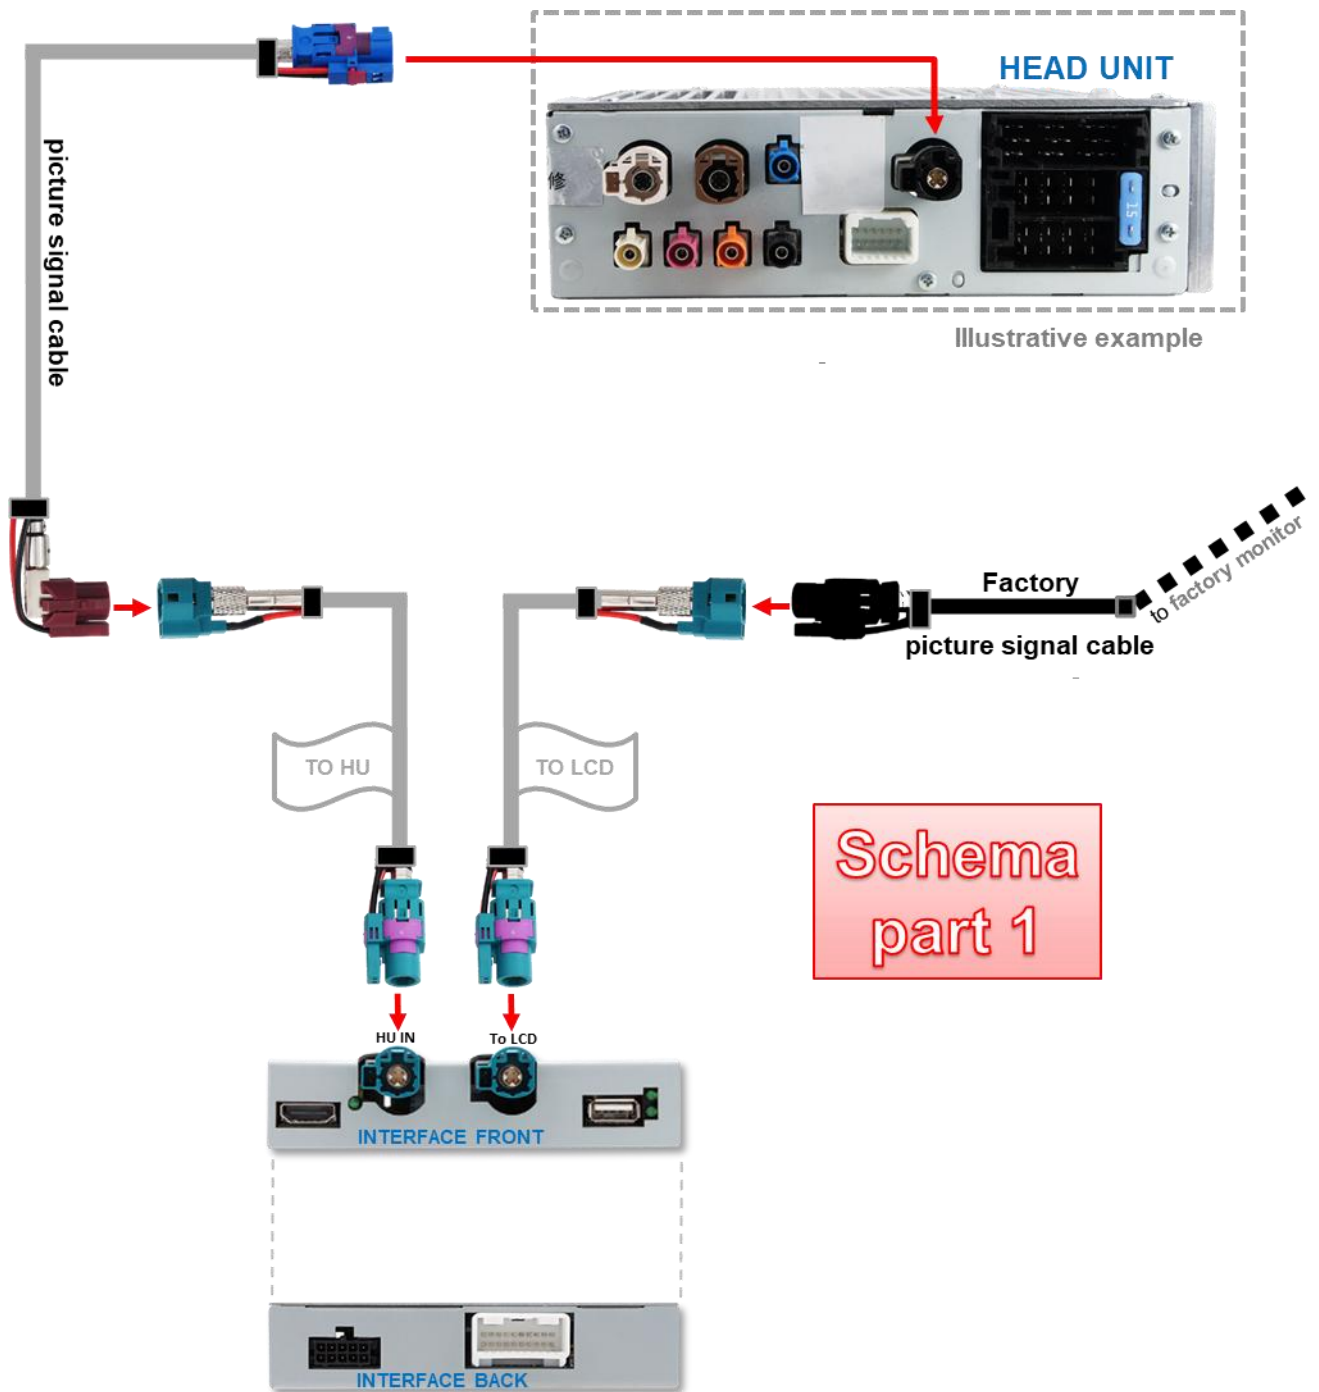




Schema Part 2

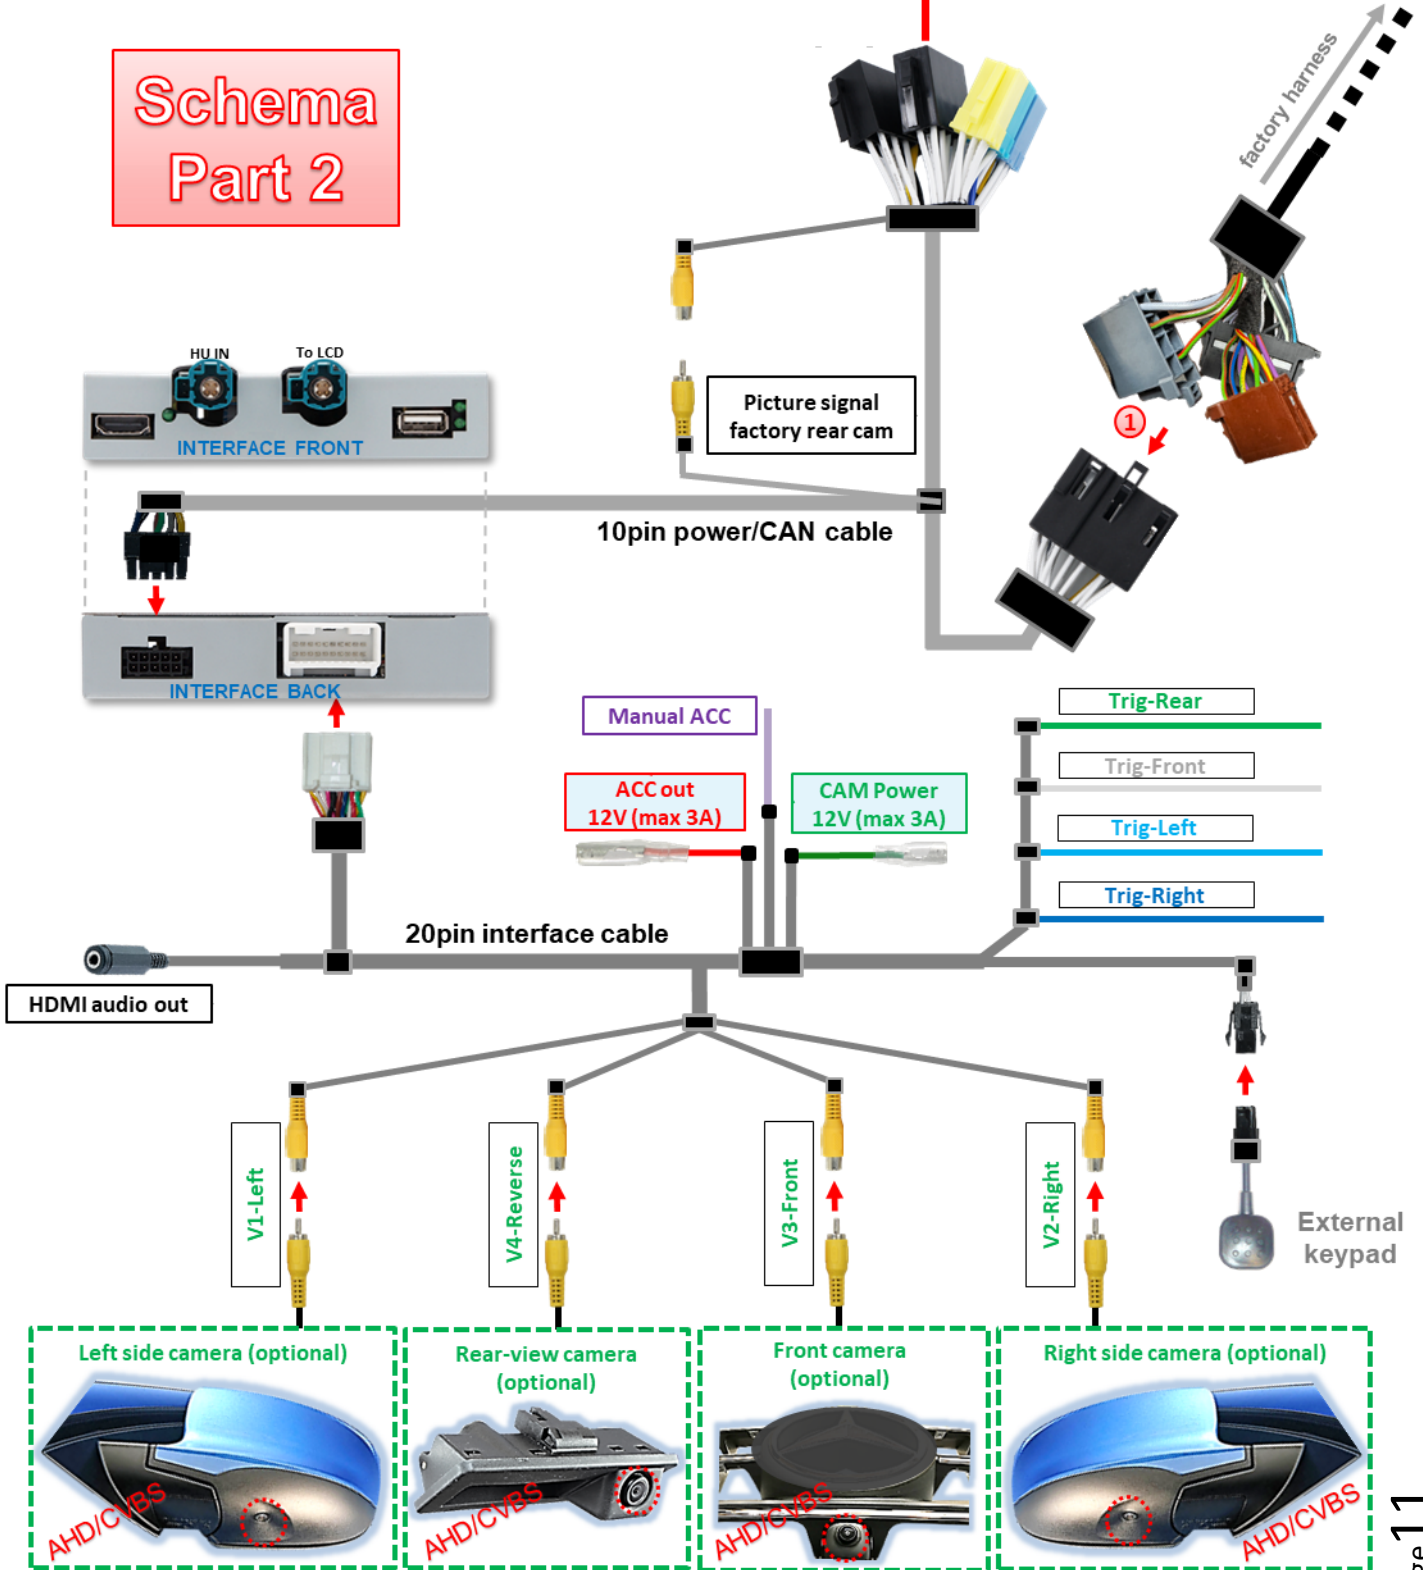

2.3 Connection – picture signal cable

Remove the head unit – this is located in the driver's footwell below the steering column.

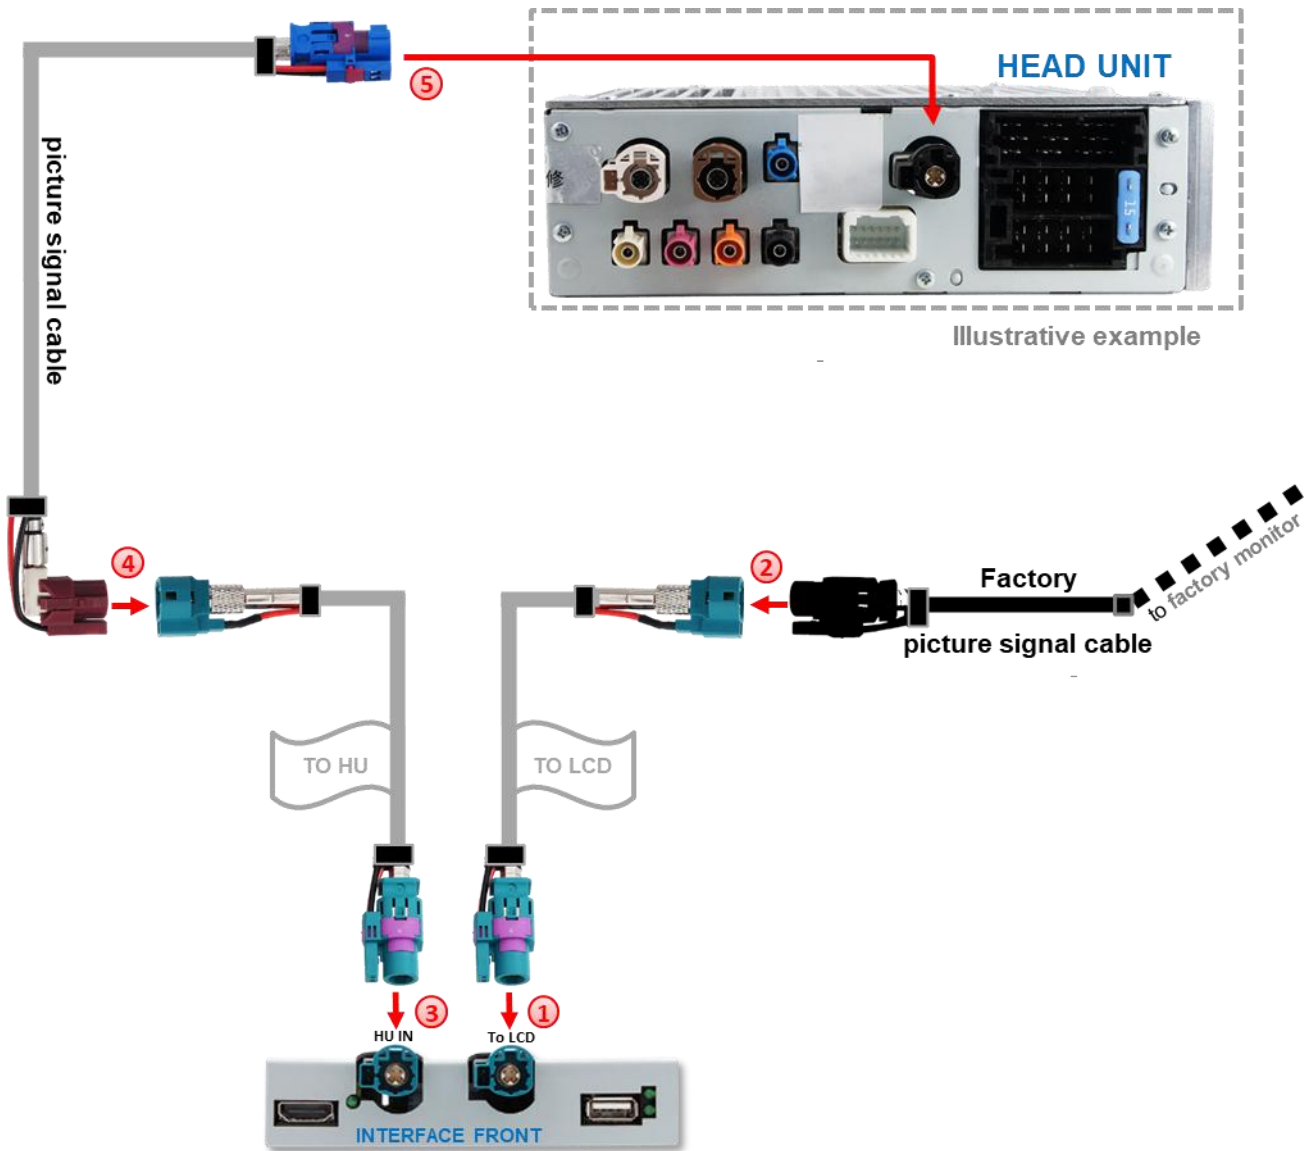

- 1 Connect the **water-blue** HSD+2 female connector of the HSD+2 adapter "TO LCD" to the **water-blue** HSD male connector "TO LCD" of the interface.
- 2 Unplug the **black** HSD +2 female connector of the factory picture signal cable on the rear of the head unit and connect it to the **water-blue** HSD male connector of the HSD+2 adapter "TO LCD".
- 3 Connect the **water-blue** HSD+2 female connector of the HSD+2 adapter "TO HU" to the **water-blue** HSD male connector "TO HU" of the interface.
- 4 Connect the **burgundy** angled HSD+2 female connector of the picture signal cable to the **water-blue** HSD male connector of the HSD+2 adapter "TO HU" of the interface.
- 5 Connect the **blue** non-angled HSD+2 female connector of the picture signal cable to the **black** HSD+2 male connector of the head unit.



Note: Depending on the installation conditions, the supplied picture signal cable may also be mounted twisted with regard to its HSD female connectors. However, the connection may only be made to the head unit!


2.4 Connection – cable sets, power supply and CAN bus or analogue og without CAN bus

The interface can be integrated via CAN bus or operated completely analogue without connection to the CAN bus.

When integrated via CAN bus, the interface is switched on via this bus and R-gear signals and turn signals are usually recognised from this. In some vehicles, movable guide lines can then also be displayed using the CAN bus steering signals.


In exceptional cases, CAN communication is not (fully) compatible. If no interface LED lights up after connecting the **10pin power/CAN cable set** with the ignition switched on, the analogue connection described below must be made. The analogue connection is also possible in order to avoid a possible subsequent CAN bus incompatibility. In this case, the interface must be switched on and switched to its inputs via +12V switch inputs.

The display of movable guide lines for the rear-view camera is not available with an analogue connection.

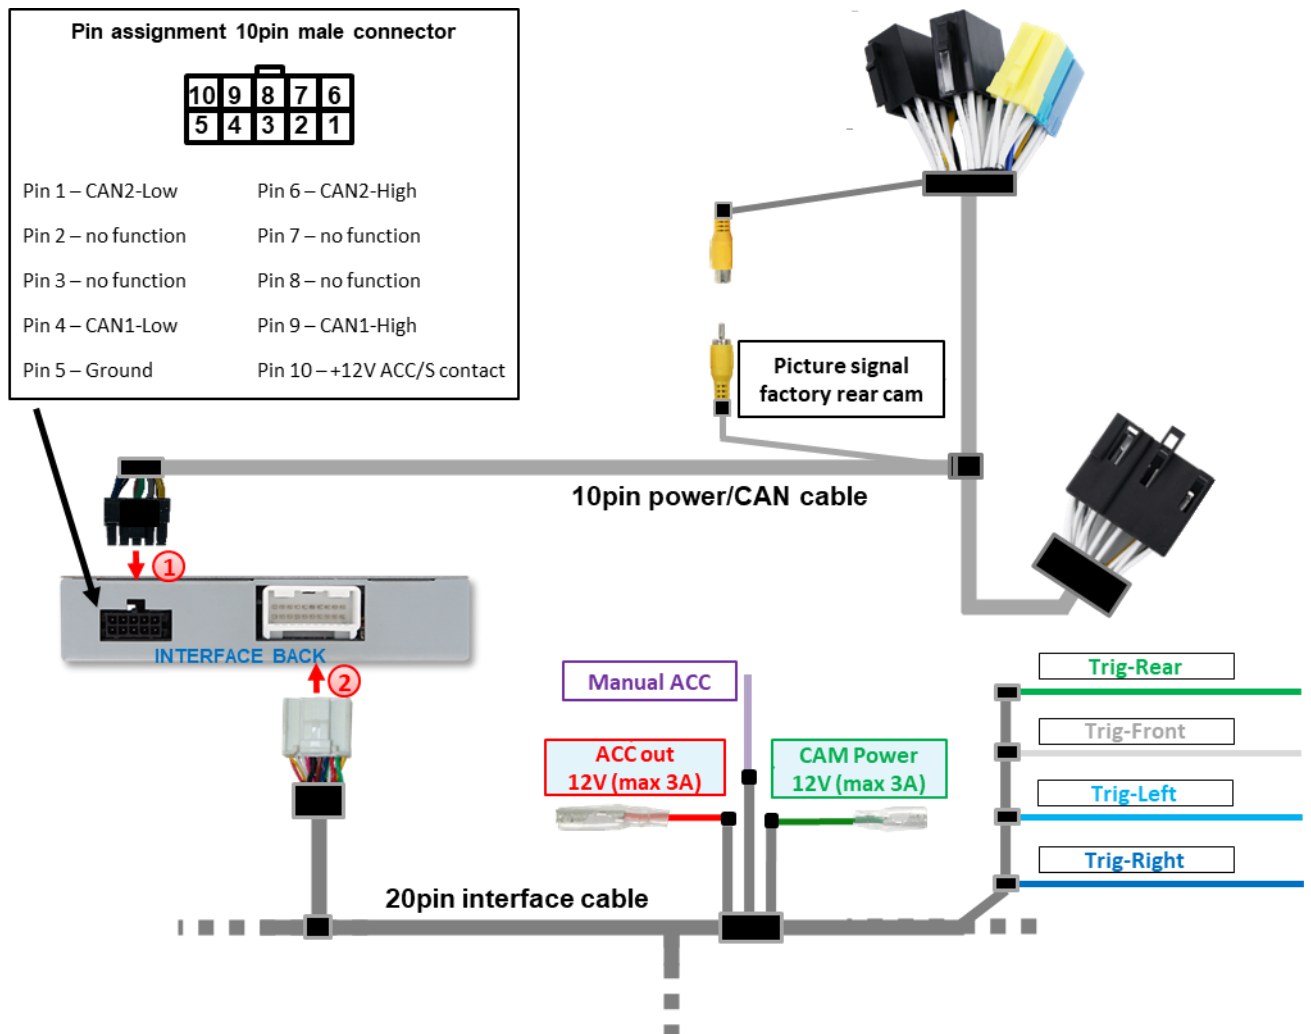

- ① Connect the 10pin female connector of the **10pin power/CAN cable** to the 10pin male connector of the interface.
- ② Connect the 20pin female connector of the **20pin interface cable** to the 20pin male connector of the interface.

2.4.1 Connection with CAN bus

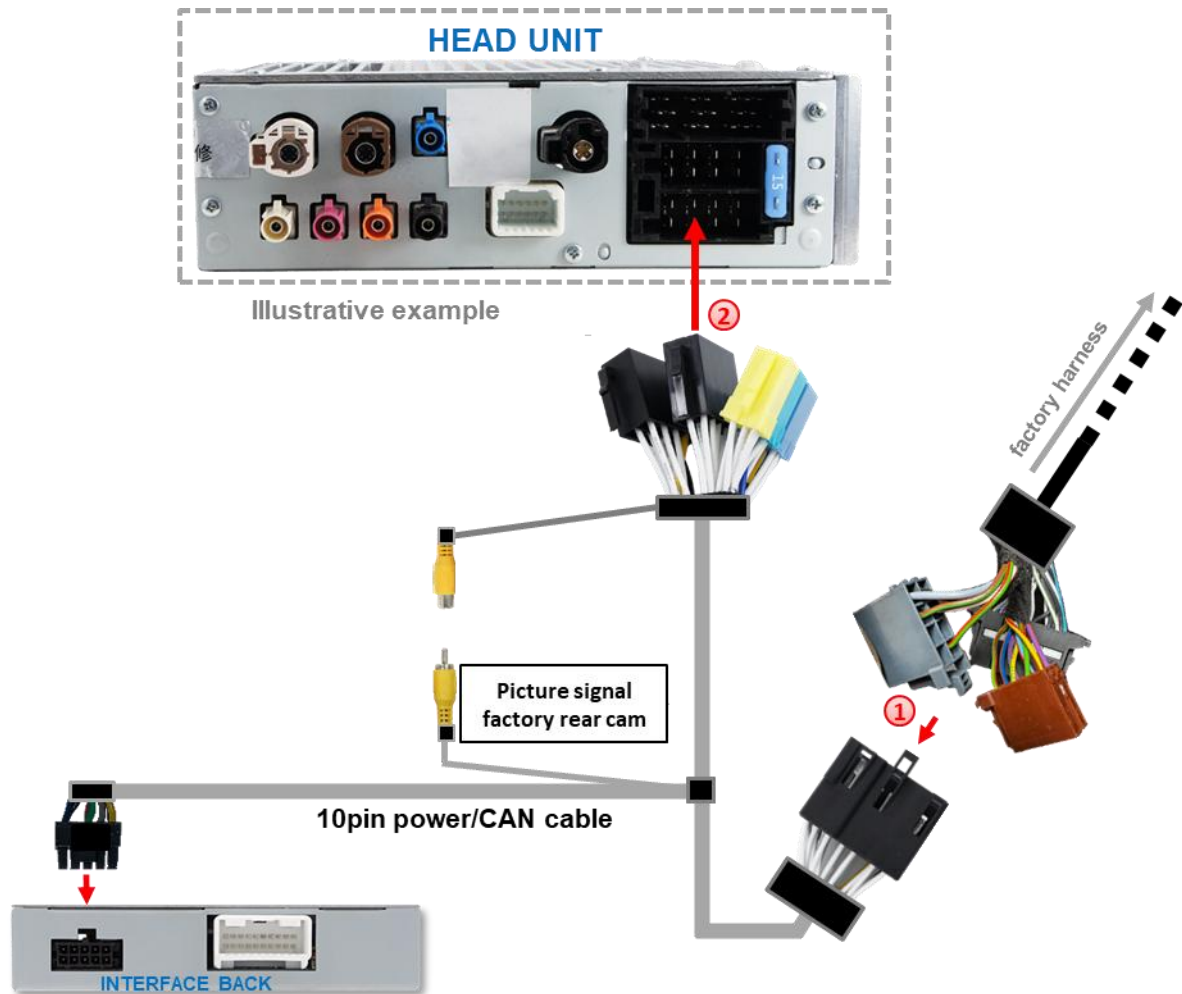


- 1 Unplug the 3part ISO/Mini-ISO female connector of the vehicle wiring harness at the rear of the head unit and connect it to the ISO/Mini-ISO male connector of the 10pin power/CAN cable.
- 2 Connect the opposite 3part ISO/Mini-ISO female connector of the 10pin power/CAN cable to the previously disconnected ISO/Mini-ISO male connector of the head unit.

Attention!
In exceptional cases, CAN communication is not (fully) compatible. If no interface LED lights up after connecting the 10pin power/CAN cable set with the ignition switched on, the analogue connection described below must be made.

2.4.2 Analogue connection without CAN bus

For analogue connection, the two CAN wires of the 10pin power/CAN cable are not connected – instead, the two wires of the 10pin power/CAN cable must be separated!

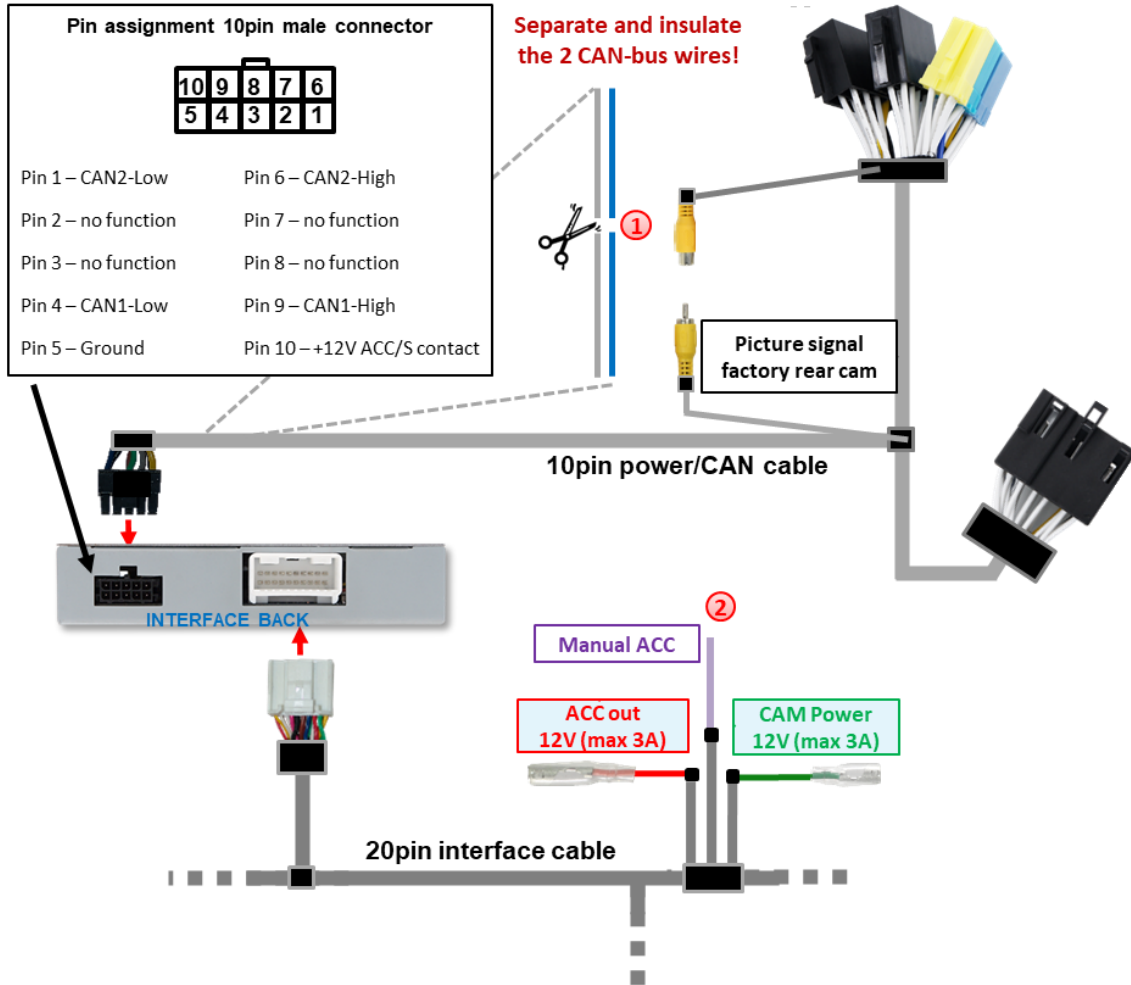

- 1 Separate and insulate the 2 CAN bus wires (grey, blue) of the 20pin interface cable approx. 4-5 cm behind the black male connector.
- 2 Connect the purple **Manual ACC** wire of the 20pin interface cable to **the +12V S contact (terminal 86s) or ACC terminal 15r** (e.g. cigarette lighter, glove compartment light).



Notes

- The picture is only switched on as long as the video interface is switched on via +12V to **Manual ACC**. Otherwise, the factory picture is also black. When selecting the switch-on signal, check whether the factory picture is available in all desired operating states.
- The display of driving lines is not available with an analogue connection.
- If the interface is connected via analogue (without CAN bus), the rear-view camera and side cameras must also be connected via analogue.


See points:

2.6.2 Case 2: Reverse gear signal from analogue signal

2.9.2 Case 2: Turn signals from analogue signal

2.5 Power supply outputs

The two **red** and **green** power supply lines **ACC out 12V (max 3A)** and **CAM Power 12V (max 3A)** of the 20pin interface cable can be used either as ACC power supply for the **V1-Left, V2-Right, V3-Front or HDMI input *** connected **external video sources** (e.g. iOS/Android devices, laptop, streaming stick, DVB-T2 tuner), or as a power supply for the **V1-Left, V2-Right, V3-Front, V4-Reverse or HDMI input*** (e.g. side, front and rear-view cameras).

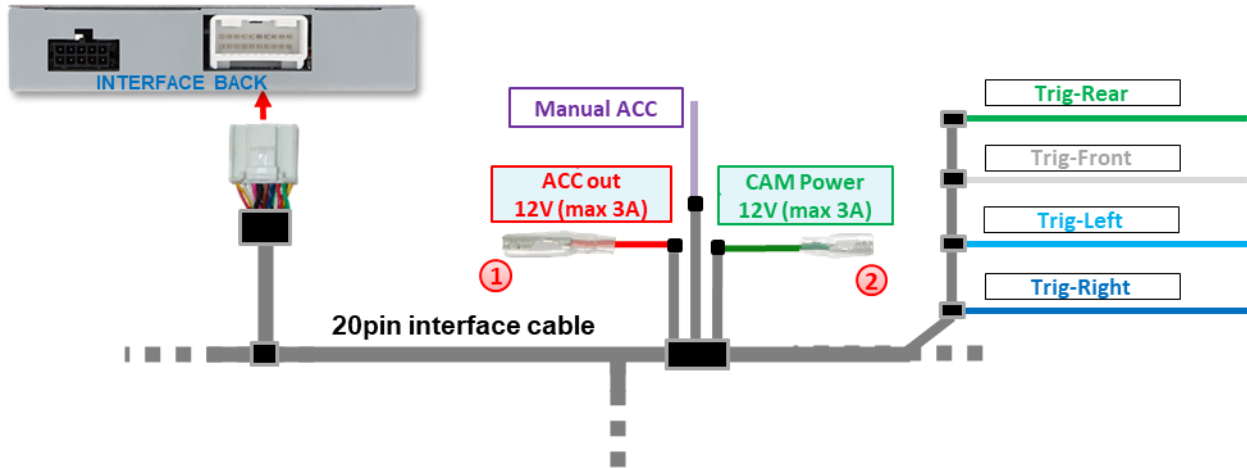


- 1** **External video sources** (not cameras) can be powered via the red **ACC out 12V (max 3A)** power supply line of the 20pin interface cable. The wire carries a **continuous** +12V ACC switching output current while the interface is switched on (see the following chapters for connection diagrams).
- 2** Power for **aftermarket cameras** (e.g. rear-view, side and front cameras) can be supplied via the green **CAM Power 12V (max 3A)** power supply line of the 20pin interface cable. The wire carries **+12V switching output current** only as long as one of the camera inputs is displayed, regardless of whether the connection is made via the vehicle CAN bus or via one of the trigger lines (see the following chapters for connection diagrams).

*** HDMI input only available with HDV- IG1**

2.5.1 Connection and power supply - Video sources

Rear-view camera, front camera and 2 side cameras

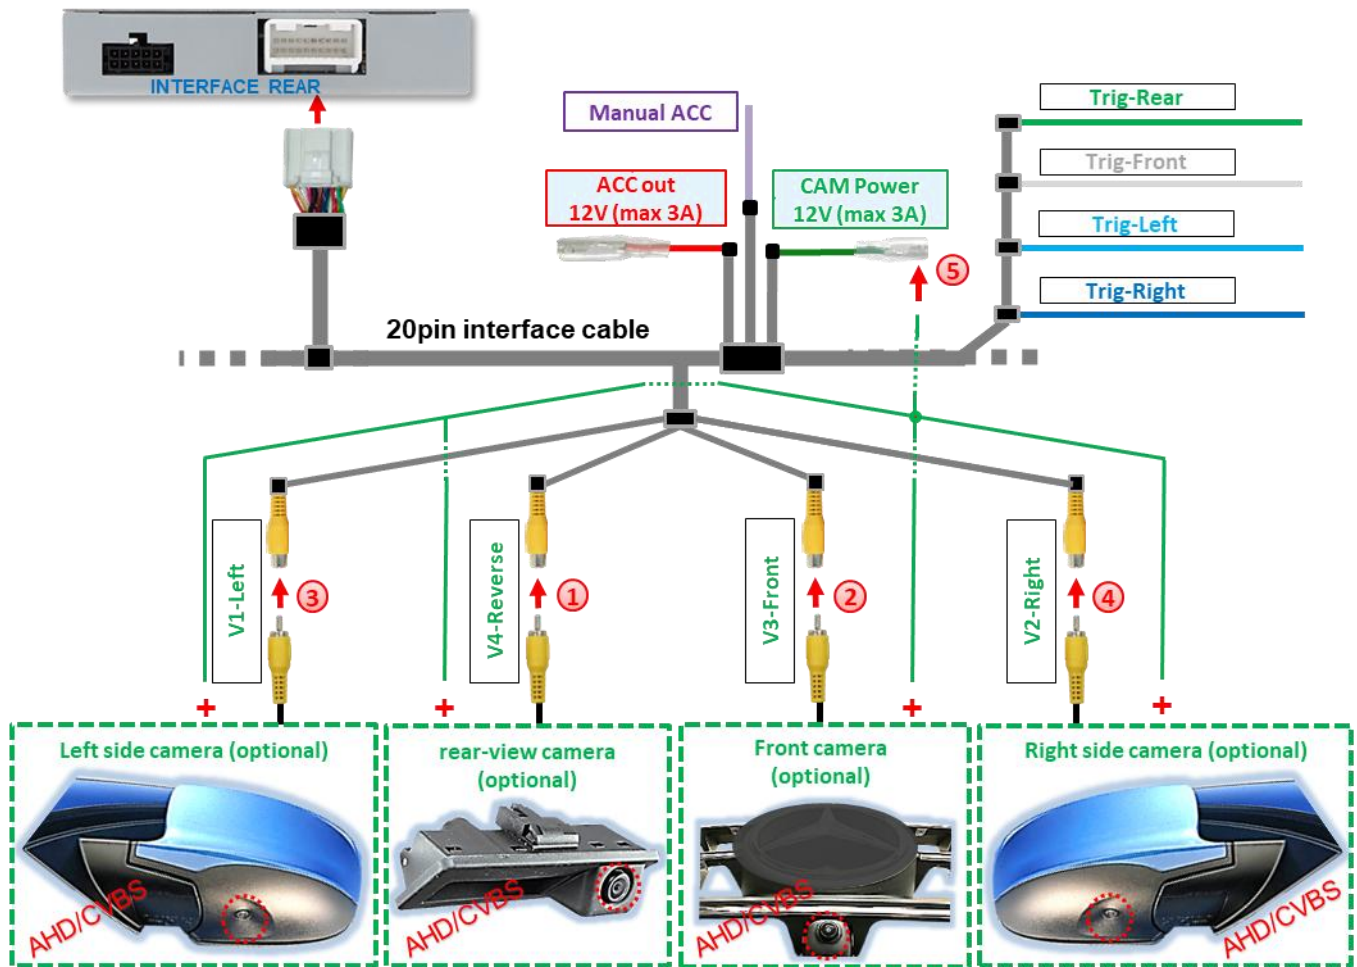


- ① Connect the RCA male connector of the rear-view camera to the RCA female connector **V4-Reverse** of the 20pin interface cable.
- ② Connect the RCA male connector of the front camera to the RCA female connector **V3-Front** of the 20pin interface cable.
- ③ Connect the RCA male connector of the left side camera to the RCA female connector **V1-Left** of the 20pin interface cable.
- ④ Connect the RCA male connector of the right side camera to the RCA female connector **V2-Right** of the 20pin interface cable.
- ⑤ Connect the power supply for all aftermarket cameras to **the green wire. CAM Power 12V (max 3A)** of the 20pin interface cable.



Note: The type of camera selection (via vehicle CAN bus or trigger lines) can be preset individually for each input in the OSD menu settings for each input.

Attention!
The video signal type of each video source must be defined in the OSD menu of the corresponding video input.

2.5.2 Connection and power supply - Video sources rear-view camera, front camera and 2 video sources

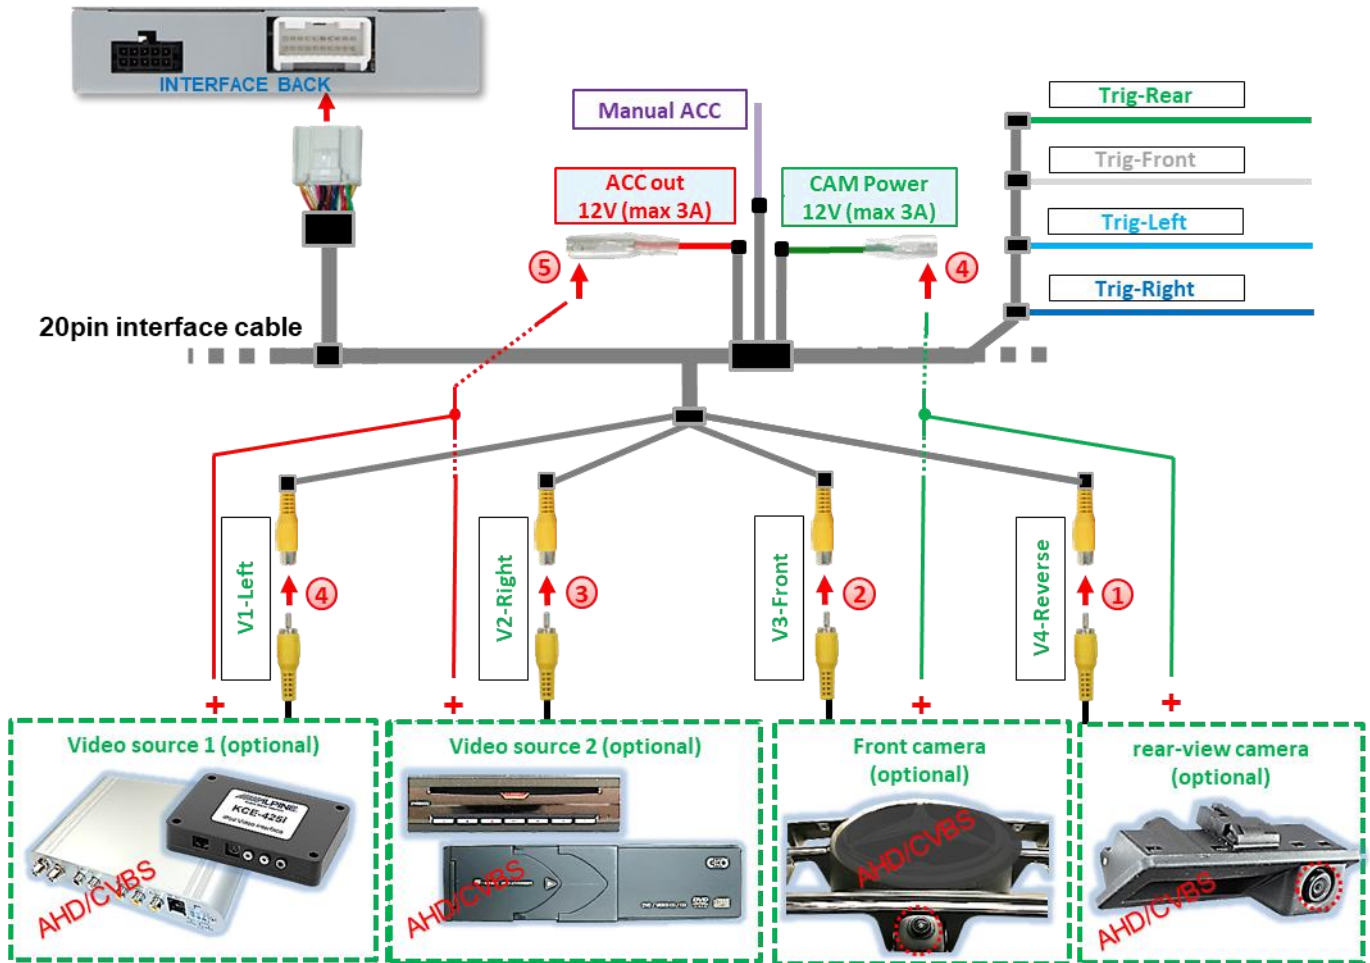

- ① Connect the RCA male connector of the rear-view camera to the RCA female connector **V4-Reverse** of the 20pin interface cable .
- ② Connect the RCA male connector of the front camera to the RCA female connector **V3-Front** of the 20pin interface cable.
- ③ Connect the RCA male connectors of video sources 1 and 2 to the RCA female connectors **V1-Left** and **V2-Right** of the 20pin interface cable.
- ④ Connect the power supply for aftermarket cameras to **the green CAM Power 12V wire (max 3A)** of the 20pin interface cable.
- ⑤ Connect the power supply for video sources to **the red wire ACC out 12V (max 3A)** of the 20pin interface cable.



Note: The type of camera selection (via vehicle CAN bus or trigger lines) can be preset individually for each input in the OSD menu settings **for** each input.

Attention!
The video signal type of each video source must be defined in the OSD menu of the corresponding video input.


2.6 Aftermarket rear-view camera

Automatic switching to the rear-view camera can be done via the CAN bus or an analogue reverse gear signal.

2.6.1 Case 1: Reverse gear signal from CAN bus

The basic requirement is that the interface is connected to the CAN bus. Furthermore, the vehicle CAN bus reverse gear signal and detection by the interface must be compatible. The interface then supplies +12V on the **green wire CAM Power 12V (max 3A)** of the **20pin interface cable** while reverse gear is engaged, and the interface automatically switches to the rear-view camera input **V4-Reverse** or the **HDMI**- input*.

See also chapter 1.4 Settings – 8 dip switch bench (interface functions) .

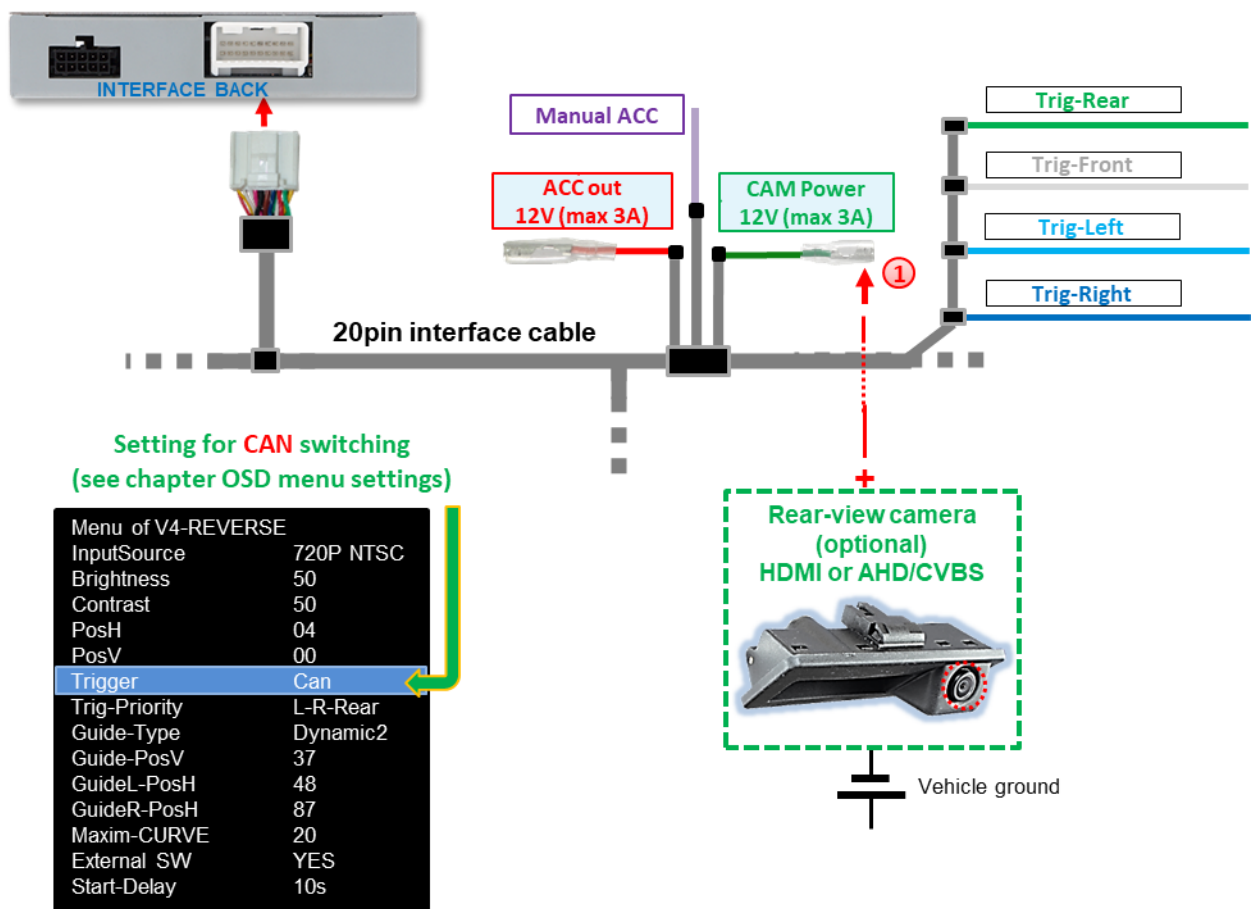

- 1 The +12V power supply for the aftermarket rear-view camera can be provided via the **green wire CAM Power 12V (max 3A)** of the **20pin interface cable**, as this wire only carries current when camera inputs are switched on (some cameras are not stable under continuous current).




Notes

- If the **HDMI** input* is defined as the rear-view camera input, the **V4 reverse** input will have no function!
- If the reverse gear detection of the interface on the CAN bus does not work , the reverse gear signal must be connected analogueously.

* **HDMI input only available with HDV-IG1**

2.6.2 Case 2: Reverse gear signal from analogue signal

If the interface is connected without a CAN bus or if the interface connected to a CAN bus does not supply +12V to the **green CAM Power 12V (max. 3A) wire** of the 20pin interface cable while reverse gear is engaged (not all vehicles are compatible), an external switch signal from the reversing light is required. Since the reverse signal contains electronic interference, a normally open relay (e.g. AC-MR-312 or AC-MR-201) or a noise filter (e.g. AC-PNF-RVC) is required. The following diagram shows the use of a normally open relay.

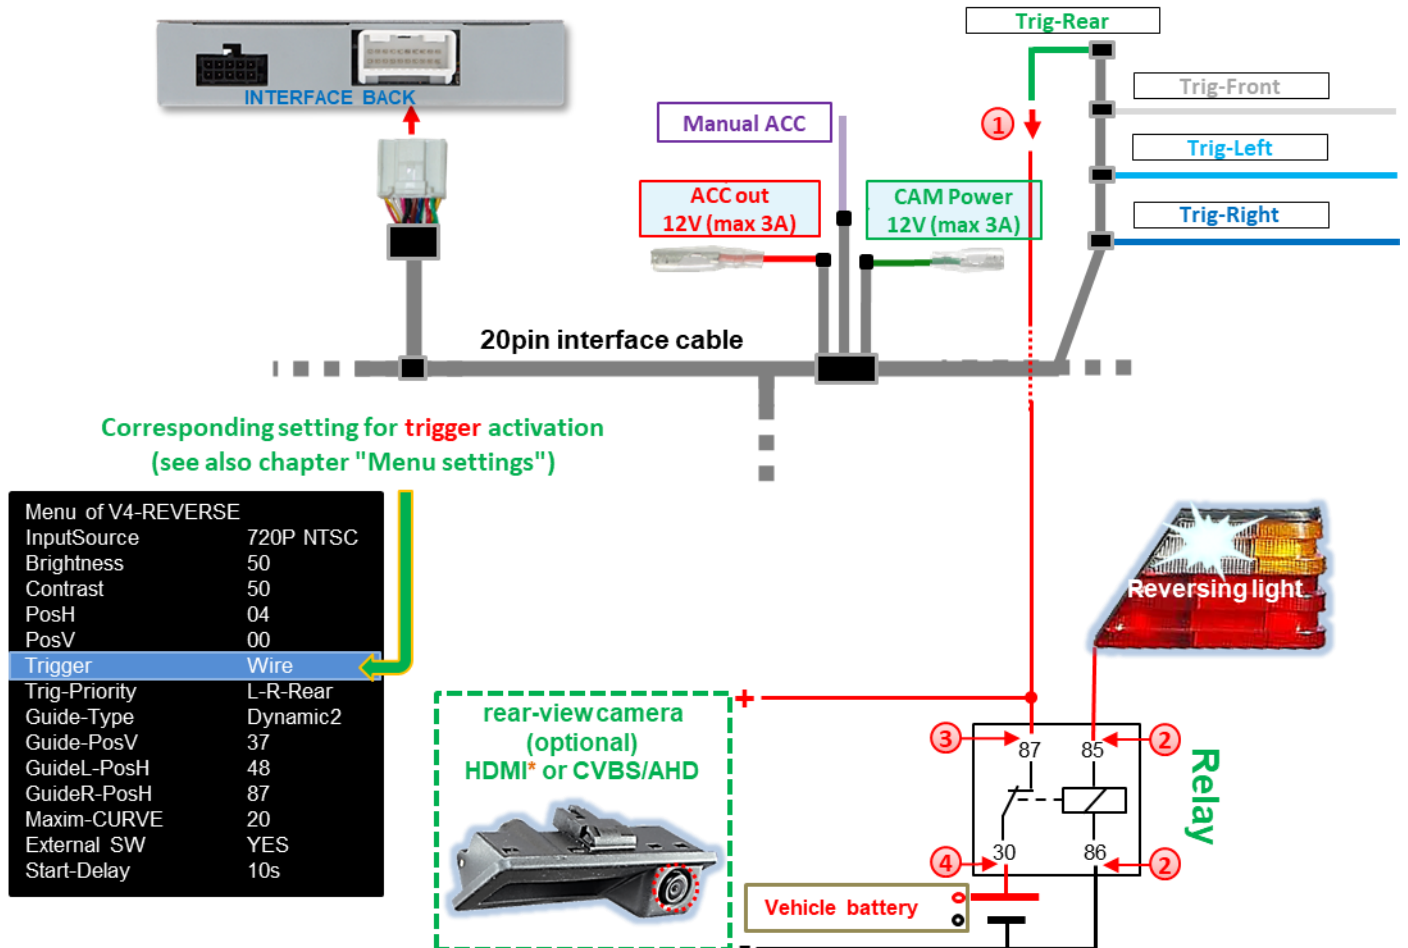


- ① Connect the **green wire Trig-REAR** to the output terminal (87) of the relay.
- ② Connect the reversing light power cable to the switching coil terminal (85) and the vehicle ground to the switching coil terminal (86) of the relay.
- ③ Connect the rear-view camera power supply wire to the output terminal (87) of the relay, in addition to the **green Trig-REAR wire**.
- ④ Connect the +12V continuous current to the input terminal (30) of the relay.

* HDMI input only available with HDV-IG1

2.6.3 Optional: Use of the factory rear-view camera cable

To retrofit an aftermarket rear-view camera, the cable from the factory rear-view camera can be used, so that no new cable needs to be laid.

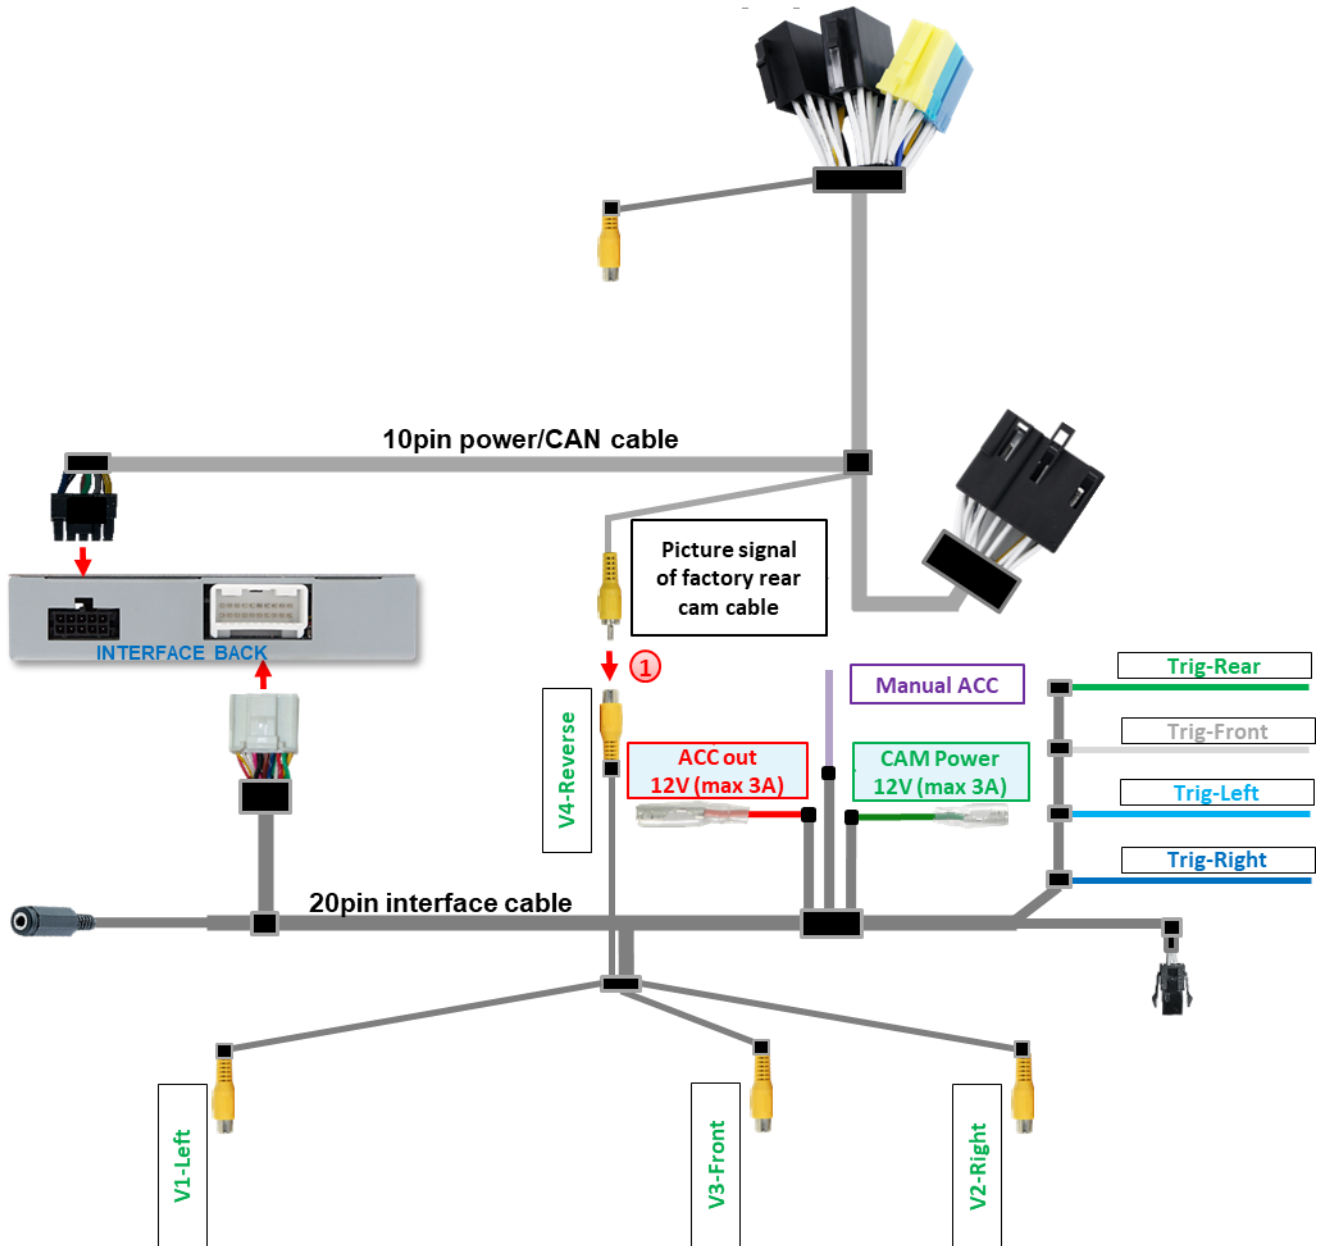


- 1 Connect the RCA male connector of the 10pin power/CAN cable to the RCA female connector **V4-Reverse** of the 20pin interface cable. The RCA female connector of the 10pin power/CAN cable remains free.



In addition, the corresponding pins on the aftermarket rear-view camera cable must be manually adapted to the factory rear-view camera cable!

2.7 Factory rear-view camera


If you wish to continue using the factory rear-view camera, the RCA male connector and RCA female connector of the **10pin power/CAN cable** must be connected to each other.

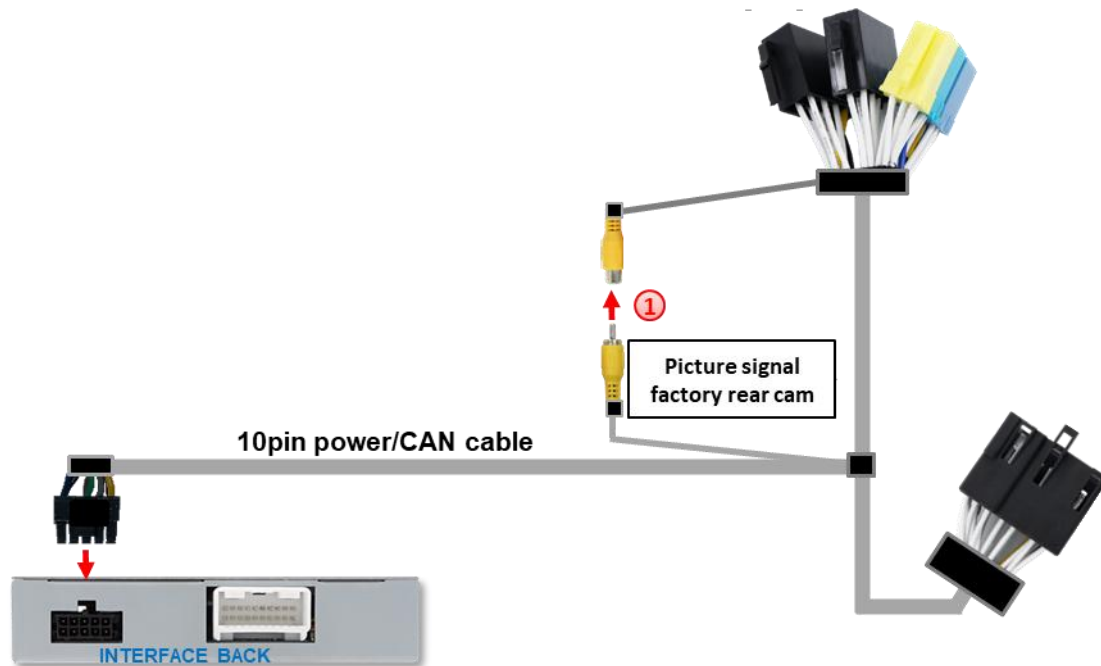

- 1 Connect the RCA male connector to the RCA female connector of the **10pin power/CAN cable** so that the signal from the factory rear-view camera is transmitted.

Note: Dip 4 of the black 8 dip switch bench must be set to 'OFF'. Automatic switching to the factory rear-view camera only occurs while reverse gear is engaged. Optional accessories are required for different switching times.

2.8 Aftermarket front camera

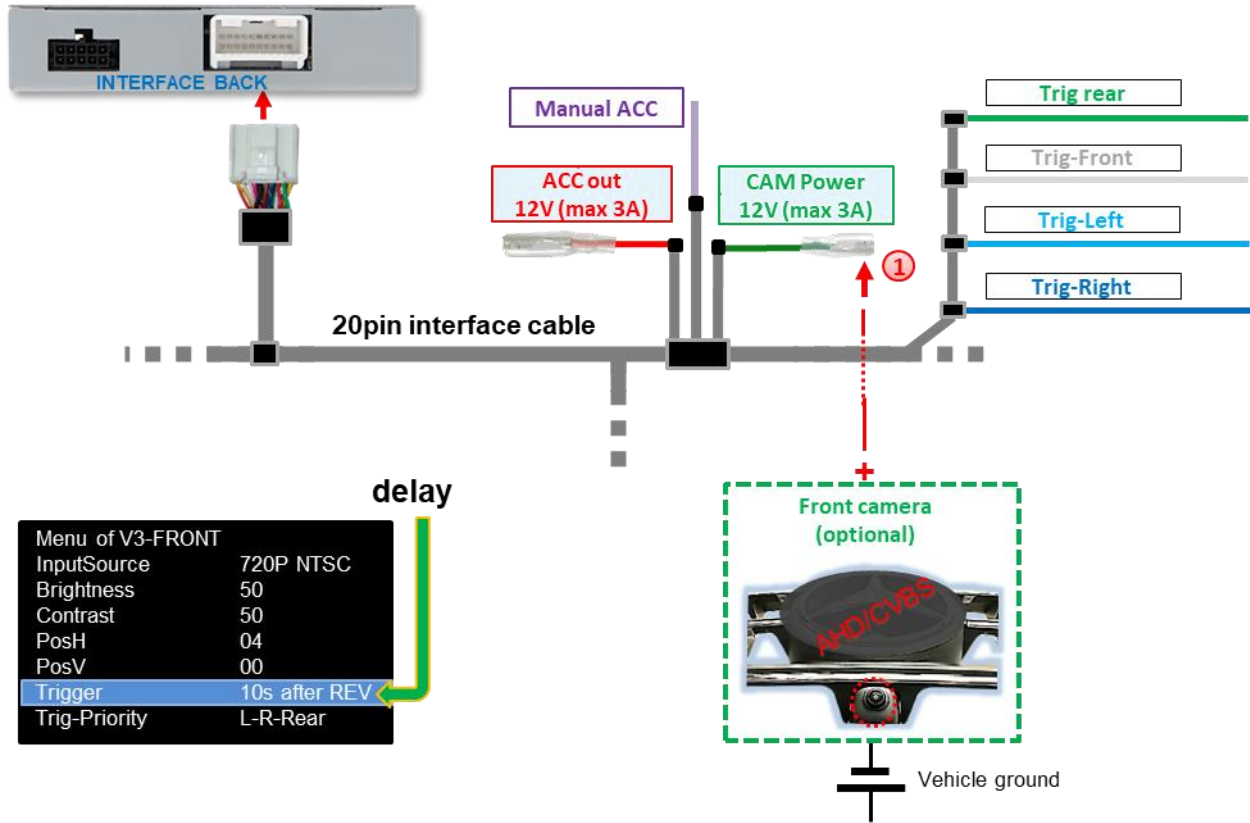

1 The **green CAM Power 12V (max. 3A) wire** can be used to supply power to the front camera (and all other cameras connected to the video inputs). This only carries current when the camera is activated (some cameras are not stable with continuous current). The prerequisite is that Dip 3 = **ON** (black 8 dip switch bench). The **green wire** then supplies +12V (max. 3A) as power for the front camera as long as the front camera input is displayed. The delay can be individually selected for **5, 10, 15** or **20** seconds in the OSD menu settings of the front camera.

Switching to the front camera after reverse gear is engaged for the time set in the OSD menu occurs when a reverse gear signal is received from the CAN bus and with an analogue connection.




Note: It is also possible to switch manually to the front camera input (short press) from any picture mode using an external keypad (see chapter3 Operating the video interface).

2.9 Aftermarket side cameras

Side cameras can be connected via CAN bus or an analogue signal.

2.9.1 Case 1: Turn signals from CAN bus

The basic requirement is that the interface is connected to the CAN bus. Furthermore, the vehicle CAN bus turn signals and their detection by the interface must be compatible. Then, for the duration of turn signal operations, +12V is applied to the **green CAM Power 12V (max 3A) wire** of the 20pin interface cable.

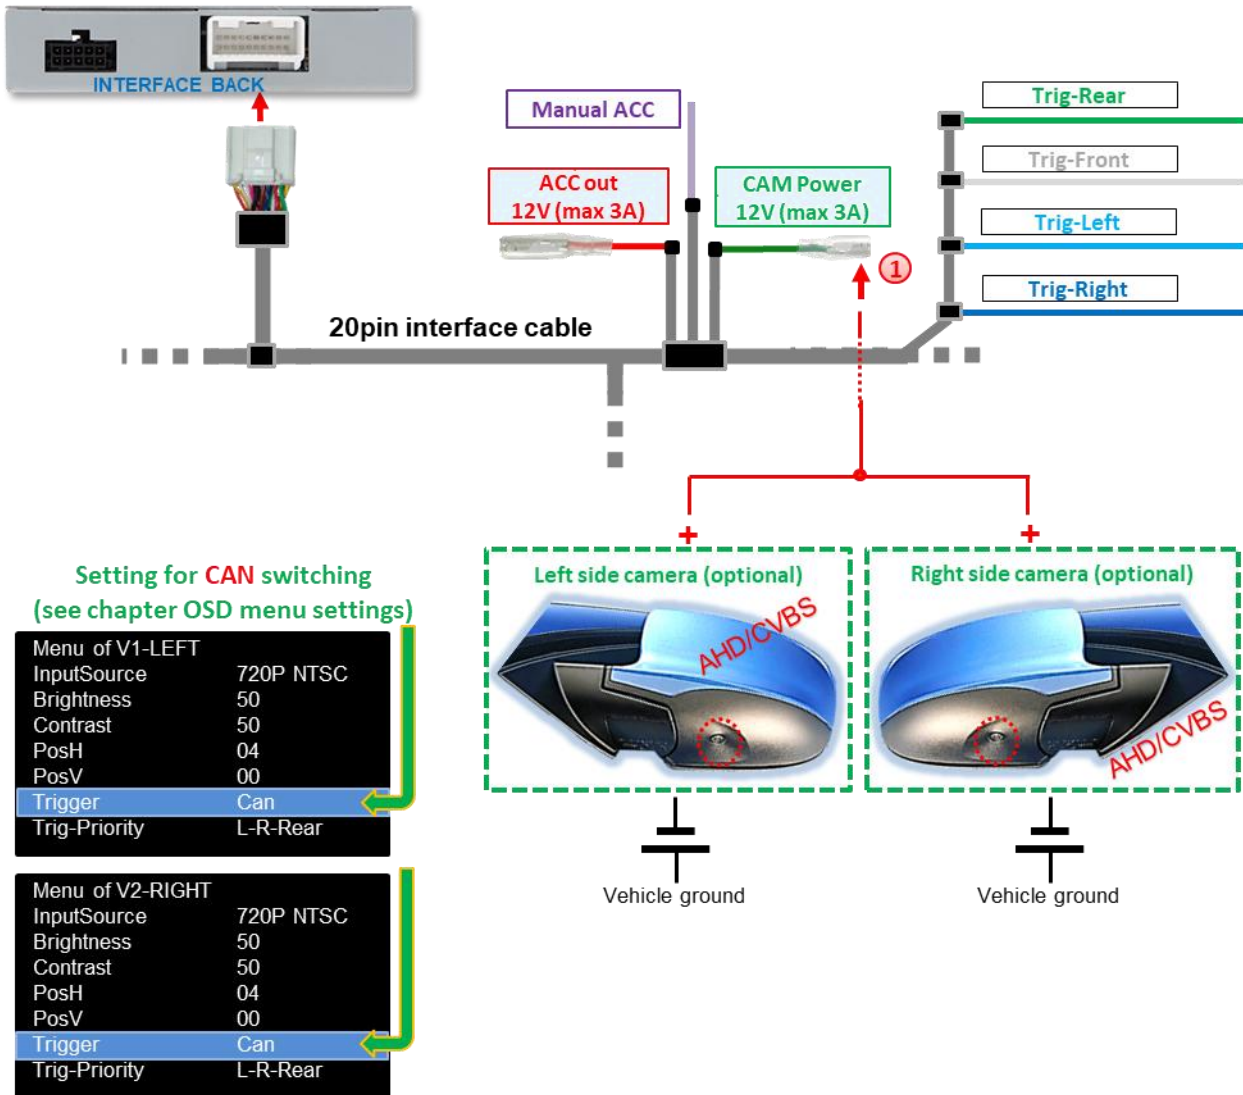


- 1** Power for the side cameras can be supplied via **the green CAM Power 12V wire (max 3A)** of the 20pin interface cable, as this wire only carries current during camera activation (some cameras are not stable under continuous current).



Note: If the interface's turn signal detection on the vehicle CAN bus does not work, the turn signals must be connected analogously.

2.9.2 Case 2: Turn signals from analogue signal


If the interface is connected without a CAN bus or if the turn signals from the vehicle CAN bus are not recognised when the interface is connected with a CAN bus, analogue activation of the side camera inputs is possible via the +12V switching input lines **Trig-Left** and **Trig-Right**. An external switching signal from the turn signal bulbs is required to switch to the side camera inputs. Since turn signals may contain electronic interference, a normally open relay (e.g. AC-RW-1230 with AC-RS5 cabling) or a noise filter (e.g. AC-PNF-RVC) is required for each input. The diagram below shows the use of a normally open relay.

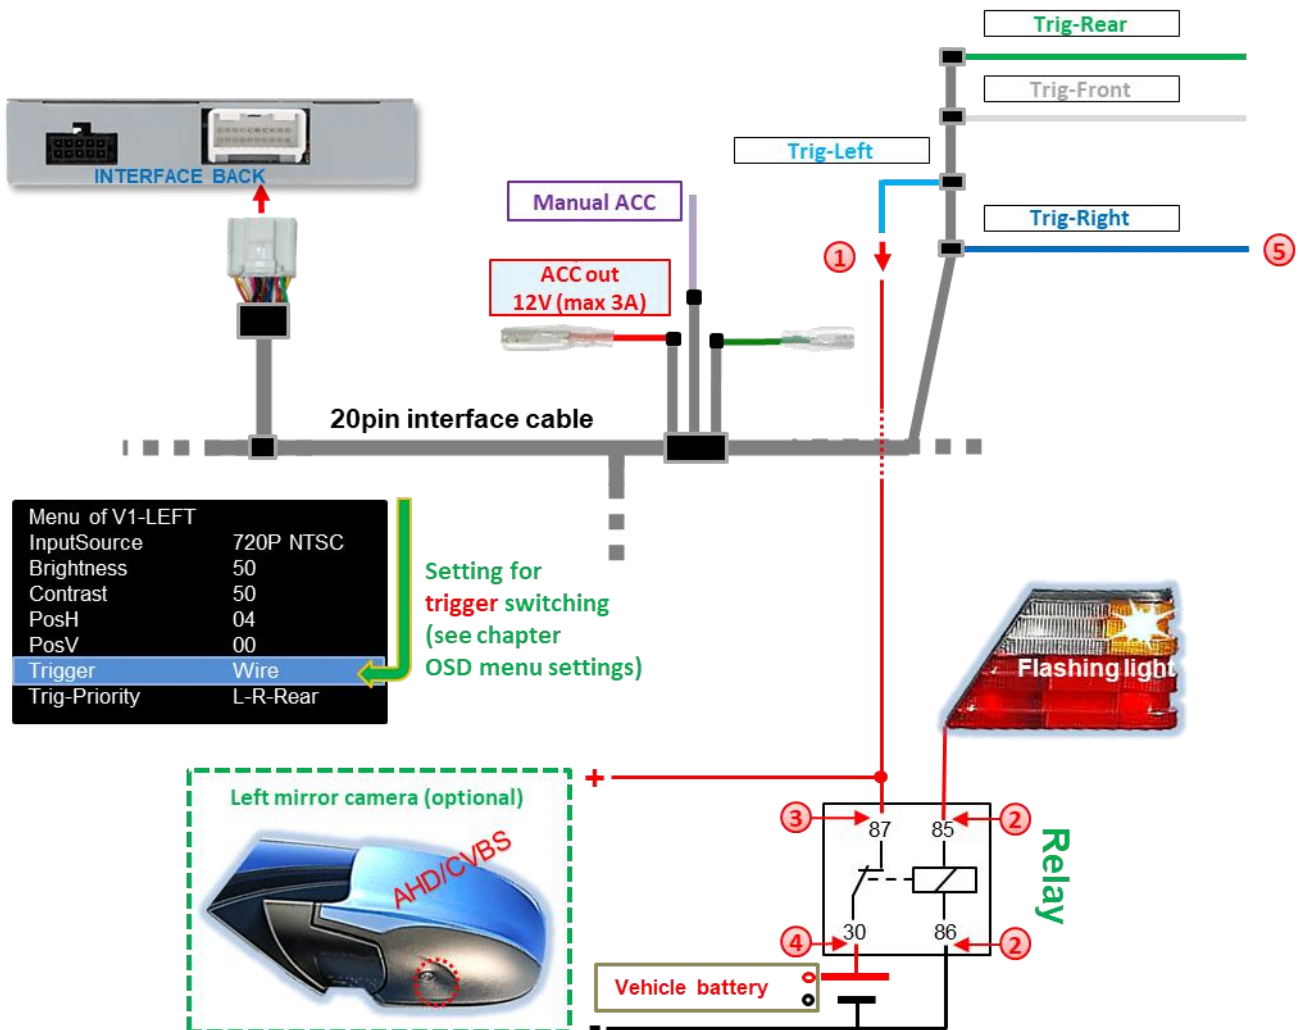

- ① Connect the light blue wire **Trig-Left** to the output terminal (87) of the relay.
- ② Connect the indicator cable of the left indicator to the relay's switching coil terminal (85) and the vehicle ground to the relay's switching coil terminal (86).
- ③ Connect the left side camera power cable to the output terminal (87) of the relay, in addition to the light blue **Trig-Left** wire.
- ④ Connect the +12V continuous current to the input terminal (30) of the relay.
- ⑤ The same connection method applies to the right side camera via the dark blue **Trig-Right** wire.

2.10 HDMI rear-view camera or other HDMI sources (HDV-IG1 only)

The **HDMI input*** of the interface can generally be used for any video source with an HDMI output (e.g. rear-view camera, 360° camera system or other video sources such as smartphones, laptops, streaming sticks, DVB-T2 tuners, etc.).

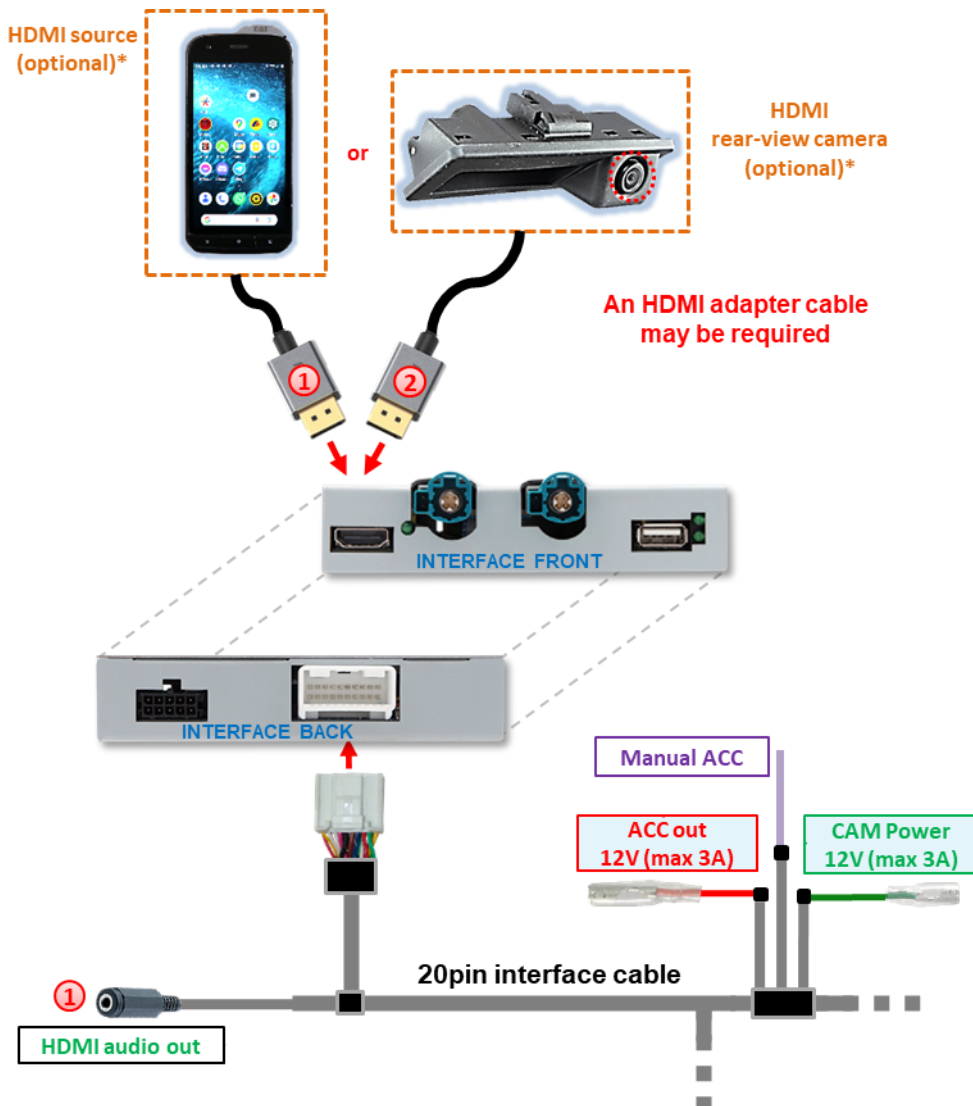

Picture settings in the HDMI menu

Menu of HDMI	
InputSource	AutoDetect
Brightness	50
Contrast	50
PosH	04
PosV	00

Picture settings in the HDMI menu for rear-view camera

Menu of HDMI-REVERSE	
InputSource	AutoDetect
Brightness	50
Contrast	50
PosH	04
PosV	00
Trigger	Can
Trig-Priority	L-R-Rear
Guide-Type	Dynamic2
Guide-PosV	37
GuideL-PosH	48
GuideR-PosH	87
Maxim-CURVE	20
External SW	YES
Start-Delay	10s

- 1 If an optional HDMI video source is connected to the **HDMI input***, the picture displayed on the source's screen (e.g. smartphone, laptop, etc.) will be mirrored on the vehicle monitor. Other sources (e.g. streaming stick, DVD player, DVB-T tuner, etc.) can also be played back on the vehicle monitor. The video source can be powered via the **red ACC out 12V (max. 3A) wire**. Received audio signals are output via the 3.5 mm jack socket **HDMI audio out *** of the 20pin interface wire. (See the following chapter 2.11 Audio insertion .)

- 2 If a rear-view camera or a 360° camera system is connected to the **HDMI input*** (activated via CAN bus or analogue), the picture from the rear-view camera is displayed when reverse gear is engaged, and after disengagement, the picture from a front camera connected to the front camera input **V3-Front** is also displayed for the preset time. Power can be supplied via the **green wire CAM Power 12V (max 3A)**.

* HDMI input only available with HDV-IG1

2.11 Audio insertion


The interface can only insert video signals into the factory infotainment system. For all connected AV sources, their audio output must be connected to the factory AUX input (if available) or an optional audio feeder (e.g. FM modulator).

Audio signals from the **HDMI input*** are output via the 3.5 mm jack socket **HDMI audio out** on the interface. In this case, the **HDMI audio out** of the interface must be connected to the factory AUX input (if available) or an optional audio feeder (e.g. FM modulator).

If several AV sources are connected to the infotainment system, an additional audio switch may be necessary. Input video signals can be activated in parallel with any audio mode of the factory infotainment system.

*** HDMI input only available with HDV-IG1**

2.12 Connection – video interface and external keypad

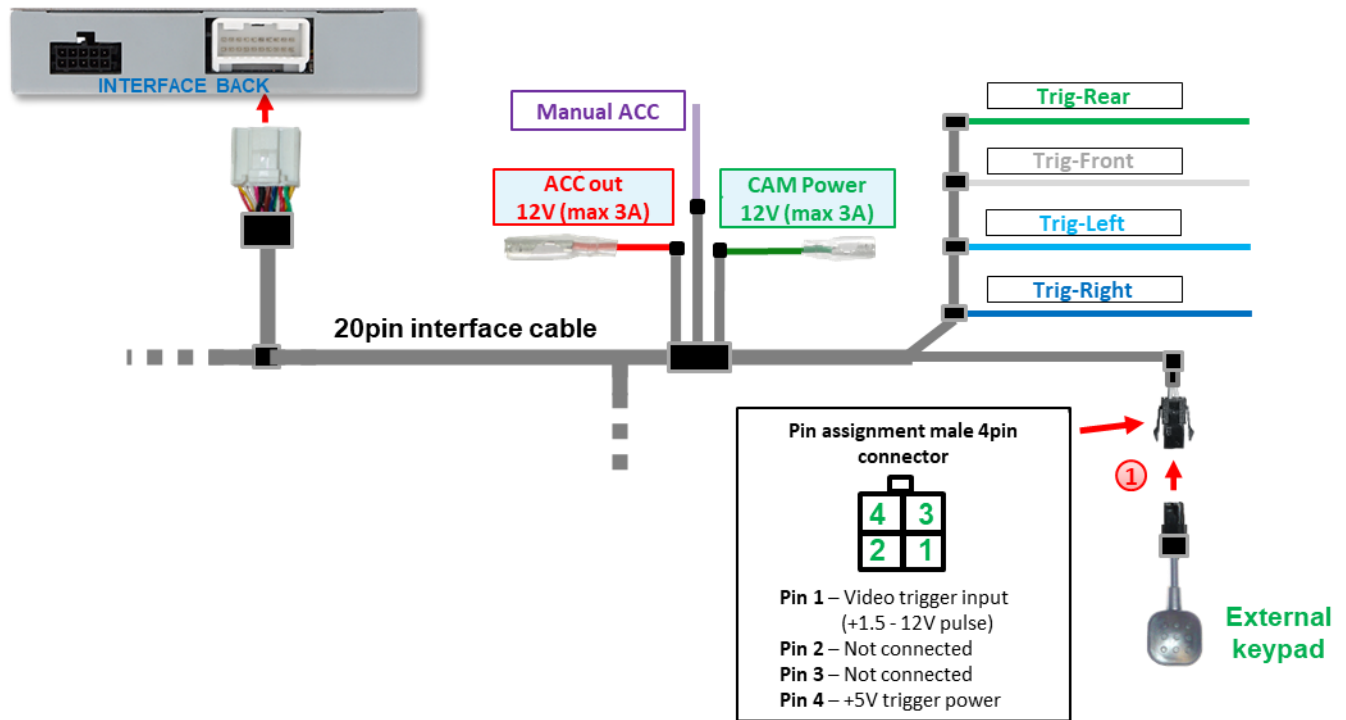

1 Connect the 4pin female connector of the external keypad to the 4pin male connector of the 20pin interface cable.



Note: Even if the keypad is not required for switching between multiple sources, it is strongly recommended that the keypad be connected and remain hidden on the interface. The keypad should not be installed in a "pressed" position.


Optional: Instead of the external keypad, the interface can also be operated using the optionally available "HDA-RC" remote control.* This allows direct selection of the video/camera inputs and more convenient changing of the settings in the respective OSD menus.



"HDA-RC" remote control available as an option

* The remote control is compatible with all HDA and HDV interfaces that are marked with 'RC' at the end of the software version.

2.13 OSD menu settings

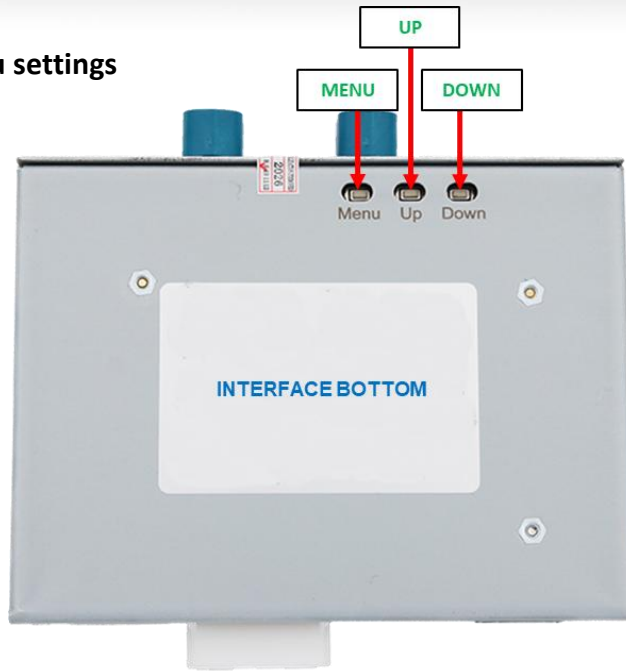

Attention!
Video signal type of each video source must be set in the OSD menu of the corresponding video input.

OSD menu settings can be changed using the 3 keys on the rear of the interface. MENU opens the OSD settings menu or moves the cursor to the next menu item. UP and DOWN change the values of the current menu item.



The individual OSD settings menu for each video input can only be accessed while it is displayed, regardless of whether a video source is connected.

The following settings are available in the OSD settings menus of the 5 video inputs:

Menu **V1-Left (V2-Right)** 8-pin DIP switch bank DIP 1 (DIP 2) = ON

Input Source Video input signal type for video source connected to **V1-Left (V2-Right)**. This **must** be defined for correct image reproduction. The following video source signal types can be selected:
CVBS video sources: **NTSC, PAL**
AHD video sources: **720p NTSC, 960p NTSC, 1080p NTSC, 720p PAL, 960p PAL, 1080p PAL**

Brightness Brightness
Contrast Contrast
Pos. H Horizontal image position
Pos. V Vertical image position
Trigger Type of selection for video input **V1-Left (V2-Right)**.

"CAN" function for side cameras via CAN bus. Selection of video input **V1-Left (V2-Right)** when (right) turn signal is activated. Requirements include the turn signals from the interface the vehicle's CAN bus. Manual selection of this input via an external keypad does not work with this setting.

"Wire" function for other video sources or side cameras (without CAN bus). The **V1-Left (V2-Right)** video input is selected exclusively via the **light blue (dark blue) Trig-Left (Trig-Right)** wire or manually via an external keypad.

Trig priority Priority of switching when switching signals are present for several inputs at the same time (CAN bus or analogue +12 V trigger). The signal with the highest priority is displayed:

L-R-Rear: V1-Left → V2-Right → V4-Reverse
Rear-R-L: V4-Reverse → V2-Right → V1-Left

Menu of V1-LEFT	
InputSource	720P NTSC
Brightness	50
Contrast	50
PosH	10
PosV	15
Trigger	Can
Trig-Priority	L-R-Rear

Menu of V2-RIGHT	
InputSource	720P NTSC
Brightness	50
Contrast	50
PosH	10
PosV	15
Trigger	Can
Trig-Priority	L-R-Rear

Menu V3-Front

8-pin DIP switch bank DIP 3 = ON

Menu of V3-FRONT	
InputSource	720P NTSC
Brightness	50
Contrast	50
PosH	10
PosV	15
Trigger	10s after REV
Trig-Priority	L-R-Rear

- Input Source** Video input signal type for video source connected to **V3 front**. This **must** be defined for correct image reproduction. The following video source signal types can be selected:
 CVBS video sources: **NTSC, PAL**
 AHD video sources: **720p NTSC, 960p NTSC, 1080p NTSC, 720p PAL, 960p PAL, 1080p PAL**
- Brightness** Brightness
- Contrast** Contrast
- Pos. H** Horizontal image position
- Pos. V** Vertical image position
- Trigger** Type of selection for video input **V3 front**.
Delay function for front camera. The **delay** setting determines the automatic switching of a front camera connected to the V3 front input after reverse gear is engaged, as well as the display duration on the screen. The following options are available: 5s after REV, 10s after REV, 15s after REV, 20s after REV.
"Wire" function for other video sources. If a different video source is to be connected to the V3 front instead of a front camera, select the "Wire" setting. This switches the video source to the connected device.
 If a video source is to be connected to **the V3 front**, select the "Wire" setting. This deactivates the **"Delay"** function and the input can only be selected manually via the **white Trig-Front** wire manually via an external keypad.
- Trig priority** Priority of switching when switch signals are present for several inputs at the same time (CAN bus or analogue +12 V trigger). The signal with the highest priority is displayed:
L-R-Rear: V1-Left → V2-Right → V4-Reverse
Rear-R-L: V4-Reverse → V2-Right → V1-Left

V4-Reverse menu

8 dip switch bench Dip 4 = ON, Dip 5 = OFF, Dip 6 = OFF

V4 Reverse input has no function if **HDMI** input* is defined as rear-view camera input (Dip 5 = ON). However, the trigger function of the **HDMI** input* must be set in the **V4 reverse** menu.

Menu of V4-REVERSE	
InputSource	720P NTSC
Brightness	50
Contrast	50
PosH	10
PosV	15
Trigger	Can
Trig-Priority	L-R-Rear
Guide-Type	Dynamic2
Guide-PosH	33
Guide-PosV	59
External SW	YES
Start-Delay	10s

- Input Source** Video input signal type for video source connected to **V4-Reverse**. This **must** be defined for correct image reproduction.
The following video source signal types can be used :
CVBS video sources: **NTSC, PAL**
AHD video sources: **720p NTSC, 960p NTSC, 1080p NTSC, 720p PAL, 960p PAL, 1080p PAL**
- Brightness** Brightness
- Contrast** Contrast
- Pos. H** Horizontal image position
- Pos. V** Vertical image position
- Trigger** Type of selection for rear-view camera input **V4-Reverse/HDMI-REV***.
"CAN" function with CAN bus connection. With the "CAN" setting, the system automatically switches to **V4-Reverse/HDMI*** for CVBS/AHD rear-view cameras when reverse gear is engaged. This requires the interface to recognise reverse gear in the CAN bus.
"Wire" function with analogue connection. A rear-view camera connected to **the V4-Reverse/HDMI*** input can be selected via the **green Trig-Left wire** using both the "Wire" and "CAN" settings. If an analogue (reversing signal) connection is to be made, it is recommended to set "Wire".
- Trig priority** Priority of switching when switch signals are present for several inputs at the same time (CAN bus or analogue +12 V trigger). The signal with the highest priority is displayed:
L-R-Rear: V1-Left → V2-Right → V4-Reverse
Rear-R-L: V4-Reverse → V2-Right → V1-Left
- Guide type** Setting of 2 different angles for the guide lines for the rear-view camera
Movable guide lines **Dynamic 1-2**
Fixed guide lines **Fixed 1-2**
No guide lines **OFF**
- Guide-PosH** Vertical position of guide lines **00-40**
- Guide-PosV** Horizontal position of the guide lines **00-50**
- External SW** Selectable via external keypad **V4 Reverse**
YES: Factory video → HDMI* → V1-Left → V2-Right → V4-Reverse → Factory video
NO: Factory video → HDMI* → V1-Left → V2-Right → Factory video
- Start delay** Switching delay of the interface at start-up. This function is technically necessary in some vehicles, as otherwise malfunctions of the factory system may occur (e.g. black screen, touch problems). The following options are available (in seconds): **5s/6s/7s/8s/9s/10s/12s/15s/20s**
Changing the default settings may lead to malfunctions!

* **HDMI input only available with HDV-IG1**

HDMI menu

8 dip switch bench (Dip 4 = ON, Dip 5 = **ON /OFF**, Dip 6 = ON)

HDMI AV input (Dip 5 = OFF)

- InputSource** The picture resolution of connected HDMI sources is automatically detected.
- Brightness** Brightness
- Contrast** Contrast
- Pos. H** Horizontal image position
- Pos. V** Vertical image position

Menu of HDMI	
InputSource	AutoDetect
Brightness	50
Contrast	50
PosH	35
PosV	00

HDMI rear-view camera input (Dip 5 = ON)

- InputSource** The picture resolution of connected HDMI sources is automatically detected.
- Brightness** Brightness
- Contrast** Contrast
- Pos. H** Horizontal image position
- Pos. V** Vertical image position
- Trigger** Type of selection for rear-view camera input **HDMI-REV***.

Menu of HDMI-REV	
InputSource	AutoDetect
Brightness	50
Contrast	50
PosH	35
PosV	00
Trigger	Can
Trig-Priority	L-R-Rear
Guide-Type	Dynamic2
Guide-PosH	20
Guide-PosV	46
External SW	YES
Start-Delay	10s

"CAN" function with CAN bus connection. With the "CAN" setting, the system automatically switches to **HDMI*** for CVBS/AHD rear-view cameras when reverse gear is engaged.

Requirements include the interface recognising reverse gear in the CAN bus.

"Wire" function with analogue connection. A rear-view camera connected to the **HDMI*** input can be selected via the **green Trig Left wire** using both the **"Wire"** and **"CAN"** settings. If an analogue (reversing signal) connection is to be made, it is recommended to set **"Wire"**.

- Trig priority** Priority of switching when switch signals are present for several inputs at the same time (CAN bus or analogue +12 V trigger). The signal with the highest priority is displayed:

L-R-Rear: V1-Left → V2-Right → V4-Reverse

Rear-R-L: V4-Reverse → V2-Right → V1-Left

- Guide type** Setting of 2 different angles for the guide lines for the rear-view camera

Movable guide lines **Dynamic 1-2**

Fixed guide lines **Fixed 1-2**

No guide lines **OFF**

- Guide-PosH** Horizontal position of the guide lines **00-40**

- Guide-PosV** Vertical position of guide lines **00-50**

- External SW** Selectable via external keypad **V4 Reverse**
YES: Factory video → HDMI* → V1-Left → V2-Right → V4-Reverse → Factory video

NO: Factory video → HDMI* → V1-Left → V2-Right → Factory video

- Start delay** Switching delay of the interface at start-up. This function is technically necessary in some vehicles, as otherwise malfunctions of the factory system may occur (e.g. black screen, touch problems). The following options are available (in seconds): **5s/6s/7s/8s/9s/10s/12s/15s/20s**
 Changing the default settings may lead to malfunctions!



Notes: **V4 reverse** input has no function if **HDMI input*** is defined as the rear-view camera input (Dip 5 = ON).

*** HDMI input only available with HDV-IG1**

3 Operating the video interface

The external keypad can be used to switch between all activated inputs.

➤ Long press of the keypad (2-3 seconds)

When pressed and held for 2-3 seconds, the external keypad switches from the factory video to the first activated interface video input. Each subsequent long press switches to the next activated interface video input until the last one is reached, at which point the keypad switches back to the factory video. Deactivated inputs are skipped. If all inputs are activated via the corresponding DIP switch, the order is as follows:

Factory picture → HDMI → V1-Left → V2-Right → V4-Reverse** → Factory picture*

* **HDMI input only available with HDV-IG1**

****V4-Reverse** can only be selected via the external keypad if the "External SW" function is set to "Yes" in the **V4-Reverse** menu

➤ Short press of the keypad (only possible if Dip 3 is set to ON)

When pressed briefly, the external keypad switches from the current video mode to the front camera input.

input **V3 front** and when pressed again briefly back to the previous video mode.



Note: Even if the keypad is not needed to switch between multiple sources, it is strongly recommended that the keypad be connected and remain hidden on the interface. The keypad should not be installed in a "pressed" position.

3.1 Optional: Operating the video interface via the "HDA-RC" remote control

Instead of the external keypad, the interface can also be operated via the optionally available "HDA-RC" remote control.* This allows direct selection of the video/camera inputs and more convenient changing of the settings in the respective OSD menus.

* The remote control is compatible with all HDA and HDV interfaces that are marked with 'RC' at the end of the software version.



"HDA-RC" remote control
optionally available

4 Specifications

BATT/ACC range	9V - 16V
Stand-by power drain	approx. 3mA
Power consumption	approx. 350mA @12V
Video input	0.7V - 1V
Video input signal types	AHD/CVBS/HDMI (HDV version only)
Signal standards AHD/CVBS/HDMI	NTSC/PAL
Temperature range	-40°C to +85°C
Video box dimensions	117 x 25 x 108 mm (W x H x D)

5 FAQ – Troubleshooting Interface functions – product-specific

Problem	Possible cause	Solution
Malfunction or no picture	Video input signal type for video source not defined in the OSD of the respective video input	See chapter 2.13 OSD menu settings - menu of the respective input

6 FAQ - Troubleshooting Interface functions - general

For any troubles which may occur, check the following table for a solution before requesting support from your vendor.

Symptom	Possible reason	Possible solution
No picture/black picture (factory picture).	Not all connectors have been reconnected to factory head-unit or monitor after installation.	Connect missing connectors.
	CAN-bus wires connected to CAN-bus in wrong place.	Refer to the manual where to connect to the CAN-bus. If not mentioned, try another place to connect to the CAN-bus.
	No power on video-interface (all LED video-interface are off).	Check power connection of interface.
No picture/black picture/white picture (inserted picture) but factory picture is OK.	No picture from video source.	Check on other monitor whether video source is OK.
	No video-source connected to the selected interface input.	Check settings dips 1 to 5 of 8dip bench of video interface which inputs are enabled and switch to corresponding input(s).
	Setting of video signal type of active video input is not equal to video signal type of connected video-source.	Set the video signal type of the video source correctly in the OSD menu of the corresponding input.
	LVDS cables plugged in wrong place.	Double-check whether order of LVDS cables is exactly connected according to manual. Plugging into head-unit does not work when the manual says to plug into monitor and vice versa.
	Wrong settings of video-interface.	Verify the vehicle-specific dip switch position in the instructions. If necessary, test different positions of the vehicle-specific dip switches. Perform a power reset after each change (briefly remove the black 10-pin micro-fit power socket once).
Inserted picture totally wrong size or position.	Wrong settings of video-interface.	Verify the vehicle-specific dip switch position in the instructions. If necessary, test different positions of the vehicle-specific dip switches. Perform a power reset after each change (briefly remove the black 10-pin micro-fit power socket once).
Inserted picture double or multiple times on monitor.		
Inserted picture distorted, flickering or running vertically.	Video sources output set to AUTO or MULTI which causes a conflict with the interfaces auto detection.	(Only concerns video-sources with selectable output – e.g., DVD-Players, TV-Tuners, etc.) Set video source output fixed to PAL or NTSC. It is best to set all video sources to the same video signal type output.
	If error occurs only after source switching: Connected sources are not set to same video signal type output.	Set all video sources to the same video signal type output.
	Setting of video signal type of active video input is not equal to video signal type of connected video-source.	Set the video signal type of the video source correctly in the OSD menu of the corresponding input.
Inserted picture b/w.	Setting of video signal type of active video input is not equal to video signal type of connected video-source.	Set the video signal type of the video source correctly in the OSD menu of the corresponding input.

Symptom	Possible reason	Possible solution
Only on first inserted video activation after IGN on, the inserted picture is distorted.	Menu item <i>Trigger</i> of the corresponding video-input is set to <i>CAN-bus</i> though analogue signal triggering is used.	Open OSD-menu of corresponding video input and set the menu item <i>Trigger</i> to <i>Wire</i> .
Inserted picture qual. bad.	Picture settings have not been adjusted.	Use the 3 switches on interface-box or optional HDA-RC cable remote control to set the desired picture settings for the respective video source in the OSD menu of the interface.
Inserted picture size slightly wrong.		
Inserted picture position wrong.		
Camera input picture flickers.	Camera is being tested under fluorescent light (neon).	Test camera under natural light outside the garage.
Camera input picture is bluish.	Protection sticker not removed from camera lens.	Remove protection sticker from lens.
Camera input picture black.	Camera power taken directly from reverse gear lamp.	Use relay or electronic filter to "clean" reverse gear lamp power. Alternatively, camera power can be taken from green wire CAM Power.
Camera input picture has distortion.		
Switching to inserted video does not work after IGN on or vehicle startup- temporary.	Interface has a start-up delay during which, after interface start-up for certain time, there is no switching to inserted video. Required to prevent the factory system from crashing.	In OSD menu of V4, default delay can be shortened time in menu item <i>StartDelay</i> , this might especially make sense on installations without connection to CAN-bus. Note: Too short <i>StartDelay</i> setting can cause (sporadically) black-screen of factory picture or loss of factory touch-screen control.
Not possible to switch video sources by OEM button.	Function not supported in this vehicle.	Use external keypad for AV-switching.
Not possible to switch video sources by external keypad.	Pressed too short.	For video source switching a longer press of about 2.5 seconds is required.
	Video-input is not enabled.	Enable corresponding inputs (dips 1 to 5 of 8dip bench).
Interface does not switch to reverse camera input when reverse gear is engaged or does not switch to side camera input(s) when turn signal in on.	CAN-bus of vehicle not fully compatible with interface. Function not supported.	Follow the manual for R-gear signal or turn signal from analogue signal.
	Menu item <i>trigger</i> in the OSD of the video-input was set to <i>Wire</i> .	Switch on corresponding input by external button or 12V to corresponding trigger input. Open OSD-menu of corresponding video input and set the menu item <i>Trigger</i> to <i>CAN bus</i> .
OSD-menu of interface cannot be accessed/opened.	No inserted video input of interface is active, factory picture is displayed.	Each video input of interface has its own OSD with its own settings. The OSD for each input can only be opened when the input is displayed.

7 Technical Support

Please note that direct technical support is only available for products purchased directly from NavLinkz GmbH. For products bought from other sources, contact your vendor for technical support.

For any support requests make sure to at least prepare:

- Product code and serial number of all involved products
- Vehicle data such brand, model, year of production, VIN, infotainment model

NavLinkz GmbH
Distribution/Tech dealer-support
Heidberghof 2
D-47495 Rheinberg

Tel +49 2843 17595 00

Email mail@navlinkz.de



10R-06 5485



Made in China

