

Video-inserter

RL1-CONCERT

Compatible with Audi vehicles with Symphony3 or Concert3 radio with 6.5inch monitor

 


example

Video-inserter for one rear-view camera and two additional video inputs

Product features

- Video-inserter for factory-infotainment systems
- 1 CVBS Rear-view camera video-input
- 2 CVBS video-inputs for after-market devices (e.g. USB-Player, DVB-T2 tuner, ...)
- Automatic switching to rear-view camera input on engagement of the reverse gear
- Video-in-motion in drive mode (ONLY for connected video-sources)
- Video inputs NTSC compatible



Contents

1. Prior to installation

- 1.1. Delivery contents
- 1.2. Verification interface compatibility to vehicle and accessories
- 1.3. Connectors video interface
- 1.4. Dip-switch settings video interface
- 1.4.1. Enabling the interface's video inputs (dip 2-3)
- 1.4.2. Rear-view camera setting (dip 5)

2. Installation

- 2.1. Genuine components to be connected
- 2.2. Connection schema
- 2.3. Connection 20pin PNP cable
- 2.4. Connection picture signal cable
- 2.5. Connection video sources
- 2.5.1. After-market rear-view camera
- 2.5.2. Audio-insertion
- 2.6. Connection video-interface and keypad
- 2.7. Picture settings

3. Switching the video sources

- 3.1. By infotainment buttons
- 3.2. By external keypad
- 4. Specifications
- 5. Frequently asked questions
- 6. Technical support



Legal Information

By law, watching moving pictures while driving is prohibited, the driver must not be distracted. We do not accept any liability for material damage or personal injury resulting, directly or indirectly, from installation or operation of this product. This product should only be used while standing or to display fixed menus or rear-view-camera video when the vehicle is moving, for example the MP3 menu for DVD upgrades.


Changes/updates of the vehicle's software can cause malfunctions of the interface. We offer free software-updates for our interfaces for one year after purchase. To receive a free update, the interface must be sent in at own cost. Labor cost for and other expenses involved with the software-updates will not be refunded.

1. Prior to installation

Read the manual prior to installation.

Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources.

1.1. Delivery contents

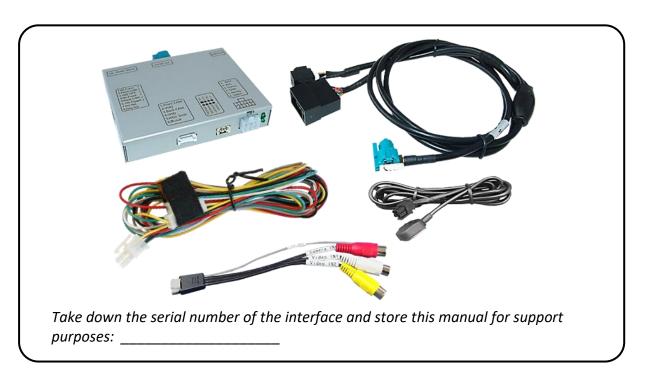






1.2. Verification – interface compatibility to vehicle and accessories

Compatibility					
Brand	Compatible vehicles		infotainment systems		
Audi	A4 (8K) from 09/2007 til 08/2015 A5 (8T) from 06/2007 til 06/2016 Q5 (8R) from 11/2008 til 12/2016		Symphony3 or Concert3 radio with 6.5inch monitor		
Limitations					
Video only		The interface inserts ONLY video signals into the infotainment. For inserting Audio signals either the possibly existing factory audio-AUX-input or a FM-modulator can be used. If no factory AUX input is available, the optional audio-AUX cable (item no. AUX-006) can be used for a connection to the factory radio plug (coding required!). If 2 audio sources shall be connected to the infotainment, an additional electronic is necessary to switch them.			
Factory rear-view camera		Automatically switching back from inserted video to factory rearview camera is only possible while the reverse gear is engaged. To delay the switch-back an additional electronic part is required.			
Video input signal		NTSC video sources co	ompatible only.		



1.3. Connectors – video interface

The video-interface converts the video signals of connected after-market sources in a factory monitor compatible picture signal which is inserted in the factory monitor, by using separate trigger options.

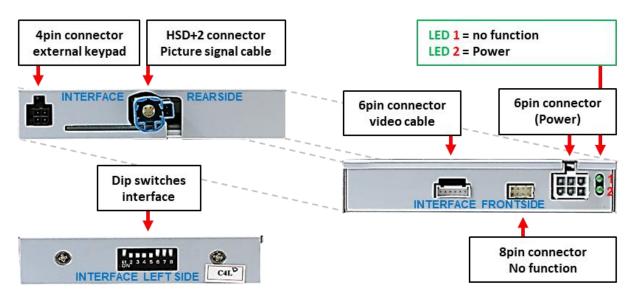

1.4. Dip-switch settings – video interface

Some settings must be selected by the dip-switches on the video-interface. Dip position down is ON and position up is OFF.



Dip	Function	ON (down)	OFF (up)
1	No function		set OFF
2	CVBS AV1-input	enabled	disabled
3	CVBS AV2-input	enabled	disabled
4	No function		set OFF
5	Rear-view cam type	after-market	factory or none
6	No function	-	set OFF
7		-	set OFF
8		-	set OFF

After each Dip-switch-change a power-reset of the interface-box has to be performed!

See following chapters for detailed information.



1.4.1. Enabling the interface's video inputs (dip 2-3)

Only the enabled video inputs can be accessed when switching through the interface's video sources. It is recommended to enable only the required inputs, disabled inputs will be skipped when switching through the video-interfaces inputs.

1.4.2. Rear-view camera setting (dip 5)

If set to OFF, the interface switches to factory picture while the reverse gear is engaged to display factory rear-view camera.

If set to ON, the interface switches to its rear-view camera input "Camera-IN" while the reverse gear is engaged.

Note: Dip 1, 4, 6, 7 and 8 are out of function and have to be set to OFF.

2. Installation

To install the interface, first switch off the ignition and disconnect the vehicle's battery. Please read the owner's manual of the car, regarding the battery's disconnection! If required, enable the car's Sleep-mode (hibernation mode)
In case the sleep-mode does not succeed, the disconnection of the battery can be done with a resistor lead.

As with any installation of retrofit equipment, a stand-by test is neccessary after the installation of the video interface, to ensure that the unit also switches off after reaching the vehicle's sleep mode.

Before the final installation, we recommend a test-run of the interface. Due to changes in the production of the vehicle manufacturer, there's always the possibility of incompatibility.

Note: Before a final installation, we recommend a test-run to ensure the compatibility of the vehicle and the interface.


Due to changes in the production of the vehicle manufacturer there's always a possibility of incompatibility.

2.1. Genuine components to be connected

The connections for the video interface have to be performed at the factory climate control unit and the factory monitor.




2.2. Connection schema

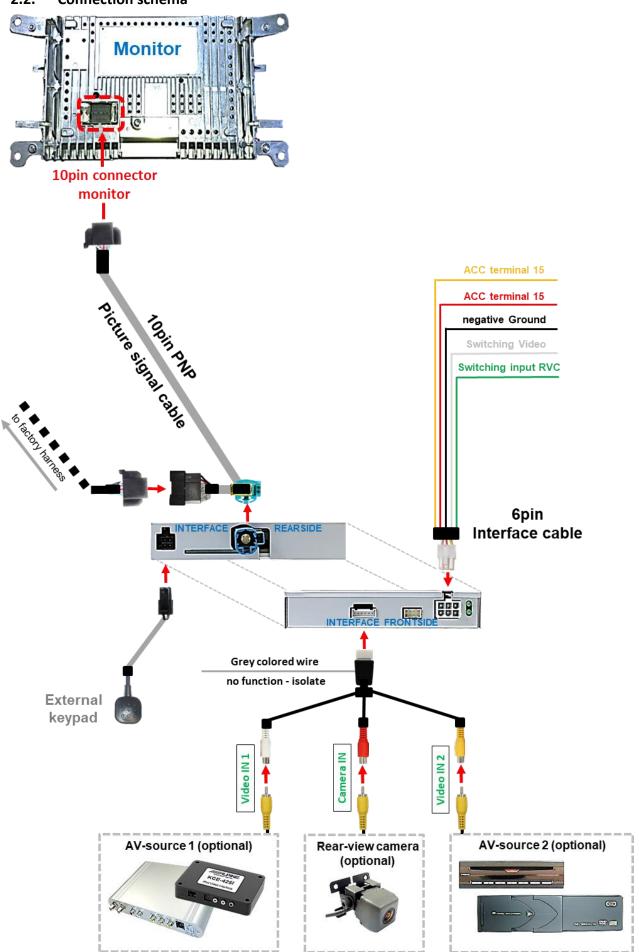




2.3. Connection - 6pin interface cable

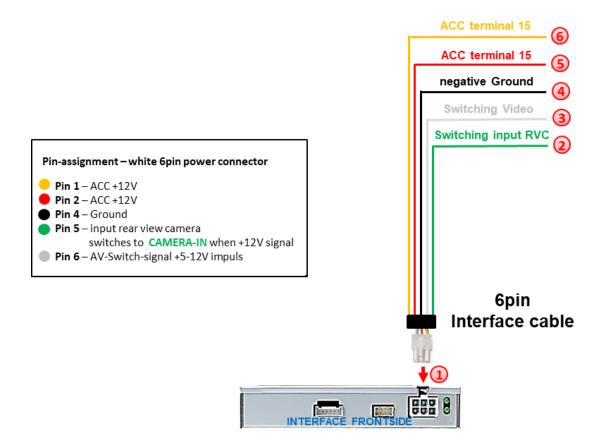

- 1 Connect the white female 6pin connector of the 6pin interface cable to the male 6pin connector of the video interface.
- Connect the green wire of the 6pin interface cable to +12V of the reverse gear signal. (e.g. reversing light).
- If desired, the white wire of the 6pin interface cable can be used alternatively to the external button to switch the video sources (12V pulse for 2-3 seconds).
- 4 Connect the black wire of the 6pin interface cable to vehicle ground.
- Connect the red wire of the 6pin interface cable to +12V ACC terminal 15.
- 6 Connect the yellow wire of the 6pin interface cable to +12V ACC terminal 15.

Note: The connection of the green wire (Reverse signal) will be described in chapter "Aftermarket rear-view camera". The white wire, can be used by +12V impulse to switch the enabled video sources, same as the keypad (see chapter "video interface-operation").

2.4. Connection – picture signal cable

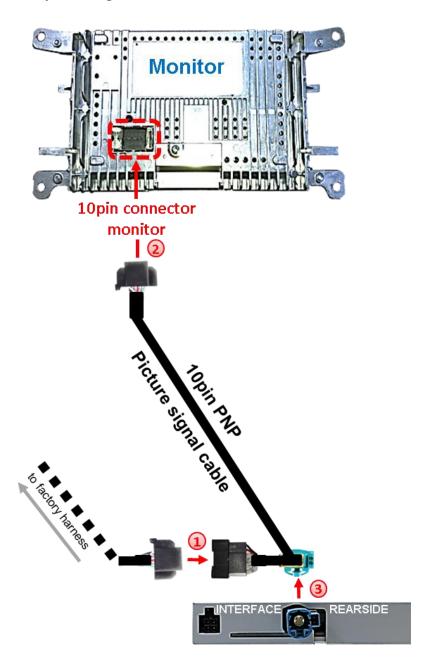


- Remove the female 10pin connector from the rearside of the monitor and connect it to the male 10pin connector of the picture signal cable.
- Connect the female 10pin connector of the picture signal cable to the previously become free male 10pin connector at the rearside of the monitor.
- 3 Connect the picture signal cable's female waterblue colored HSD+2 connector to the HSD+2 connector of the video interface.



2.5. Connection - video sources

It is possible to connect one after-market rear-view camera and two more video sources to the video-interface.

Note: Before the final installation, we recommend a test-run to ensure the compatibility of the vehicle and the interface. Due to changes in the production of the vehicle manufacturer there's always a possibility of incompatibility.

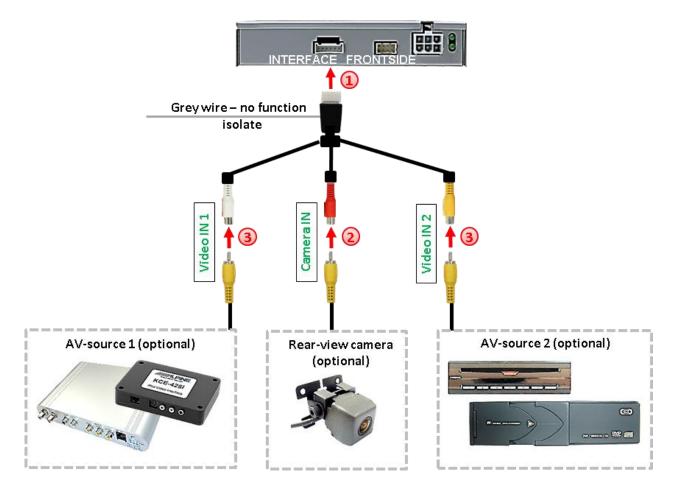


- 1 Connect the female 6pin connector of the video cable to the male 6pin connector of the video-interface.
- 2 Connect the video RCA connector of the rear-view camera to the female RCA connector "Camera-IN" of the video cable.
- 3 Connect the video RCA connectors of additional AV sources to the female RCA connectors "Video IN 1" und "Video IN 2".



2.5.1. After-market rear-view camera

Note: Do not forget to set dip5 of video-interface to ON before testing.

To switch to the rear-view camera when reverse gear is engaged, an external switching signal from the reverse gear light is required. As the reverse gear light signal contains electronic interference, a traditional open relay (e.g AC-RW-1230 with wiring AC-RS5) or filter (e.g. AC-PNF-RVC) is required. Below schema shows the use of a relay (normally open).

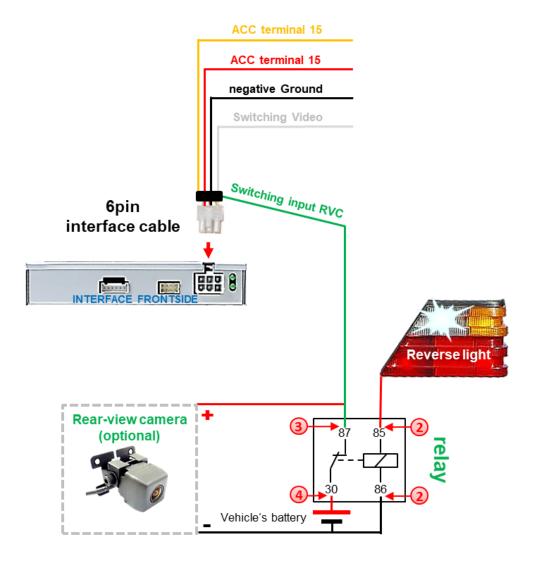

- (1) Connect the green switching input cable to the output connector (87) of the relay.
- 2 Connect the Reverse light's power-cable to coil (85) and the vehicle's ground to coil (86) of the relay.
- 3 Connect the output connector (87) of the relay to the rear-view camera's power-cable, like you did it to the green switching input cable before.
- oxdot Connect stabile and permanent +12V to the relay's input connector (30).

Sage 1




2.5.2. Audio Insertion

This interface can only insert video signals into the factory infotainment. If an AV-source is connected, audio insertion must be done by factory audio AUX input or FM-modulator. If no factory AUX input is available, the optional audio-AUX cable (item no. AUX-006) can be used for a connection to the factory radio plug (coding required!). The inserted video-signal can be activated simultaneously to each audio-mode of the factory infotainment.


If 2 AV sources shall be connected to the infotainment, additional electronic is necessary to switch the audio signals.

2.6. Connection - Video Interface and external keypad

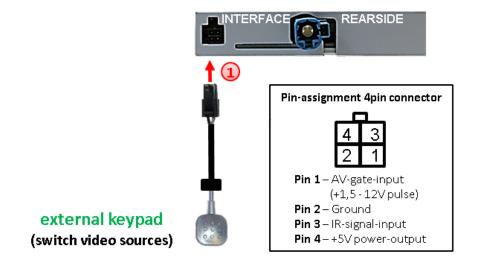


Connect the 4pin female connector of the external keypad to the male 4pin connector of the video interface.

 Note: Regardless if it'll be used or not, the external keypad should always be connected! In case of non-using, it should be invisibly hidden together with the video interface.



2.7. Picture settings

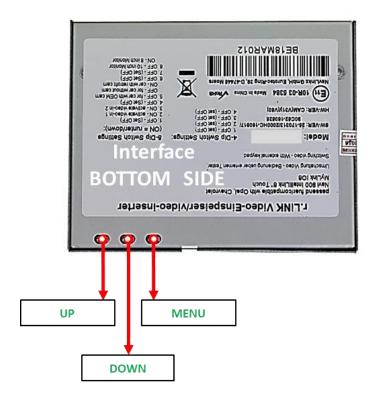

The picture settings are adjusted by the 3 buttons on the video-interface. Press the MENU button to open the OSD settings menu or to switch to the next menu item. Press UP and DOWN changes the selected value. The buttons are embedded in the housing to avoid accidental changes during or after the installation. Picture settings have to be done separately for AV1, AV2 and CAMERA-IN while the corresponding input is selected and visible on the monitor.

 
Note: The OSD menu can only be shown when a working video source is connected to the selected video-input of the interface.

The following settings are available:

Contrast
Brightness
Saturation
Position H (horizontal picture position)
Position V (vertical picture position)



Note: To adjust the reverse picture, engage the reverse gear.



3. Switching the video sources

Press theinterface's external keypad to switch the video source. Each repetition will switch to the next enabled input. If all inputs are enabled the order is:

Factory video → video IN1 → video IN2 → factory video →

Disabled inputs will be skipped.

Alternatively the white wire of the 6pin cable can be used with a +5-12V pulse to switch the video-sources.

Note: Even if the switching through several video sources by the keypad mightn't be required, the keypad's invisible connection and availability is strongly recommended.

4. Specifications

BATT/ACC range 7V - 25V
Stand-by power drain 45mA
Power consumption 200mA
Video input 0.7V - 1V
Video input formats NTSC

Temperature range -40°C to +85°C

Dimensions video-box 113 x 25 x 115 mm (W x H x D)



5. FAQ – Trouble shooting Interface functions

For any troubles which may occur, check the following table for a solution before requesting support from your vendor.

Symptom	Reason	Possible solution
	Not all connectors have been reconnected to factory head-unit or monitor after installation.	Connect missing connectors.
No picture/black picture (factory	No power on CAN-bus box (all LED CAN-bus box are off).	Check power supply of CAN-bus box. Check CAN-bus connection of CAN-bus box.
picture).	CAN-bus box connected to CAN-bus in wrong place.	Refer to the manual where to connected to the CANbus. If not mentioned, try another place to connect to the CAN-bus.
	No power on video-interface (all LED video-interface are off).	Check whether CAN-bus box delivers +12V ACC on red wire output of 8pin to 6pin cable. If not cut wire and supply ACC +12V directly to video-interface.
	No picture from video source.	Check on other monitor whether video source is OK.
No picture/black picture/white picture	No video-source connected to the selected interface input.	Check settings dips 1 to 3 of video interface which inputs are activated and switch to corresponding input(s).
(inserted picture) but factory picture is OK.	LVDS cables plugged in wrong place.	Double-check whether order of LVDS cables is exactly connected according to manual. Plugging into head-unit does not work when the manual says to plug into monitor and vice versa.
Inserted picture totally wrong size or position. Inserted picture double or 4 times on monitor.	Wrong monitor settings of video-interface.	Try different combinations of dips 7 and 8 of video-interface. Unplug 6pin power after each change.
Inserted picture	Video sources output set to AUTO or MULTI which causes a conflict with the interfaces auto detection.	Set video source output fixed to PAL or NTSC. It is best to set all video sources to the same standard.
distorted, flickering or running vertically.	If error occurs only after source switching: Connected sources are not set to the same TV standard.	Set all video sources to the same standard.
	Some interfaces can only	Check manual whether there is a limitation to NTSC
Inserted picture b/w. Inserted picture qual. bad.	Picture settings have not been adjusted.	Use the 3 buttons and the interface's OSD to adjust the picture settings for the corresponding video input.
Inserted picture size slightly wrong.		
Inserted picture position wrong.		
Camera input picture flickers.	Camera is being tested under fluorescent light which shines directly into the camera.	Test camera under natural light outside the garage.
Camera input picture is bluish.	Protection sticker not removed from camera lens.	Remove protection sticker from lens.

Symptom	Reason	Possible solution
Camera input picture black.	Camera power taken directly	Use relay or electronics to "clean" reverse gear lamp power. Alternatively, if CAN-bus box is compatible
Camera input picture has distortion.	from reverse gear lamp.	with the vehicle, camera power can be taken from green wire of 6pin to 8pin cable.
Camera input picture settings cannot be adjusted.	Camera input picture settings can only be adjusted in AV2 mode.	Set dip 3 of video-interface to ON (if not input AV2 is not already activated) and connect the camera to AV2. Switch to AV2 and adjust settings. Reconnect camera to camera input and deactivate AV2 if not used for other source.
Graphics of a car in camera input picture.	Function PDC is ON in the interface OSD.	In compatible vehicles, the graphics will display the factory PDC distance. If not working or not wanted, set interface OSD menu item UI-CNTRL to ALLOFF.
Chinese signs in camera input picture	Function RET or ALL is ON (function for Asian market) in the interface OSD.	Set interface OSD menu item UI-CNTRL to ALLOFF or PDCON.
Not possible to switch video sources by OEM button.	CAN-bus interface does not support this function for vehicle.	Use external keypad or cut white wire of 6pin to 8pin cable and apply +12V impulses for AV-switching.
Not possible to switch	Pressed too short.	For video source switching a longer press of about 2.5 seconds is required.
video sources by external keypad.	SW-version of interface does not support external keypad.	Use OEM-button or cut white wire of 6pin to 8pin cable and apply +12V impulses for AV-switching.
Interface does not switch to camera input when reverse gear is engaged.	CAN-bus interface does not support this function for the vehicles.	Cut the green wire of the 6pin to 8pin cable and apply +12V constant from reverse gear-lamp signal. Use relay to "clean" R-gear lamp power.
Interface switches video-sources by itself.	CAN-bus interface compatibility to vehicle is limited.	Cut the grey wire of 6pin to 8pin and isolate both ends. If problem still occurs, additionally cut the white wire of 6pin to 8pin cable and isolate both ends.

6. Technical Support

Please note that direct technical support is only available for products purchased directly from NavLinkz GmbH. For products bought from other sources, contact your vendor for technical support.

NavLinkz GmbH distribution/tech dealer-support Heidberghof 2 D-47495 Rheinberg

Tel +49 2843 17595 00 Email mail@navlinkz.de

