Santa (ruz

Radio Face Quick Start Guide

What's in the Box



Installation

The factory radio in this vehicle is a two or three-part system consisting of: a radio controller mounted in the upper-right side of the dash, an optional EQ or tape player located in the center of the lower dash and the radio receiver box located under the dash just above the gas pedal area. Before installing, disconnect the vehicle's negative battery terminal.

- **1.** Access the radio receiver box by removing the panel just below the steering column. Remove the two screws located at the bottom corners of the panel, then remove the panel.
- 2. Locate the receiver box just above the gas pedal. Remove the three screws holding the receiver box in place. Unplug the radio controller, EQ/cassette unit and main harnesses. Remove the antenna plug, and then the receiver box.
- 3. Next locate the controller in the dashboard (located to the upper right of the instrument panel) Remove the four screws holding the trim bezel, and carefully remove it from around the gauges. Carefully remove the four screws holding the controller in place, then remove the controller from the dash.
- **4.** Connect the Face to Body Cable to the Santa Cruz Radio Face and route it from the controller location to the receiver box location through the opening in the dash.
- 5. Next, connect the Santa Cruz Radio Face to the RetroSound® radio body (Motor). Plug in the Face to Body Cable by connecting the ribbon cable to the front of the radio body and the shaft plugs to the sides of the radio body. While looking down at the radio body with the cables coming out the back, the imprinted "RetroSound" will be on the top of the radio body chassis. The cable marked "R" plugs into the input to the right of "RetroSound" on the radio body, and the cable marked "L" plugs into the left side.
- **6.** Connect the GM Adapter Harness and Antenna Adapter to the Radio Motor. Refer to the Installation and Assembly Manual on our website for wiring instructions.
- 7. Using the backstrap, mount your radio body into the receiver box location above the gas pedal.
- **8.** Mount the Santa Cruz Radio Face into the controller location. Reconnect the vehicle's battery and test the system to ensure everything is connected properly.
- 9. Replace the trim, bezel and lower dash panel to complete the installation.

Refer to the user manual included in your motor box or on our website for more comprehensive instructions.



Modern Sound For Your Classic

Santa Cruz

Radio Face Quick Start Guide

Control Layout



Radio Presets

Setting Radio Presets

To set a preset, tune to the station you want to set the preset to, and then press and hold the desired Preset Button(5) for two seconds.

Recalling Radio Presets

To recall a preset, simply press the Preset $\operatorname{Button}(5)$ your station was set to previously.

Basic Operation

Power On/Off

Press the Top-Front $\mathsf{Knob}(1)$ to power the unit on. Press and hold the Top-Front $\mathsf{Knob}(1)$ to power the unit off.

Volume

Rotate the Top-Front Knob(1) to change the volume.

Changing Source Modes

Rotate the Top-Rear Knob(2) clockwise to cycle through the source modes.

Changing Radio Bands

Rotate the Bottom-Rear Knob(4) counter-clockwise to cycle through the radio bands.

Tune

Rotate the Bottom-Front Knob(3) to scroll through the stations.

Mute On/Off

Press the Bottom-Front Knob(3) to mute and unmute.

Equalizer (EQ)

Press the Top-Front $\mathsf{Knob}(1)$ to enter the Tone Control sub-menu. Press and release the Top-Front $\mathsf{Knob}(1)$ until you see the EQ setting you'd like to adjust. Rotate the Top-Front $\mathsf{Knob}(1)$ to adjust the setting. Press the Top-Front $\mathsf{Knob}(1)$ to move to the next item, and repeat to adjust each option. Let the unit time out to set.

Setting the Clock

Press and hold the Bottom-Front $\mathsf{Knob}(3)$ to enter the System Settings sub-menu. Rotate the Bottom-Front $\mathsf{Knob}(3)$ to cycle through the choices until you see CLK , then press the Bottom-Front $\mathsf{Knob}(3)$ to select. Rotate the Bottom-Front $\mathsf{Knob}(3)$ to adjust the hours. Then press the Bottom-Front $\mathsf{Knob}(3)$ again to move on to minutes. Rotate the Bottom-Front $\mathsf{Knob}(3)$ to adjust the minutes. Let the unit time out to set.

Display Color*

Press and hold the Bottom-Front $\mathsf{Knob}(3)$ to enter the System Settings sub-menu. Rotate the Bottom-Front $\mathsf{Knob}(3)$ to cycle through the choices until you see SCAN, then press the Bottom-Front $\mathsf{Knob}(3)$ to cycle through the colors. Let the unit time out to set.

Beep On/Off

Press and hold the Bottom-Front Knob(3) to enter the System Settings sub-menu. Rotate the Bottom-Front Knob(3) to cycle through the choices until you see BEEP ON/OFF, then press the Bottom-Front Knob(3) to choose between BEEP ON or BEEP OFF. Let the unit time out to set.

*Some features are not available on all radios.

