

RetroSound®

Anleitung: Reprogrammierung der Fernbedienung des Radio-models „APACHE“.



- Schritt 1:** Schalten Sie das Radio ein.
- Schritt 2:** Drücken und halten Sie den rechten Drehknopf für 2 Sekunden.
- Schritt 3:** Drücken Sie zwei Mal die Aufwärts-Taste und zwei Mal die Abwärts-Taste.
Als Bestätigung folgt ein Beep-Ton.
- Schritt 4:** Drücken Sie eine beliebige Taste der Fernbedienung zur Neukopplung der Fernbedienung mit dem Radio.

Bei Fragen stehen wir Ihnen gerne zur Verfügung.
Sie erreichen uns per Email-Adresse info@ampire.de oder telefonisch unter der Rufnummer 02181-81955-0.

RetroSound®

Anleitung: Reprogrammierung der Fernbedienung der Radiomodelle „Model One“ und „RC900“.



- Schritt 1:** Schalten Sie das Radio ein.
- Schritt 2:** Drücken und halten Sie den rechten Drehknopf für 2 Sekunden.
- Schritt 3:** Geben Sie mit den Bedientasten den folgenden Code ein, „1122“. Als Bestätigung folgt ein Beep-Ton.
- Schritt 4:** Drücken Sie eine beliebige Taste der Fernbedienung zur Neukopplung der Fernbedienung mit dem Radio.

Bei Fragen stehen wir Ihnen gerne zur Verfügung.
Sie erreichen uns per Email-Adresse info@ampire.de oder telefonisch unter der Rufnummer 02181-81955-0.

RetroSound®

HOW TO CODE A NEW REMOTE INTO YOUR MODEL ONE RADIO
(FOR QUESTIONS CALL 888-325-1555 OR SEND EMAIL TO SUPPORT@RETROSOUNDUSA.COM)

1. TURN ON RADIO




2. PRESS & HOLD
FOR 2 SECONDS

3. PRESS "1122" USING PRESET BUTTONS, WAIT FOR BEEP,
GO TO STEP 4

1. TURN ON RADIO BY PRESSING LEFT CENTER SHAFT BUTTON
2. PRESS AND HOLD THE RIGHT CENTER SHAFT BUTTON FOR 2 SECONDS,
THEN RELEASE BUTTON
3. PRESS THE FOLLOWING PRESET BUTTONS "1122" LISTEN FOR BEEP,
GO TO STEP 4
4. PRESS ANY BUTTON ON THE REMOTE TO ALLOW THE RADIO
TO RECOGNIZE THE REMOTE.

RetroSound®

HOW TO CODE A NEW REMOTE INTO YOUR APACHE RADIO
(FOR QUESTIONS CALL 888-325-1555 OR SEND EMAIL TO SUPPORT@RETROSOUNDUSA.COM)

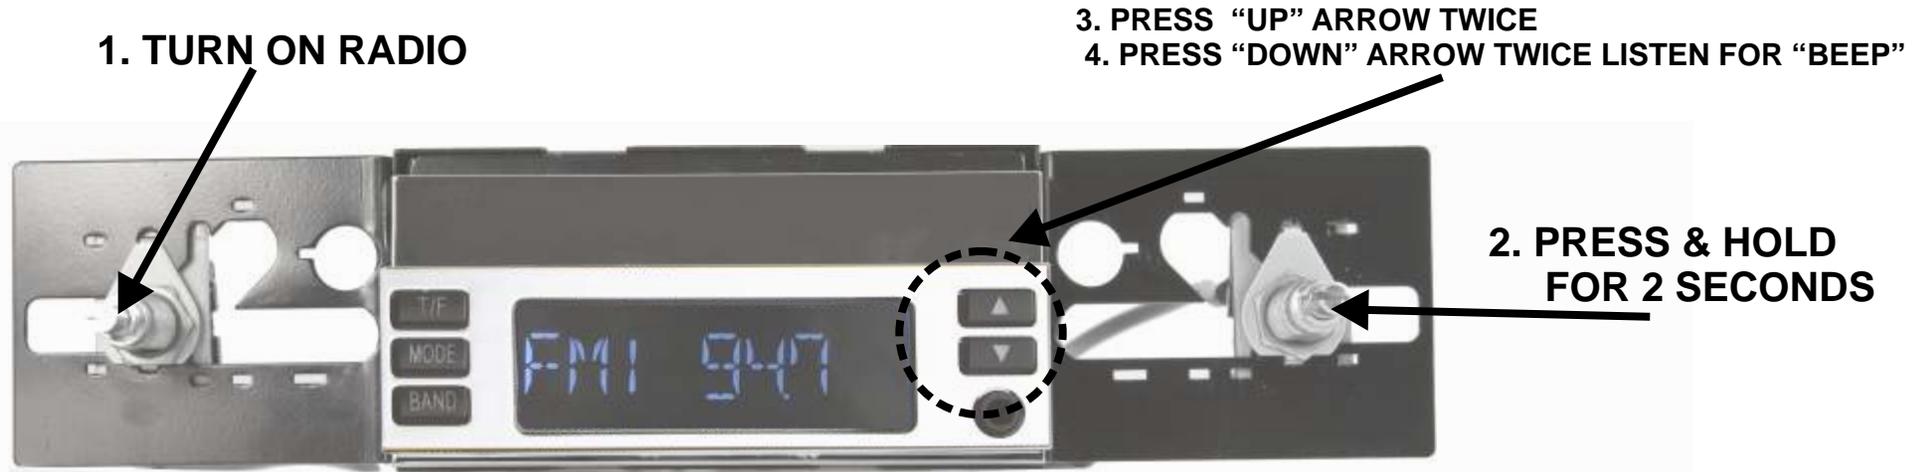

1. TURN ON RADIO BY PRESSING LEFT CENTER SHAFT BUTTON
2. PRESS AND HOLD THE RIGHT CENTER SHAFT BUTTON FOR 2 SECONDS, THEN RELEASE BUTTON
3. PRESS THE UP ARROW KEY TWICE
4. PRESS THE DOWN ARROW KEY TWICE, LISTEN FOR BEEP– GO TO STEP 5
5. PRESS ANY BUTTON ON THE REMOTE TO ALLOW THE RADIO TO RECOGNIZE THE REMOTE.