



Audi A6(C7) WIRING DIAGRAM

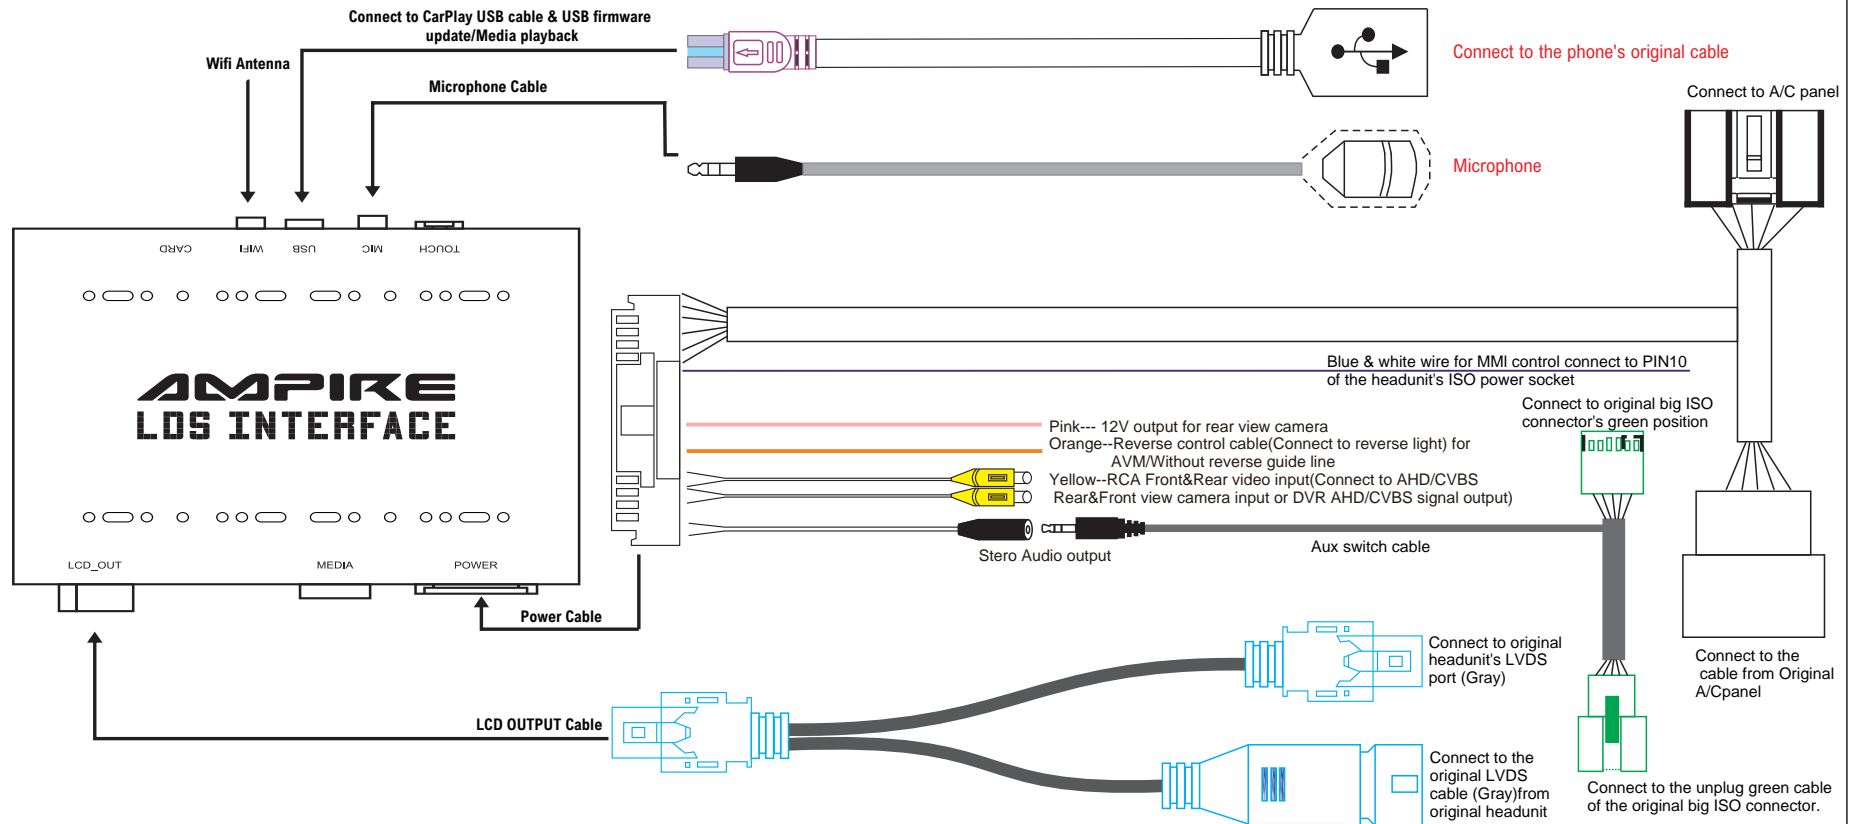

DIP SWITCH SETTING

(After changing the dip code,press "reset"or power-on again)

PIN1	PIN2	PIN3	PIN5	CAR MODEL
ON	OFF	ON	OFF	2013-2015 A6/A7(C7)
PIN4	OFF / ON	NG/NG		
PIN6	OFF / ON	NG/NG		
PIN7	OFF / ON	NG/Touch point coordinate correction,and turn to "OFF"		
PIN8	OFF / ON	NG/NG		

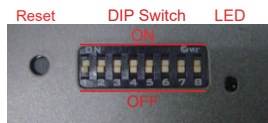

Remark:
Pls keep in the original AUX interface when switch to CarPlay interface
(if there is no AUX, pls activate it by computer)



- 1) For A6L/A7 control panel, long press and hold "NAV" button to switch "MENU", long press "NAV" button again, exit the switch MENU
- 2) Short press "TEL" button to open "Siri".
- 3) Knob to control up/down/right/left/ok.