
Audi A6(C6-MMI 3G) WIRING DIAGRAM---LDS-A6C6-CP/LDS-Q3-CP

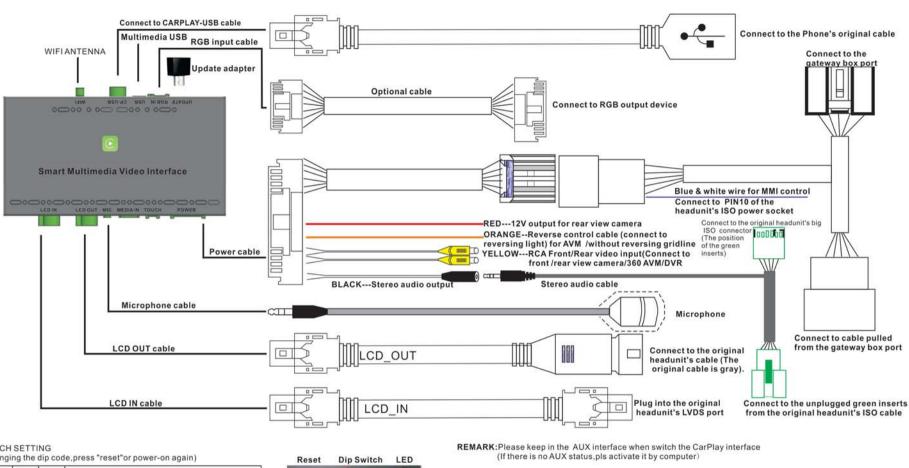

DIP SWITCH SETTING

(After changing the dip code, press "reset" or power-on again)

PIN1	PIN2	PIN3	PIN5	CAR MODEL	
ON	OFF	OFF	OFF	2010-2012 A6L/A7(C6) 2010-2012 Q7	
OFF	OFF	ON	OFF	2009~2018 high-end A4L/A5/Q5	
ON	ON	OFF	OFF	High-end 7" A1/Q3	
OFF	ON	OFF	OFF	Low-end 6.5" A1/Q3	
OFF	OFF	OFF	OFF	USA version A4/A5/Q5	
PIN4	OFF	/ON	Reversing gridline/Enable 360 panoramic		

PIN4	OFF/ON	Reversing gridline/Enable 360 panoramic	
PIN6	OFF/ON	Rear view camera CVBS input / RGB input	
PIN7	OFF/ON	NG/Touch point coordinate correction, and turn to "OFF"	
PIN8	OFF/ON	Aftermarket rear view CAM/Original rear view CAM	





- 1) For A6/A7 control panel, long press and hold "NAV" button to switch MENU,long press "NAV" button again, exit the switch MENU.
- 2)Short press "INFO" button to open "Siri".
- 3)Knob to control up/down/right/left/ok.



- 1) For A1/Q3 control panel, long press and hold Voice control button to switch MENU, long press Voice control button again, exit the MENU.
- 2) Short press "Voice control" button to open "Siri".
- 3)Steering wheel Roller to control up/down/ok.