



Porsche(PCM4.0-2017~2019) WIRING DIAGRAM---LDS-PCM40-MINI

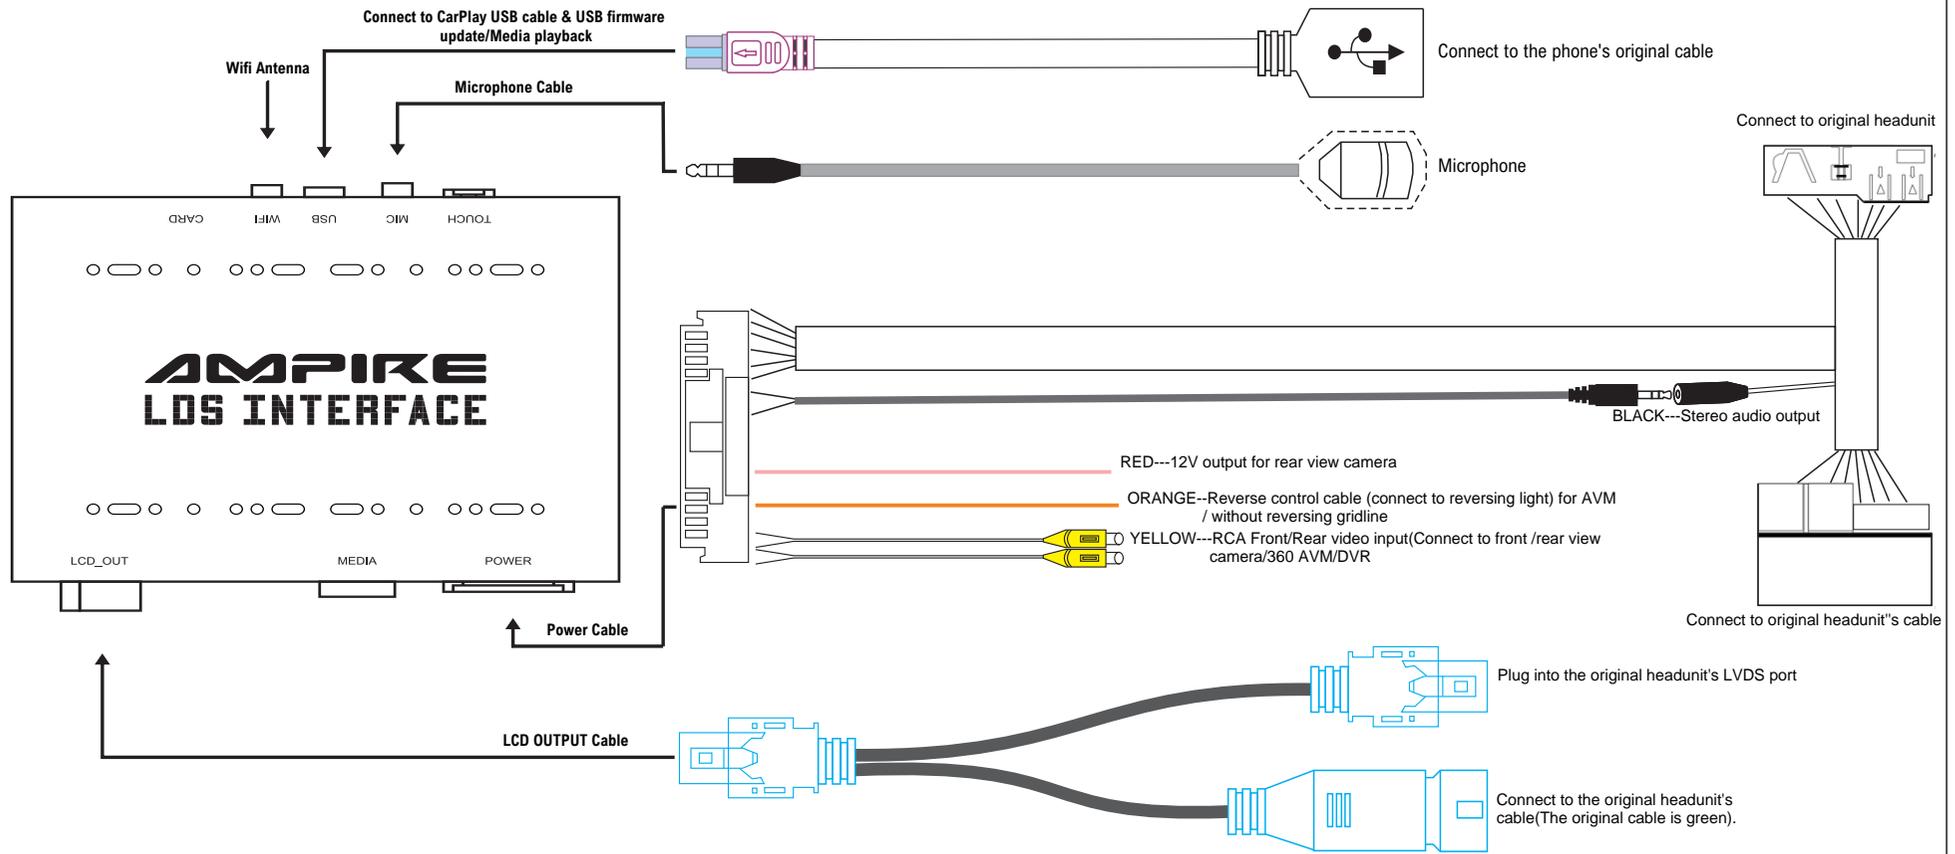

DIP SWITCH SETTING

(After changing the dip code,press "reset"or power-on again)

PIN1	OFF / ON	NG/NG
PIN2	OFF / ON	NG / Touch point coordinate correction,and then turn on"OFF"
PIN3	OFF / ON	NG/NG
PIN4	OFF / ON	NG/NG
PIN5	OFF / ON	NG/NG
PIN6	OFF / ON	NG/NG
PIN7	OFF / ON	NG/NG
PIN8	OFF / ON	NG/NG

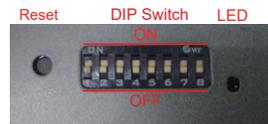

REMARK:Please keep in the AUX interface when switch the CarPlay interface



- 1) Long press and hold "NAV" button to switch MENU, long press"NAV" button again,exit the switch MENU.
- 2)Other functions use touch screen to control it.