


264/269/265 KIT

Installation instructions for:

- Chevrolet Lumina APV 1990-96
- Oldsmobile Silhouette 1990-96
- Pontiac Grand Prix 1990-93
- Pontiac Trans Sport 1990-96
- Saturn SC Sports Coupe 1991-94
- Saturn SL Sedan 1991-94
- Saturn SW Wagon 1993-94

Once the original radio is removed, be sure to **keep the factory brackets**. If the original brackets are lost or missing, follow the guide below. You may need to use and modify additional parts that are included with your Newport in order to complete the installation.

Make sure you test the fitment before installing.

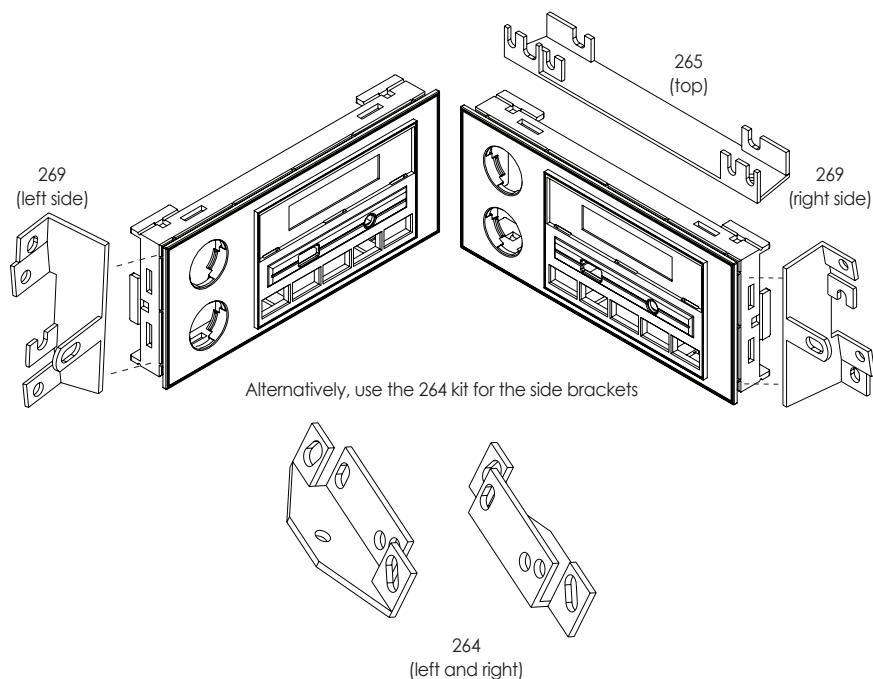

WIRING CODES

In your vehicle specific kit, you'll find a wiring harness for your vehicle. This wiring harness plugs directly into your factory wiring harness. Listed below are the vehicle specific color codes from your factory wiring harness. These are for reference only. Always make sure to test your wiring to ensure that they are correct. If your vehicle is equipped with a factory Delco/Bose sound system, you will require a special adapter to install your Newport if you wish to retain your factory amplified speaker system.

GENERAL MOTORS

Memory (+12 volt constant) Orange

Ignition (+12 volt switched) Yellow

Ground (-) Black

Illumination Gray

Dimmer Brown

Power Antenna Pink

Speakers

Right Front (+) Light Green

Right Front (-) Dark Green

Left Front (+) Tan

Left Front (-) Gray

Right Rear (+) Dark Blue

Right Rear (-) Light Blue

Left Rear (+) Brown

Left Rear (-) Yellow