

- 6) Press the tag button the number of times corresponding to the first digit of the new security deactivation code.



Y – the first digit
of the new security
deactivation code

- 7) Check presence of red sound signals corresponding to the number of pressings.



- 8) Enter the other digits of the new security deactivation code similarly to items 6-7.



- 9) Check presence of 2 sound signals.



- 10) Enter the new code again, repeating the actions of items 6-8.



- 11) The immobilizer will confirm the successful recording of the new code by 2 sound signals. If 4 sound signals are heard, repeat the actions starting from item 1.



Device registration

Use the "Device registration" mode for registration of new components.



To prevent unauthorized adding of new components, entry in the "Device registration" mode is possible only from the "Security off" mode.

All the components should be registered in one cycle. In total, up to three devices can be registered in the system.


Entry in the "Device registration" mode

- 1) Press the clutch* (brake) handle and hold it for 5 seconds.

Hold for 5 s.



- 2) The marker lights will light up for 3 seconds. During this time, release the clutch (brake) handle.

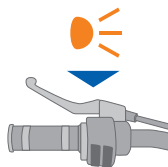

3) Press the clutch* (brake) handle 7 times.

Press shortly 7 times



4) Switch on ignition and monitor presence of 7 light and sound confirmation signals.

On



7 times



7 times

Exit from the "Device registration" mode is performed by ignition switch-off.


Tag registration

Switch over the immobilizer to the “Device registration” mode and do as follows:

1) Remove the batteries from the tag.



2) Press and hold the tag button and install the battery. The tag LED will light up red.

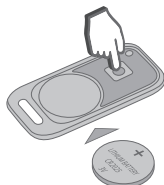

3) Release the button and check presence of a series of red flashes for 10 seconds.



4) Successful registration will be confirmed by a green flash on the tag and 2 sound signals of the siren.



5) Repeat items 1-3 for the remaining tags.



** Programmed by the installation specialist during mounting*

Smartphone registration


The smartphone is registered in the system using the StarLine mobile application.



As you exit from the mode, sound signals will follow, corresponding to the number of registered tags and smartphones.

Discharge of the tag battery

6 sound signals at the time of security deactivation mean that the tag battery is discharged. Replace the tag battery.

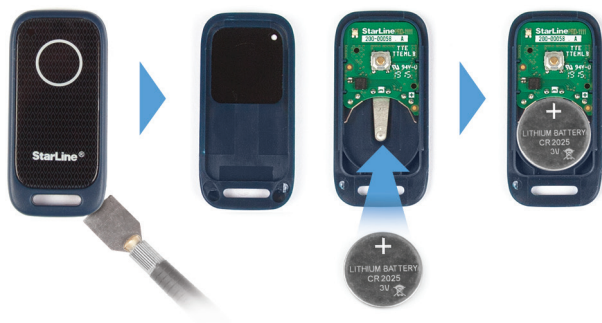

Emergency security deactivation

If the tag was lost or the tag battery is discharged, the alarm will be activated at ignition switch-on and the motorcycle engine will be blocked.

To deactivate immobilizer security, enter the code of security deactivation given on the plastic card, by means of the clutch* (brake).


Emergency security deactivation 1. Switch on the ignition. The alarm is activated and the engine is blocked. 2. Switch off the ignition. 3. Press the clutch handle the number of times equal to the first digit of the security deactivation code. 4. Switch on the ignition. 5. Repeat items 2, 4 to enter the remaining digits. 6. The correct code entry will be confirmed by 3 sound signals. System security will be deactivated.	Security deactivation code <input type="text"/> Service code <input type="text"/> <input type="text"/>
Technical support telephone, toll free in Russia 8-800-333-80-30	

Do as follows for security deactivation:

1) Switch on the ignition. The alarm is activated and the engine is blocked.



2) Switch off the ignition.



3) Press the clutch* (brake) handle the number of times corresponding to the first digit of the security deactivation code.

Press shortly
X times



X – the first digit of the security deactivation code

* Programmed by the installation specialist during mounting

4) Switch on the ignition.

On



5) Repeat items 2-4 to enter the remaining digits of the security deactivation code.



6) If the security deactivation code is entered correctly, 3 sound signals will follow and the system security will be deactivated. If the security deactivation code is entered incorrectly, the system will issue 4 light signals at ignition switch-on.



If the security deactivation code is entered incorrectly 5 times, entry of the security deactivation code will be blocked for 15 minutes. The immobilizer will notify about the exceeded number of code entry tries by 4 light signals at each ignition switch-off.

Example of entry of the security deactivation code 5342.

	On	Off	On	Off	On	Off	On	Off	On	Off	On	3 times	
Ignition													
Press the clutch* (brake) handle	Alarm	5 times	3 times	4 times	2 times								

The manufacturer reserves the right to change the design and elements without prior notification

Manufacturer:

Limited Liability Company "Scientific and Production Association "StarLine"
(LLC "SPA "StarLine")

194044, Russia, Saint Petersburg, 9 Komissara Smirnova Str. 9, letter A, office 204