

AMPIRE

CPR60 Softwareupdate

AG-CPR60-UI1-022MB-WIFI-20260208-1102

Computer

- 1) Speichern Sie die Datei „Update 20260208.zip“ auf ihren Computer.
- 2) Machen Sie einen Doppelklick auf die Datei „Update 20260208.zip“ und entpacken den Ordner „update“ auf einen leeren USB 2.0 Stick.
- 3) Machen Sie einen Rechtsklick auf das USB-Laufwerk und wählen „Auswerfen“. Anschließend ziehen Sie den USB-Stick aus dem Computer.

CPR60

- 4) Schalten Sie das Gerät ein.
- 5) Stecken Sie den vorbereiteten USB-Stick in das USB-Kabel des CPR60, das startet automatisch das Upgrade.


ACHTUNG! Der Update-Fortschritt wird nicht angezeigt und bleibt die ganze Zeit bei 0% stehen. Bitte lassen Sie sich also nicht davon beirren, wenn Sie während des Updates die folgende Anzeige sehen.



Das Update läuft trotzdem und kann bis zu 5 Minuten. Unterbrechen Sie keines Falls das Update, um eine Beschädigung des CPR60 zu vermeiden!

- 6) Nach Abschluss des Upgrades startet das Gerät automatisch neu.
- 7) Nach dem Neustart sollten Sie die Zündung ausschalten, 10 Sekunden warten und anschließend die Zündung wieder einschalten. Fertig.

Die neue Softwareversion wird wie folgt angezeigt:

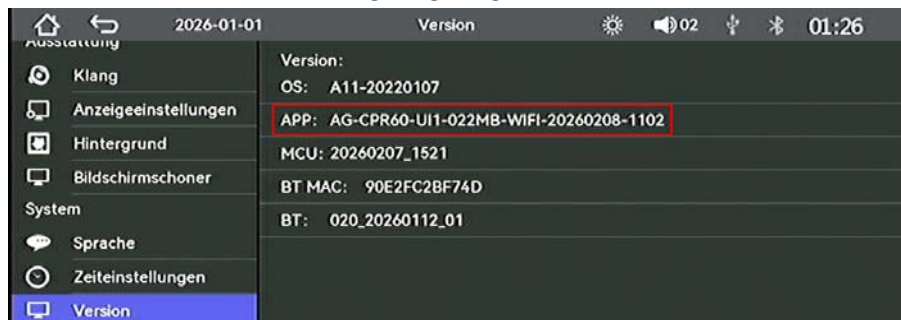

Änderungsprotokoll

Die Beleuchtungsfarben wurden angepasst.

AMPIRE

CPR60 Software Update

AG-CPR60-UI1-022MB-WIFI-20260208-1102


Computer

- 1) Save the file "Update 20260208.zip" to your computer.
- 2) Double-click the file "Update 20260208.zip" and extract the "update" folder to an empty USB 2.0 flash drive.
- 3) Right-click the USB drive and select "Eject." Then, remove the USB flash drive from your computer.

CPR60

- 4) Turn on the device.
- 5) Insert the prepared USB flash drive into the CPR60's USB cable. The upgrade will start automatically.


ATTENTION! The update progress is not displayed and remains at 0% the entire time. Therefore, please do not be alarmed if you see the following message during the update.

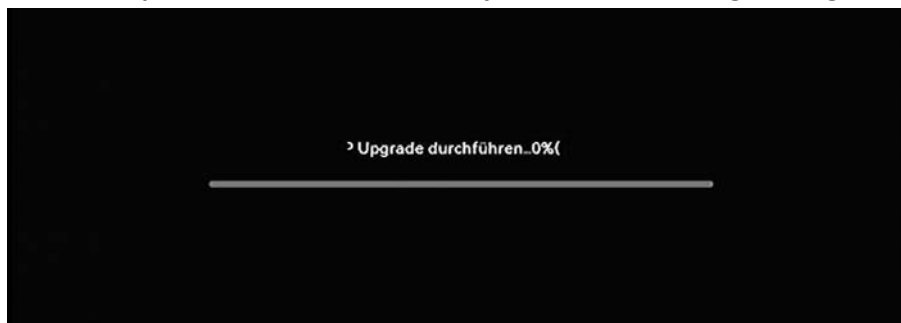

The update is still running and may take up to 5 minutes. Do not interrupt the update under any circumstances to avoid damaging your CPR60!

- 6) Once the upgrade is complete, the device will restart automatically.
- 7) After restarting, turn off the ignition, wait 10 seconds, and then turn the ignition back on. Done.

The new software version will be displayed as follows:

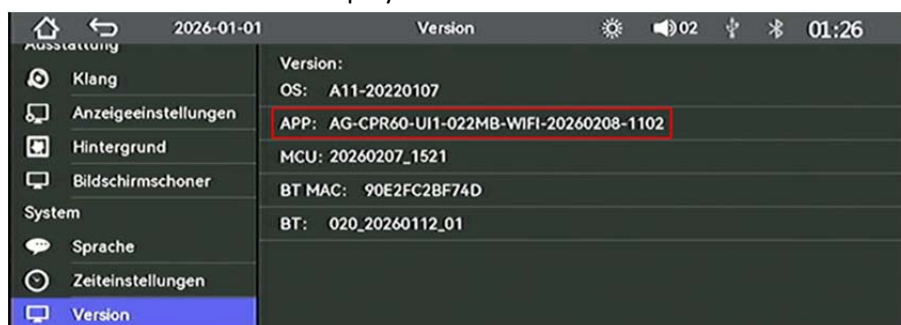

Changelog

The key illumination colors have been adjusted.