

v.LiNK Video-inserter

VL2-RLINK

for Dacia Vehicles with LG Head-Unit and Renault Vehicles with RLink (LG) and MediaNav Head-Unit

**Video-inserter with 2 video inputs + RGB + rear-view camera input
and CAN control**

Product features

- **Video-Inserter for Factory-Head-Units**
- **2 CVBS video-inputs for after-market devices (e.g. DVD-Player, DVB-T tuner, ...)**
- **Built-in audio-switch (no audio-insertion)**
- **Rear-view camera CVBS video-input**
- **Automatic switching to rear-view camera input by engagement of reverse gear**
- **Activatable parking guide lines for rear-view camera (not all vehicles)**
- **RGB-video-input for after-market navigation**
- **Video-in-motion (ONLY for connected video-sources)**
- **Compatible with Factory Rear-View Camera**
- **AV-inputs PAL/NTSC compatible**

Contents

1. Prior to installation

- 1.1. Delivery contents
- 1.2. Checking the Interface compatibility of vehicle and accessories
- 1.3. Boxes and connectors
 - 1.3.1. Video-interface
 - 1.3.2. CAN-bus box
 - 1.3.2.1. Dip-switch settings
 - 1.3.2.2. Enabling the interface's video inputs (dip 1-3)
 - 1.3.2.3. RGB-video input signal selection for after-market navigation (Dip 4)
 - 1.3.2.4. Rear-view camera setting (dip 5)
 - 1.3.2.5. Monitor Selection (dip 7-8)

2. Installation

- 2.1. Place of installation
- 2.2. Connection scheme
- 2.3. Connecting video-interface and CAN-box
- 2.4. Installation of Flex-Wires into monitor panel
 - 2.4.1. 50Pin-Version
 - 2.4.2. 60Pin-Version
- 2.5. Connection to Head-Unit
- 2.6. Connection to peripheral devices
 - 2.6.1. After-Market RGB Navigation
 - 2.6.2. Video Sources to AV1 and AV2
 - 2.6.3. Audio-Switch and Audio-Insertion
 - 2.6.4. After-market rear-view camera
 - 2.6.4.1. Case 1: CAN-box detects reverse gear
 - 2.6.4.2. Case 2: CAN-box does not detect reverse gear
 - 2.6.4.3. Video signal connection
- 2.7. Connecting video-interface and keypad
- 2.8. Picture settings and parking guide lines

3. Interface operation

- 3.1. By VOL-Button
- 3.2. By external keypad

4. Specifications

5. Frequently asked questions

6. Technical support

Legal Information

By law, watching moving pictures while driving is prohibited, the driver must not be distracted. We do not accept any liability for material damage or personal injury resulting, directly or indirectly, from installation or operation of this product. This product should only be used while standing or to display fixed menus or rear-view-camera video when the vehicle is moving, for example the MP3 menu for DVD upgrades.

Changes/updates of the vehicle's software can cause malfunctions of the interface. We offer free software-updates for our interfaces for one year after purchase. To receive a free update, the interface must be sent in at own cost. Labor cost for and other expenses involved with the software-updates will not be refunded.

1. Prior to installation

Read the manual prior to installation.

Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources.

1.1. Delivery contents



Take down the serial number of the interface and store this manual for support purposes:

1.2. Checking the compatibility of vehicle and accessories

Requirements

Vehicle Dacia Vehicles with LG Head-Unit
Renault Captur, Clio Model 2014, Traffic Model 2015

Head-unit/monitor R-Link (LG), MediaNav

Limitations


Video only The interface inserts ONLY video signals into the infotainment.
For audio insertion factory-audio-AUX-input or a FM-modulator is required.

Factory rear-view camera Automatic switch to factory rear-view camera only while reverse gear is engaged. To delay the switch reset, additional electronics is required.

1.3. Boxes and connectors


1.3.1. Video-interface

The video-interface converts the connected after-market sources video signals to an LVDS signal which is inserted into the factory monitor by various trigger options.

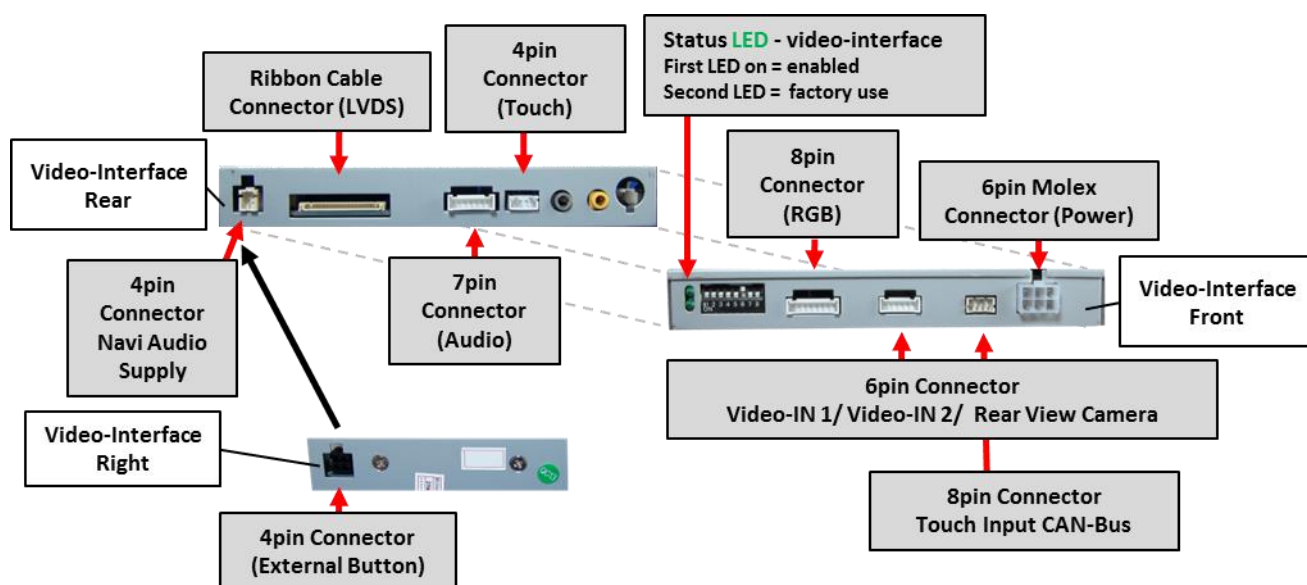


1.3.2. CAN-bus box

The CAN-bus box reads digital signals from the CAN-bus and converts them for the video-interface.

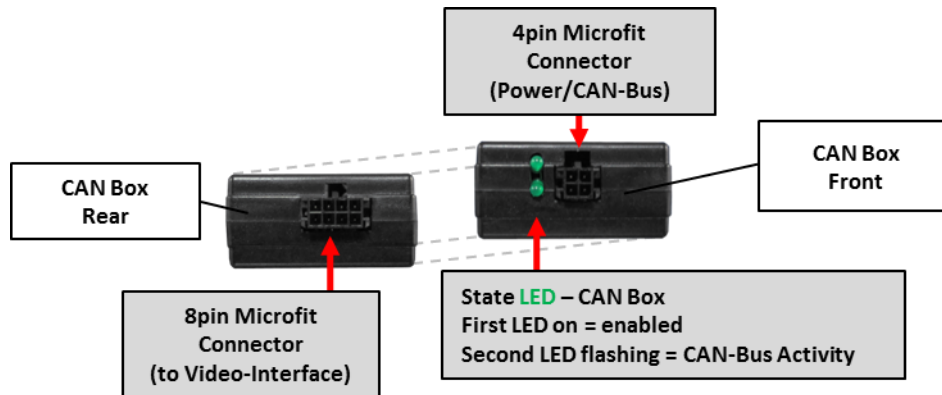

1.3.2.1. Dip-switch settings

Some settings must be selected by the dip-switches on the video-interface. Dip position down is ON and position up is OFF.

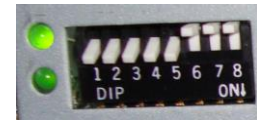

Dip	Function	ON (down)	OFF (up)
1	RGB-input	enabled	disabled
2	CVBS AV1-input	enabled	disabled
3	CVBS AV2-input	enabled	Disabled
4	RGB-input resolution	800x480	400x240 or 480x240
5	Rear-view cam type	after-market	factory or none
6	No function	-	set OFF
7	No Function	set OFF	
8			

See following chapters for detailed information.

1.3.2.2. Enabling the interface's video inputs (dip 1-3)

Only the enabled video inputs can be accessed when switching to the interface's video sources. It is recommended to enable only the required inputs for the disabled will be skipped when switching to the video-interfaces inputs.

1.3.2.3. RGB-video input signal selection for after-market navigation (Dip 4)

If an after-market RGB navigation or other RGB video source is connected, the source's RGB output signal must match the interface's RGB video input setting.

1.3.2.4. Rear-view camera setting (dip 5)

If set to OFF, the interface switches to factory LVDS picture while the reverse gear is engaged to display factory rear-view camera or factory optical park system picture.

If set to ON, the interface switches to its rear-view camera input CAM while the reverse gear is engaged.

1.3.2.5. Monitor selection (dip 7-8)

The dip-switches are out of function.

2. Installation


Switch off ignition and disconnect the vehicle's battery! The interface needs a permanent 12V source. If according to factory rules disconnecting the battery is to be avoided, it is usually sufficient to put the vehicle to "Sleep-Mode". In case it does not succeed, disconnect the battery with a resistor lead.

If power source is not taken directly from the battery, the connection has to be checked for being start-up proven and permanent.

2.1. Place of installation


The interface is installed by flex-wires to the monitor panel and at the rear of head-unit. For this purpose the housing of head-unit have to be opened.

2.2. Connection Scheme

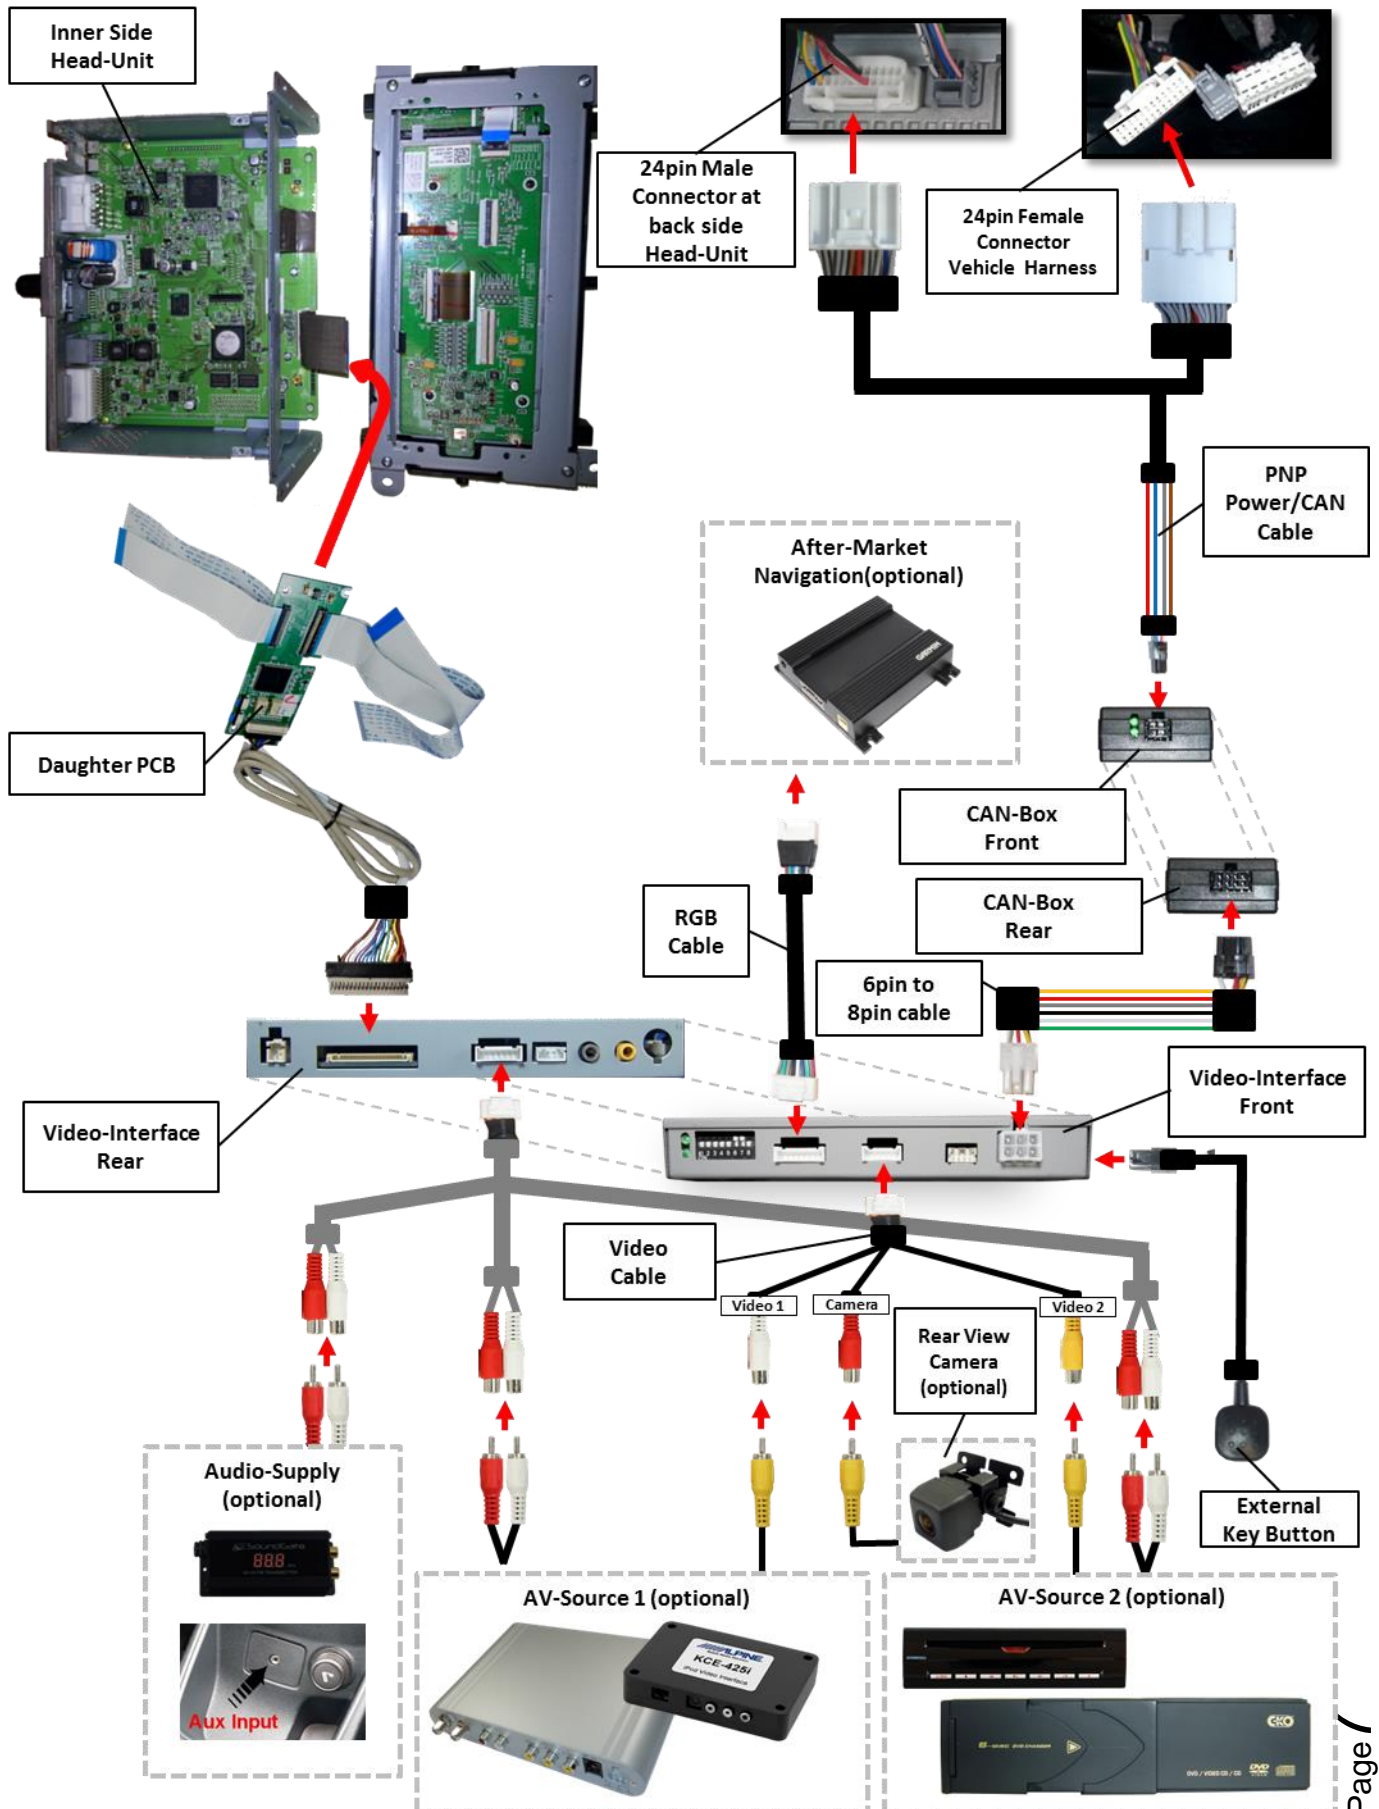

2.3. Connecting video-interface and CAN-Box

The CAN-Bus Box reads digital signals from the CAN-bus and converts them for the video-interface. ACC +12V max. 0.5A (red of 6pin) and reverse gear +12V max. 0.5A (green of 6pin) constant signal. Video-source switching (white of 6pin) as +12V impulse.

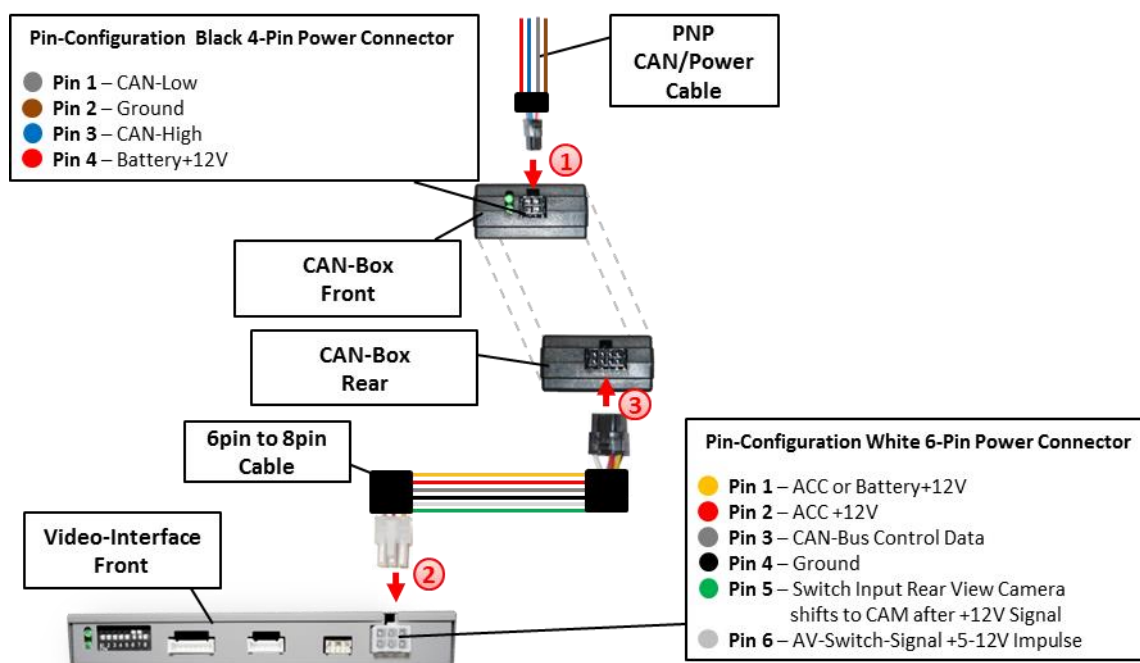

- ① Connect black female 4pin Micro-Fit connector of PNP Can/Power Cable to the 4pin Micro-Fit connector of the CAN-box.

Note: Check LEDs on CAN-box after reconnecting the battery, two must be on.

- ② Connect white female 6pin Molex connector of the 6pin to 8pin cable to the male 6pin Molex connector of the video-interface.

- ③ Connect black female 8pin Micro-Fit connector of the 6pin to 8pin cable to male 8pin Micro-Fit connector of the CAN-box.

Note: Check LEDs on video-interface after reconnecting the battery, one must be on.


Note: The CAN-box is not compatible to all vehicles. If the CAN-box does not deliver ACC to pin2 of the video-interface or blocks the vehicle CAN, it is possible to install without CAN-box. In this case see also note in chapter after-market rear-view camera, how the interface without CAN-Box is supposed to be connected.

2.4. Installation of Flex-Wires into Motor Panel

Remove factory monitor and open housing. The external daughter PCB will be installed into the optical lead between monitor panel and mainboard of head-unit.


There are two possible ways of installation:

1. By means of the two 50Pin-Flex Wires (e.g. MediaNav)
2. By means of the to 60Pin-Flex Wires (z.B. Tomtom Monitor)

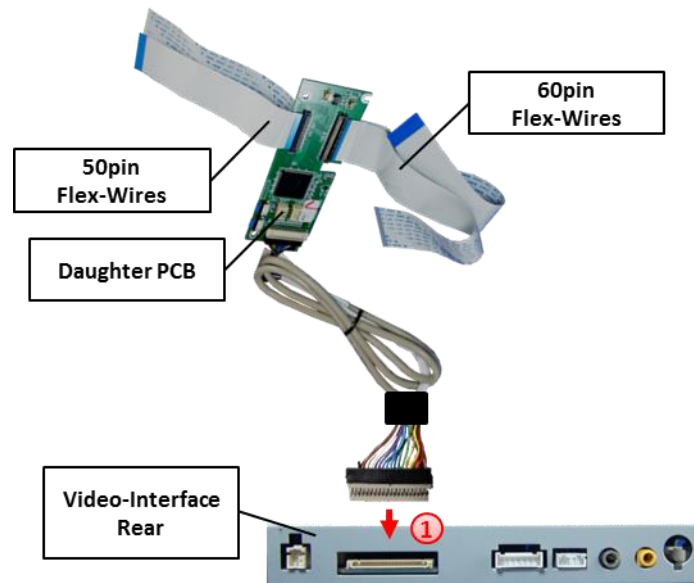

①

Connect beige-coloured 20Pin-Connector of daughter PCB to 20Pin-Connector of video interface

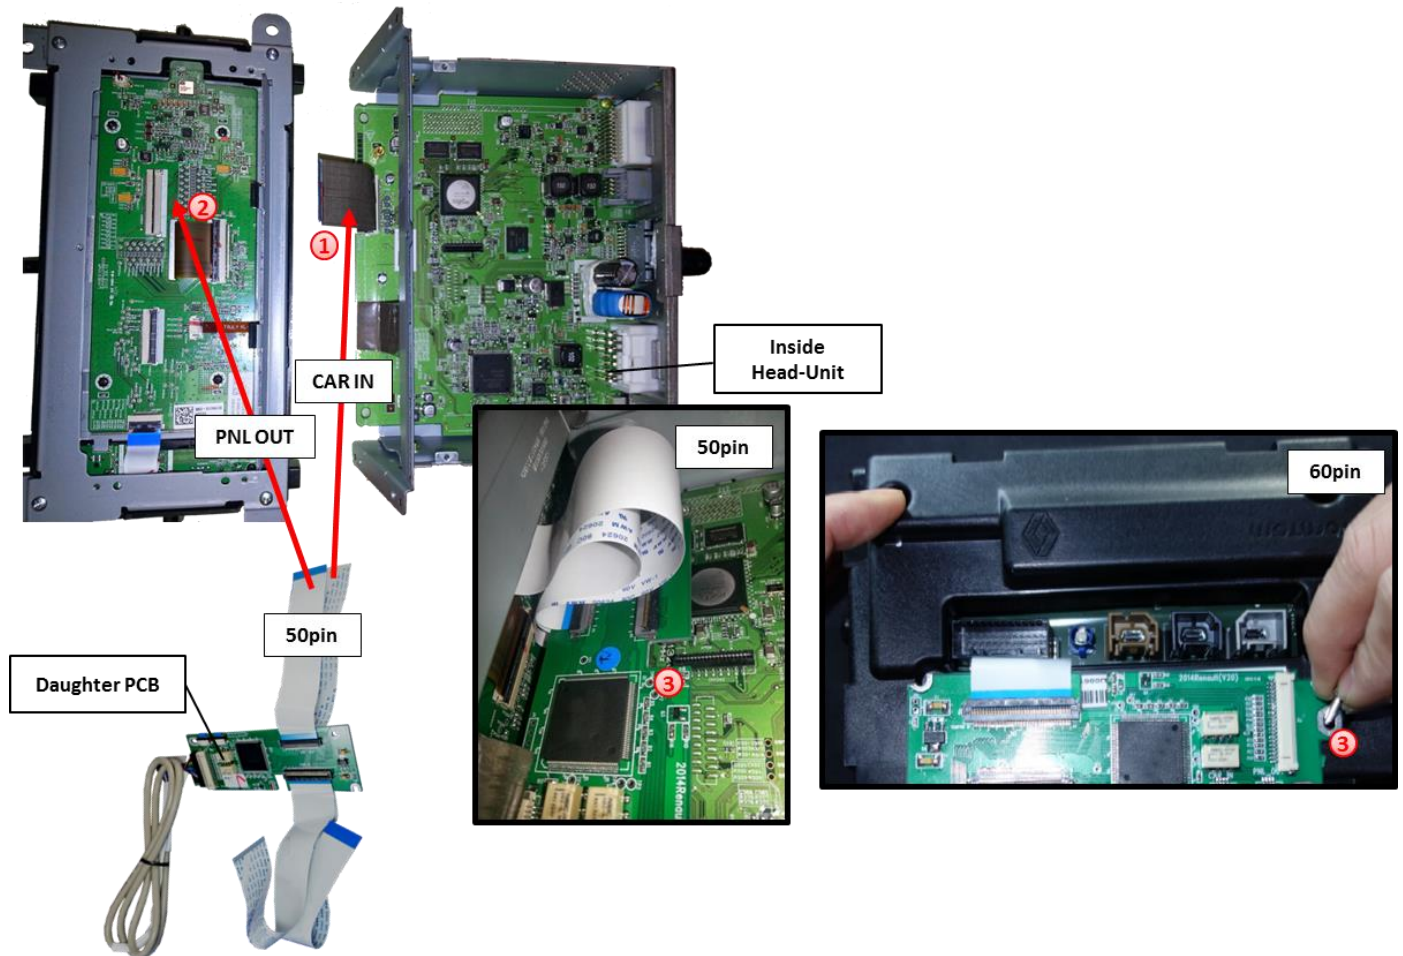

① Disconnect optical laeds housed between mainboard of Head-Unit and monitor-panel. Connect flex-wire CAR-IN of daughter PCB to flex-wire base of the mainboard's Head-Unit. For this procedure you may either use the original flex-wire or the flex-wire of daughter PCB.

② **50Pin:** Connect flex-wire PNL OUT of daughter PCB to the flex-wire base of the monitor's platinum.

60Pin: For connection of flex-wire PNL OUT to the original flex-wire of monitor platinum, please use the connector enclosed.




③ **50Pin:** Fix daughter PCB to mainboard of Head-Unit by means of spacers.

60Pin: Attach daughter PCB at the outer side of monitor. Please use enclosed long screws for easier mounting.

2.5 Connection to Head-Unit

Remove Head-Unit

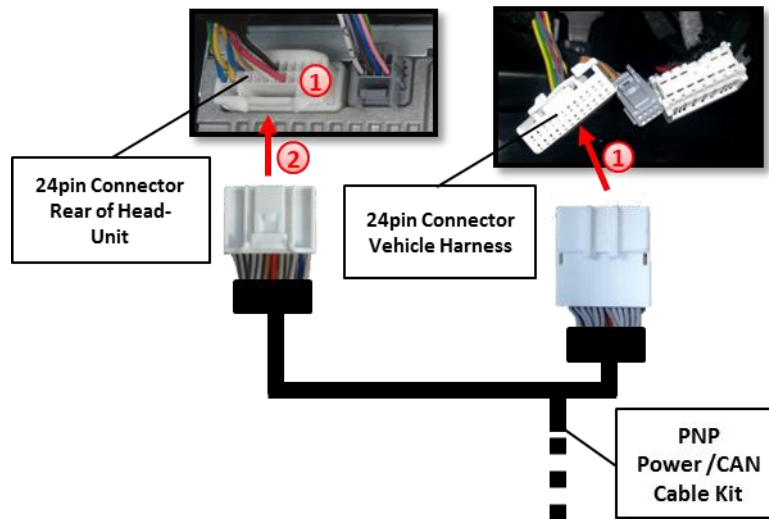


- ① Disconnect the 24pin Connector of Vehicle harness at the rear of Head-Unit and connect it to the 24pin Connector of PNP Power/CAN Cable Kit.
- ② Connect the 24pin-Connector of PNP Power/CAN Cable Kit to the 24pin-Connector on the rear of Head Unit

2.5 Connecting peripheral devices

It is possible to connect an after-market RGB navigation (or other RGB video source), 2 after-market AV-sources and an after-market rear-view camera to the video-interface.


Before final installation of the peripheral devices, we recommend a test-run of the interface. Due to changes in the production of the vehicle manufacturer is always the possibility of incompatibility.

2.6.1. After-Market RGB navigation

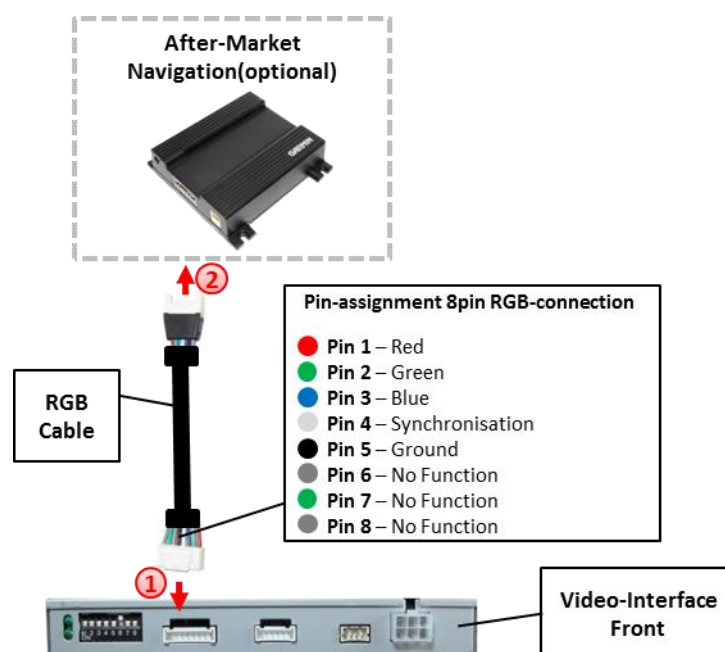

- ① Connect female 8pin connector of the RGB cable to the male 8pin connector of the video-interface. The loose grey wires have no function and have to be isolated.
- ② Connect male 6pin connector of the RGB cable to the after-Market navigation.

2.6.2. Video-sources to AV1 and AV2

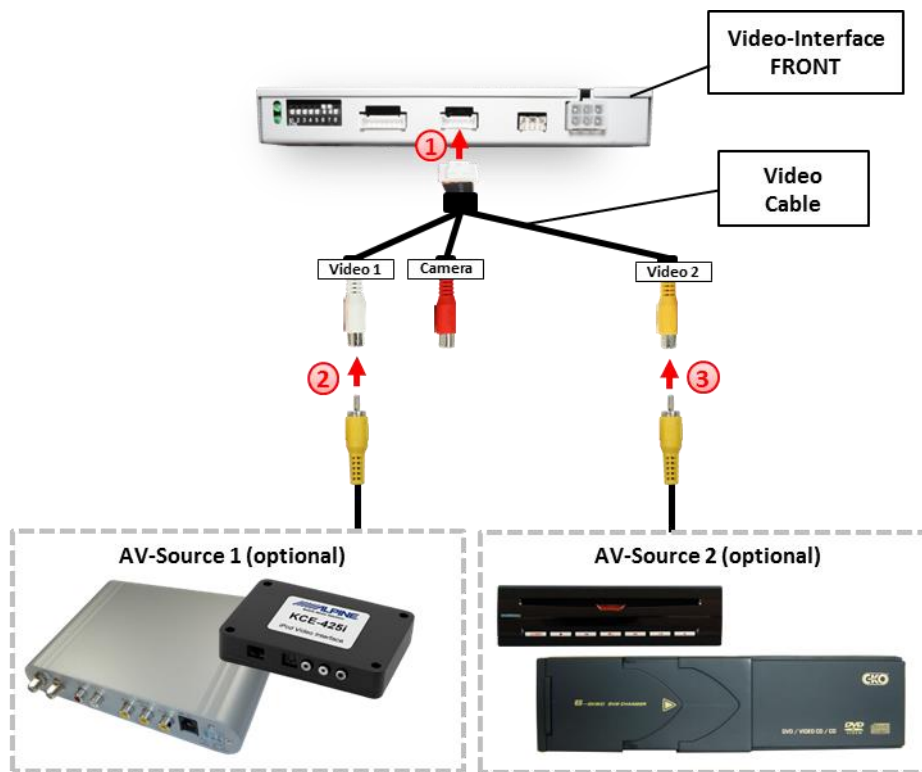


- ① Connect 6pin male connector of video cable to female 6pin connector of video-interface
- ② Connect video RCA the AV1-source to the female RCA connector AV2 of video-interface.
- ③ Connect male video RCA of AV2 source to female RCA connector AV2 of video-interface.

2.6.3. Audio-switch and audio insertion

This interface can only insert video signals into the factory infotainment and switch audio signals. If an AV-source is connected audio insertion must be done by factory audio AUX input or FM-modulator to which the interface's sound-switch output is connected. By switching video-interface from AV1 to AV2, the audio signal is switched automatically parallel to the corresponding video signal by the interface's built-in audio-switch. The inserted video-signal can be activated simultaneously to each audio-mode of the factory infotainment.

Audio pins	Definition
1/2	Audio input signal R/L of source AV2
3/4	Audio input signal R/L of source AV1
5/6	Audio output signal R/L of factory audio AUX or FM-modulator
7	Ground

Note: If only one AV-source should be connected, it is possible to connect the video output of the AV-source to the video input AV1 of the video-interface and the audio output of the AV-source directly to the point of audio-insertion (e.g. audio AUX input).

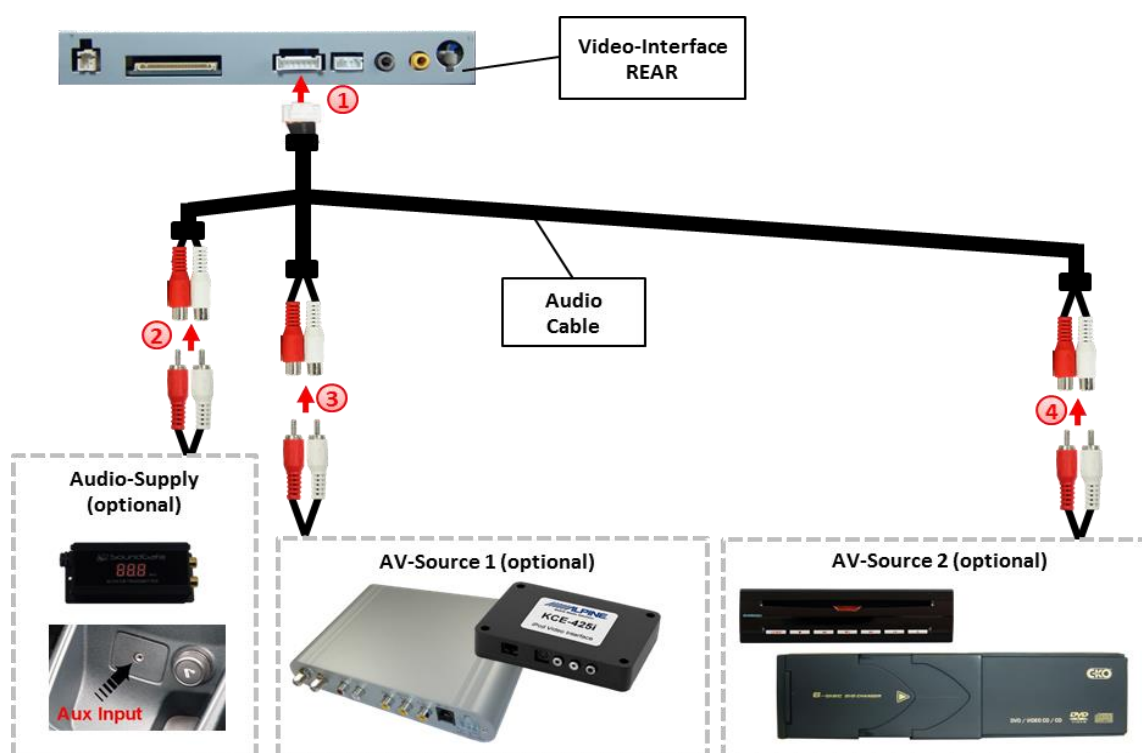

- ① Connect female 7pin connector of the audio cable to male 7pin connector of the video-interface.
- ② Connect the audio-RCA of the possibly existing factory AUX-input or the FM-modulator to the female RCA port AV-Out of the audio cable.
- ③ Connect the audio-RCA of the AV-source 1 to the female RCA port AV1 of the audio cable.
- ④ Connect the audio-RCA of the AV-source 2 to the female RCA port AV2 of the audio cable.


2.6.4. After-market rear-view camera

Some vehicles have a different reverse gear code on the CAN-bus which the included CAN-box is not compatible with. Therefore there is two different ways of installation. If the CAN-box can detect the reverse gear in the vehicle, the green wire of the 6pin to 8pin cable should carry +12V while the reverse gear is engaged.

Note: Do not forget to set dip5 of video-interface to ON before testing.

2.6.4.1. Case 1: CAN-box supports reverse gear


If the CAN-bus interface delivers +12V on the green wire of the 6pin to 8pin cable when reverse gear is engaged, the video interface will automatically be switched to the rear-view camera input CAM while reverse gear is engaged.

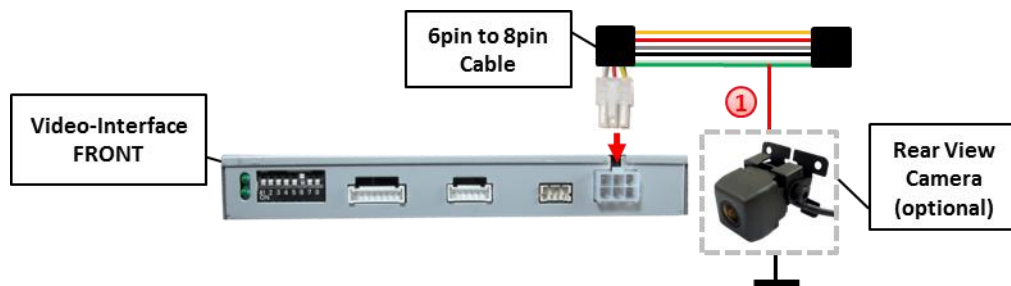

- ① Additionally, the +12V (max. 500mA) power supply for the rear-view camera can be taken from the green wire of the 6pin to 8pin cable.


2.6.4.2. Case 2: CAN-box does not support reverse gear

If the CAN-bus interface does not deliver +12V on the green wire of the 6pin to 8pin cable when reverse gear is engaged (not all vehicles are compatible) an external switching signal from the reverse gear light is required. As the reverse gear light signal contains electronic interference, a normally open relay (e.g. AC-RW-1230 with wiring AC-RS5) or filter (e.g. AC-PNF-RVC) is required. Below schema shows the use of a relay (normally open).

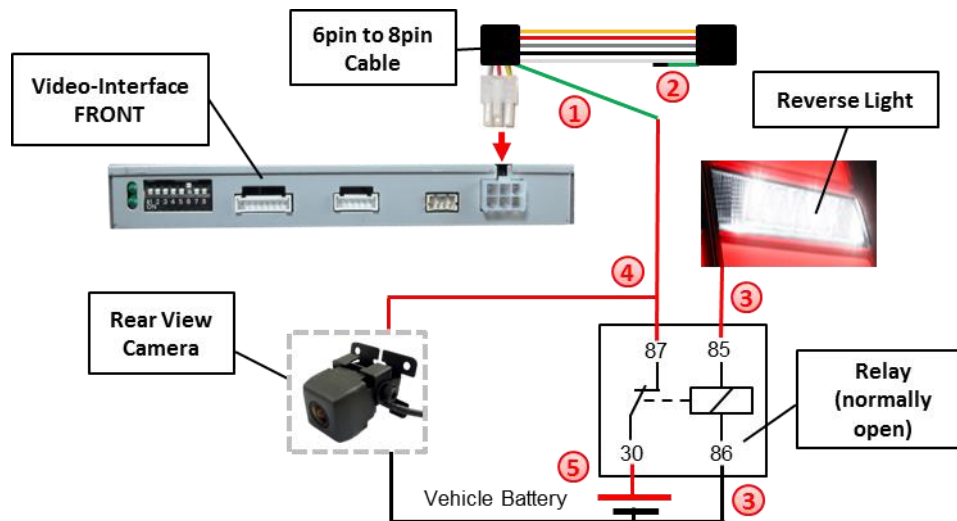

- ① Cut the green cable of the 6pin to 8pin cable close to the at the black 8pin connector.
- ② Isolate the short end of the green wire (CAN-box side).
- ③ Connect reverse gear light signal/power to coil (85) and ground to coil (86) of relais.
- ④ Connect rear-view camera power and green wire (video interface side) of 6pin to 8pin cable to output (87) of relay.
- ⑤ Connect permanent battery power to input (30) of relay.


2.6.4.3. Video signal connection

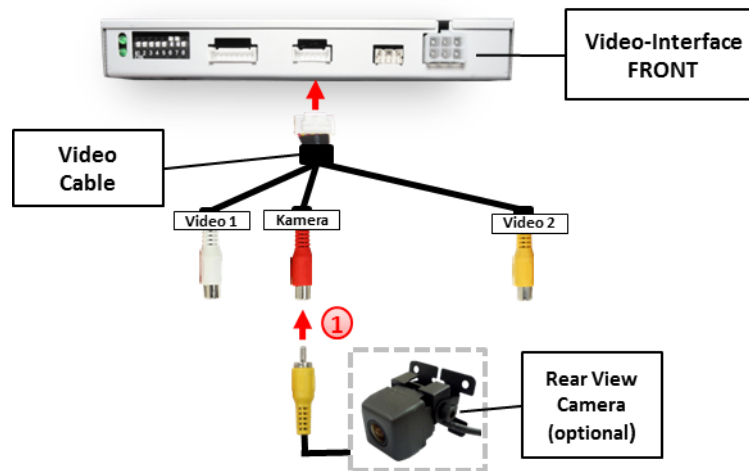

- ① Connect the video-RCA of the after-market rear-view camera to the female RCA port of the video-interface which is labeled as CAM.


Note: Picture settings for CAM input must be done in AV2.

2.7. Connecting video-interface and keypad

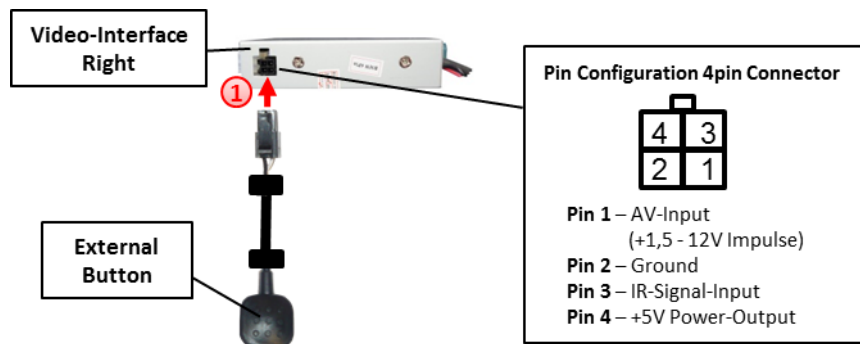

- ① Connect the female 4pin connector of the keypad to the male 4pin connector of the video-interface.

2.5. Picture settings and Guide Lines

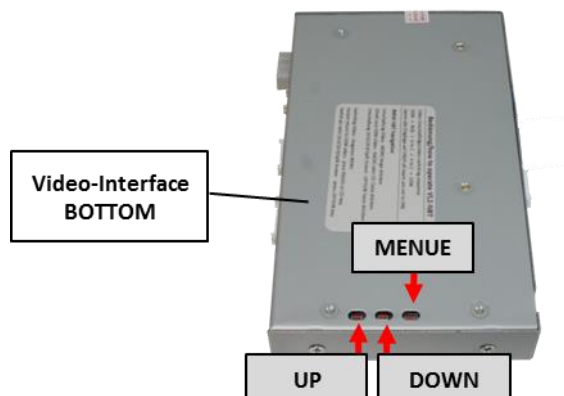


The picture settings are adjusted by the 3 buttons on the video-interface. Press the MENU button to open the OSD settings menu or to switch to the next menu item. Press UP and DOWN change the selected value. The buttons are embedded in the housing to avoid accidental changes during or after installation. Picture settings must be done separately for RGB, AV1 and AV2 while the corresponding input is selected and visible on the monitor. AV2 and CAM share the same settings which must be adjusted in AV2.

Note: The OSD menu is only shown when a working video source is connected to the selected video-input of the interface.

The following settings are available:

- Brightness
- Contrast
- Saturation
- Position H (horizontal)
- Position V (vertical)
- Guide CNTRL (ON)

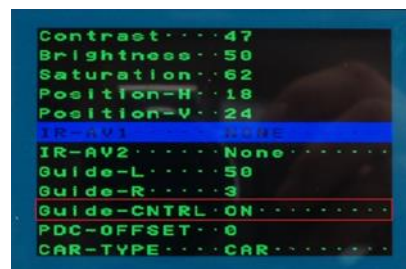

Note: In case the CAN-Box does not support the vehicle, guide lines cannot be used.

3. Interface operation

3.1. By VOL- button

Long press LIST-button (Citroen C5)/ TRAF-button (Peugeot 508) to switch the video source. Each repetition will switch to the next enabled input. If all inputs are enabled the order is:

Factory video → RGB-in → video IN1 → video IN2 → factory video →...

Inputs which are not enabled are skipped. If the audio cable is connected, when switching from video IN1 to video IN2, also the sound will be switched.


3.2. By keypad

Alternatively or additionally to the factory-infotainment-buttons the interface's keypad can be used to switch the enabled inputs.

Note: The white wire of the 6pin cable can be used with a +12V pulse to switch the video-sources alternatively.

4. Specifications

BATT/ACC range	7V ~ 25V
Stand-by power drain	<10mA
Power	0.3A @12V
Power consumption ..	4.8W
Video input	0.7V~1V
Video input formats	PAL/NTSC
RGB-video amplitude	0.7V with 75 Ohm impedance
Temperature range	-40°C to +85°C
Weight	328g
Dimensions (box only) B x H x T	152 x 22 x 92 mm

CE  12V DC

5. Frequently asked questions

For any troubles which may occur, check the following table for a solution before requesting support from your vendor.

Symptom	Reason	Possible solution
No picture/black picture (factory picture).	Not all connectors have been reconnected to factory head-unit or monitor after installation.	Connect missing connectors.
	No power on CAN-bus box (all LED CAN-bus box are off).	Check power supply of CAN-bus box. Check CAN-bus connection of CAN-bus box.
	CAN-bus box connected to CAN-bus in wrong place.	Refer to the manual where to connected to the CAN-bus. If not mentioned, try another place to connect to the CAN-bus.
	No power on video-interface (all LED video-interface are off).	Check whether CAN-bus box delivers +12V ACC on red wire output of 8pin to 6pin cable. If not cut wire and supply ACC +12V directly to video-interface.
No picture/black picture/white picture (inserted picture) but factory picture is OK.	No picture from video source.	Check on other monitor whether video source is OK.
	No video-source connected to the selected interface input.	Check settings dips 1 to 3 of video interface which inputs are activated and switch to corresponding input(s).
	LVDS cables plugged in wrong place.	Double-check whether order of LVDS cables is exactly connected according to manual. Plugging into head-unit does not work when the manual says to plug into monitor and vice versa.
Inserted picture totally wrong size or position.	Wrong monitor settings of video-interface.	Try different combinations of dips 7 and 8 of video-interface. Unplug 6pin power after each change.
Inserted picture double or 4 times on monitor.		
Inserted picture distorted, flickering or running vertically.	Video sources output set to AUTO or MULTI which causes a conflict with the interfaces auto detection.	Set video source output fixed to PAL or NTSC. It is best to set all video sources to the same standard.
	If error occurs only after source switching: Connected sources are not set to the same TV standard.	Set all video sources to the same standard.
	Some interfaces can only handle NTSC input.	Check manual whether there is a limitation to NTSC mentioned. If yes, set source fixed to NTSC output.
Inserted picture b/w.		
Inserted picture qual. bad.	Picture settings have not been adjusted.	Use the 3 buttons and the interface's OSD to adjust the picture settings for the corresponding video input.
Inserted picture size slightly wrong.		
Inserted picture position wrong.		
Camera input picture flickers.	Camera is being tested under fluorescent light which shines directly into the camera.	Test camera under natural light outside the garage.
Camera input picture is bluish.	Protection sticker not removed from camera lens.	Remove protection sticker.

Symptom	Reason	Possible solution
Camera input picture black.	Camera power taken directly from reverse gear lamp.	Use relay or electronics to "clean" reverse gear lamp power. Alternatively, if CAN-bus box is compatible with the vehicle, camera power can be taken from green wire of 6pin to 8pin cable.
Camera input picture has distortion.		
Camera input picture settings cannot be adjusted.	Camera input picture settings can only be adjusted in AV2 mode.	Set dip 3 of video-interface to ON (if not input AV2 is not already activated) and connect the camera to AV2. Switch to AV2 and adjust settings. Reconnect camera to camera input and deactivate AV2 if not used for other source.
Graphics of a car in camera input picture.	Function PDC is ON in the interface OSD.	In compatible vehicles, the graphics will display the factory PDC distance. If not working or not wanted, set interface OSD menu item UI-CNTRL to ALLOFF.
Chinese signs in camera input picture	Function RET or ALL is ON (function for Asian market) in the interface OSD.	Set interface OSD menu item UI-CNTRL to ALLOFF or PDCON.
Not possible to switch video sources by OEM button.	CAN-bus interface does not support this function for vehicle.	Use external keypad or cut white wire of 6pin to 8pin cable and apply +12V impulses for AV-switching.
Not possible to switch video sources by external keypad.	Pressed too short.	For video source switching a longer press of about 2.5 seconds is required.
	SW-version of interface does not support external keypad.	Use OEM-button or cut white wire of 6pin to 8pin cable and apply +12V impulses for AV-switching.
Interface does not switch to camera input when reverse gear is engaged.	CAN-bus interface does not support this function for the vehicles.	Cut the green wire of the 6pin to 8pin cable and apply +12V constant from reverse gear-lamp signal. Use relay to "clean" gear lamp power.
Interface switches video-sources by itself.	CAN-bus interface compatibility to vehicle is limited.	Cut the grey wire of 6pin to 8pin and isolate both ends. If problem still occurs, additionally cut the white wire of 6pin to 8pin cable and isolate both ends.

6. Technical Support

Please note that direct technical support is only available for products purchased directly from NavLinkz GmbH. For products bought from other sources, contact your vendor for technical support.

NavLinkz GmbH
distribution/tech dealer-support
Eurotec-Ring 39
D-47445 Moers

Tel +49 2841 949970
Email mail@navlinkz.de